
2019 Fish Passage Plan

Chapter 2 – Bonneville Dam

Table of Contents

1. FISH PASSAGE INFORMATION.....	8
1.1. JUVENILE FISH.....	8
1.2. ADULT FISH.....	10
2. FISH FACILITIES OPERATION.....	13
2.1. GENERAL.....	13
2.2. SPILL MANAGEMENT.....	13
2.3. OPERATING CRITERIA - JUVENILE FISH FACILITIES.....	15
2.4. OPERATING CRITERIA - ADULT FISH FACILITIES.....	21
3. FISH FACILITIES MONITORING & REPORTING.....	27
3.1. INSPECTIONS.....	27
3.2. ZEBRA MUSSEL MONITORING.....	27
3.3. REPORTING.....	27
4. FISH FACILITIES MAINTENANCE.....	28
4.1. GENERAL.....	28
4.2. MAINTENANCE - JUVENILE FISH FACILITIES.....	28
4.3. MAINTENANCE - ADULT FISH FACILITIES.....	31
5. TURBINE UNIT OPERATION & MAINTENANCE.....	35
5.1. TURBINE UNIT PRIORITY ORDER.....	35
5.2. TURBINE UNIT OPERATING RANGE.....	36
5.3. TURBINE UNIT MAINTENANCE.....	40
6. DEWATERING PLANS.....	41
6.1. GENERAL.....	41
6.2. DEWATERING – JUVENILE BYPASS SYSTEMS (JBS).....	41
6.3. DEWATERING – ADULT FISH LADDER.....	42
6.4. DEWATERING – POWERHOUSE FISH COLLECTION SYSTEM.....	42
6.5. DEWATERING – TURBINE UNITS.....	43
6.6. DEWATERING – NAVIGATION LOCK.....	43
7. FOREBAY DEBRIS REMOVAL.....	44
7.1. GENERAL.....	44
8. RESPONSE TO HAZARDOUS MATERIALS SPILLS.....	44
8.1. GENERAL.....	44

Bonneville Dam *	
River Mile (RM)	Columbia River – RM 146.1
Reservoir	Lake Bonneville
Minimum Instantaneous Flow (kcfs)	80 kcfs
Forebay Normal Operating Range (ft)	71.5 – 76.5 ft
Tailrace Elevation Rate of Change Limit	April – September: 1.5 ft/hour, 4 ft/day October – March: 3 ft/hour, 7 ft/day
Powerhouse Length (ft)	PH1: 1,027 ft PH2: 986 ft
Powerhouse Hydraulic Capacity (kcfs)	PH1: 136 kcfs PH2: 152 kcfs
Turbine Units (#)	PH1: 10 Main Units (1-10 Voith Minimum Gap Runner [MGR] Kaplan) PH2: 8 Main Units (11-18 Allis-Chalmers Kaplan) + 2 Fish Units (Sulzer/Escher-Wyss Kaplan)
Turbine Generating Capacity (MW)	Rated: 1,093 MW (PH1: 535 MW + PH2: 558 MW) Maximum: 1,238 MW (PH1: 600 MW + PH2: 638 MW)
Gatewell Orifice Diameter (in)	12.5" orifices – two per gatewell at Units 11-14 and F2; one per gatewell at Units 15-18 and F1
Spillway Length (ft)	1,450 ft
Spillway Hydraulic Capacity (kcfs)	1,600 kcfs
Spillbays (#)	18
Spillway Weirs (#)	0
Navigation Lock Length x Width (ft)	675 ft x 86 ft
Navigation Lock Max. Lift (ft)	70 ft

* More information is available on the Corps Portland District website for Bonneville Dam at: www.nwp.usace.army.mil/bonneville/

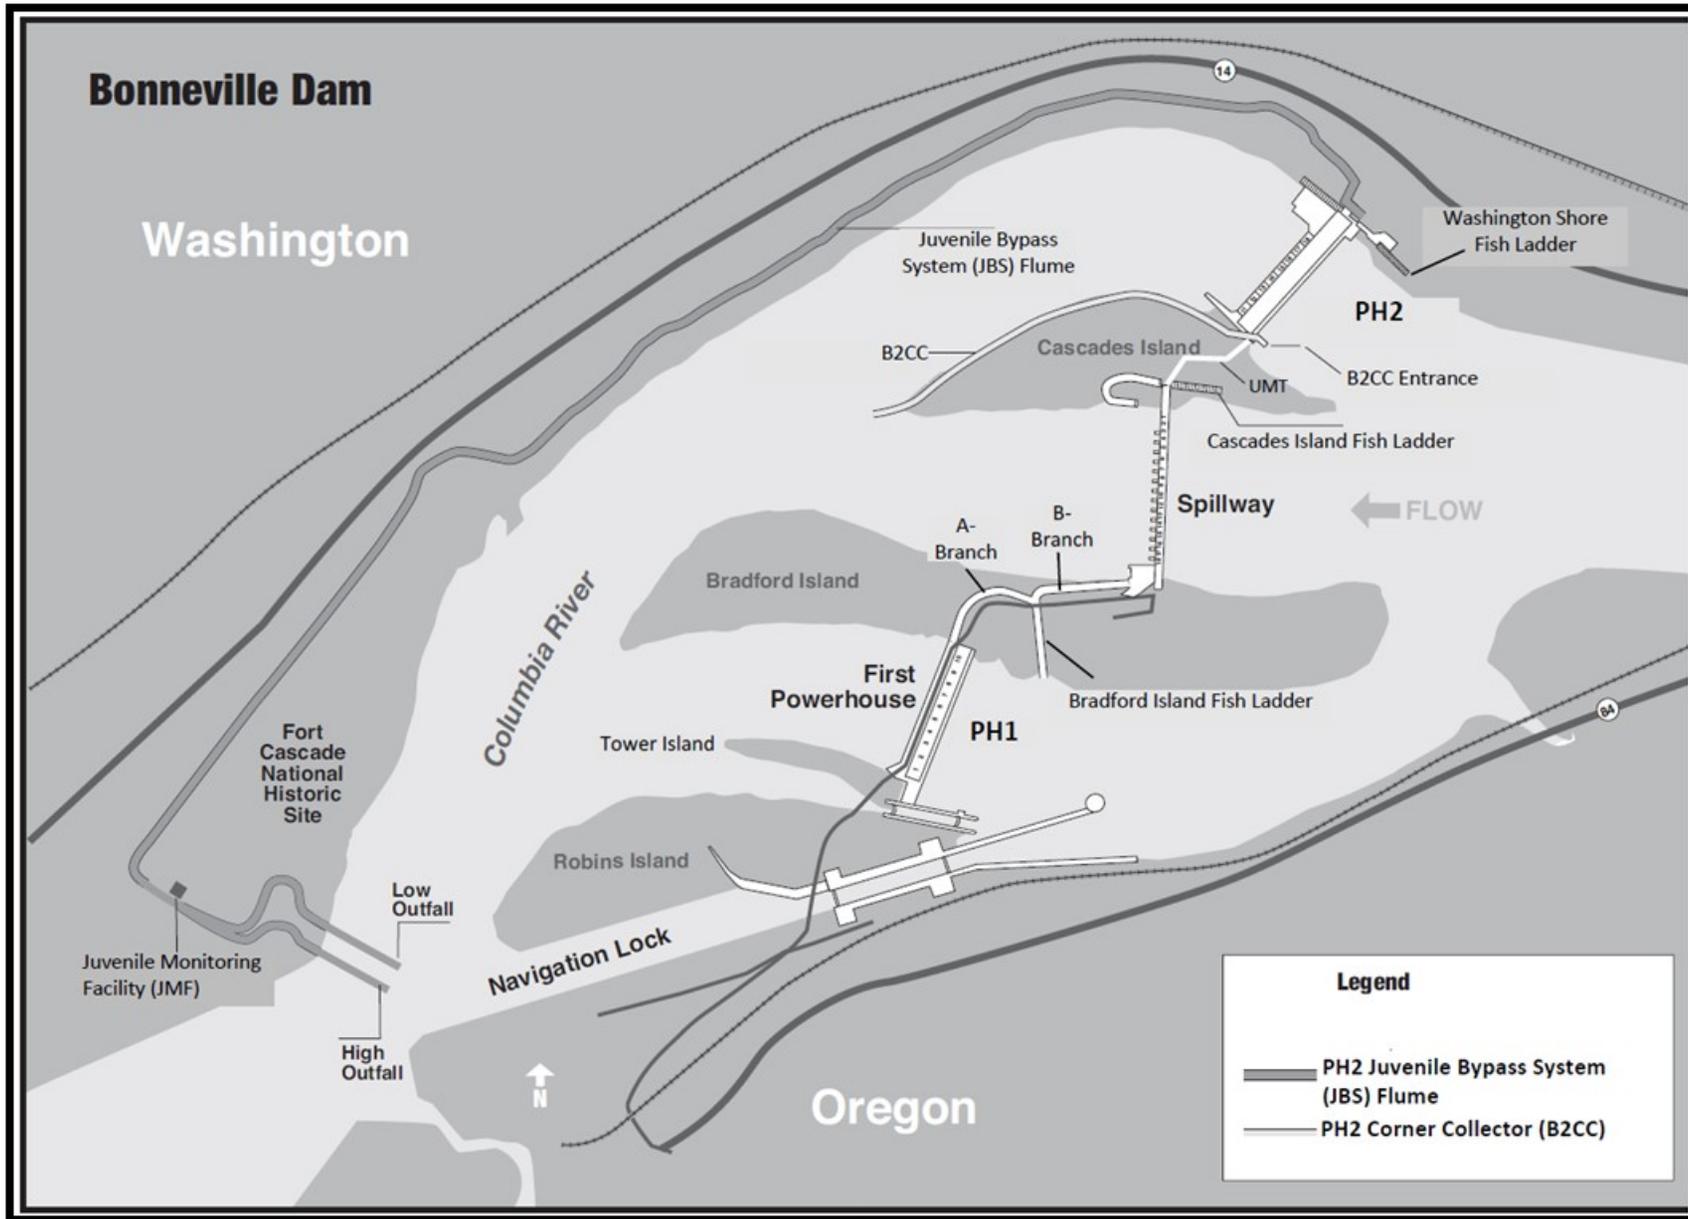


Figure BON-1. Bonneville Dam Overview, including Powerhouse 1 (PH1), Powerhouse 2 (PH2), Spillway, Adult Fish Ladders, PH2 Juvenile Bypass System (JBS), Corner Collector (B2CC), Juvenile Monitoring Facility (JMF) and JBS Outfall.

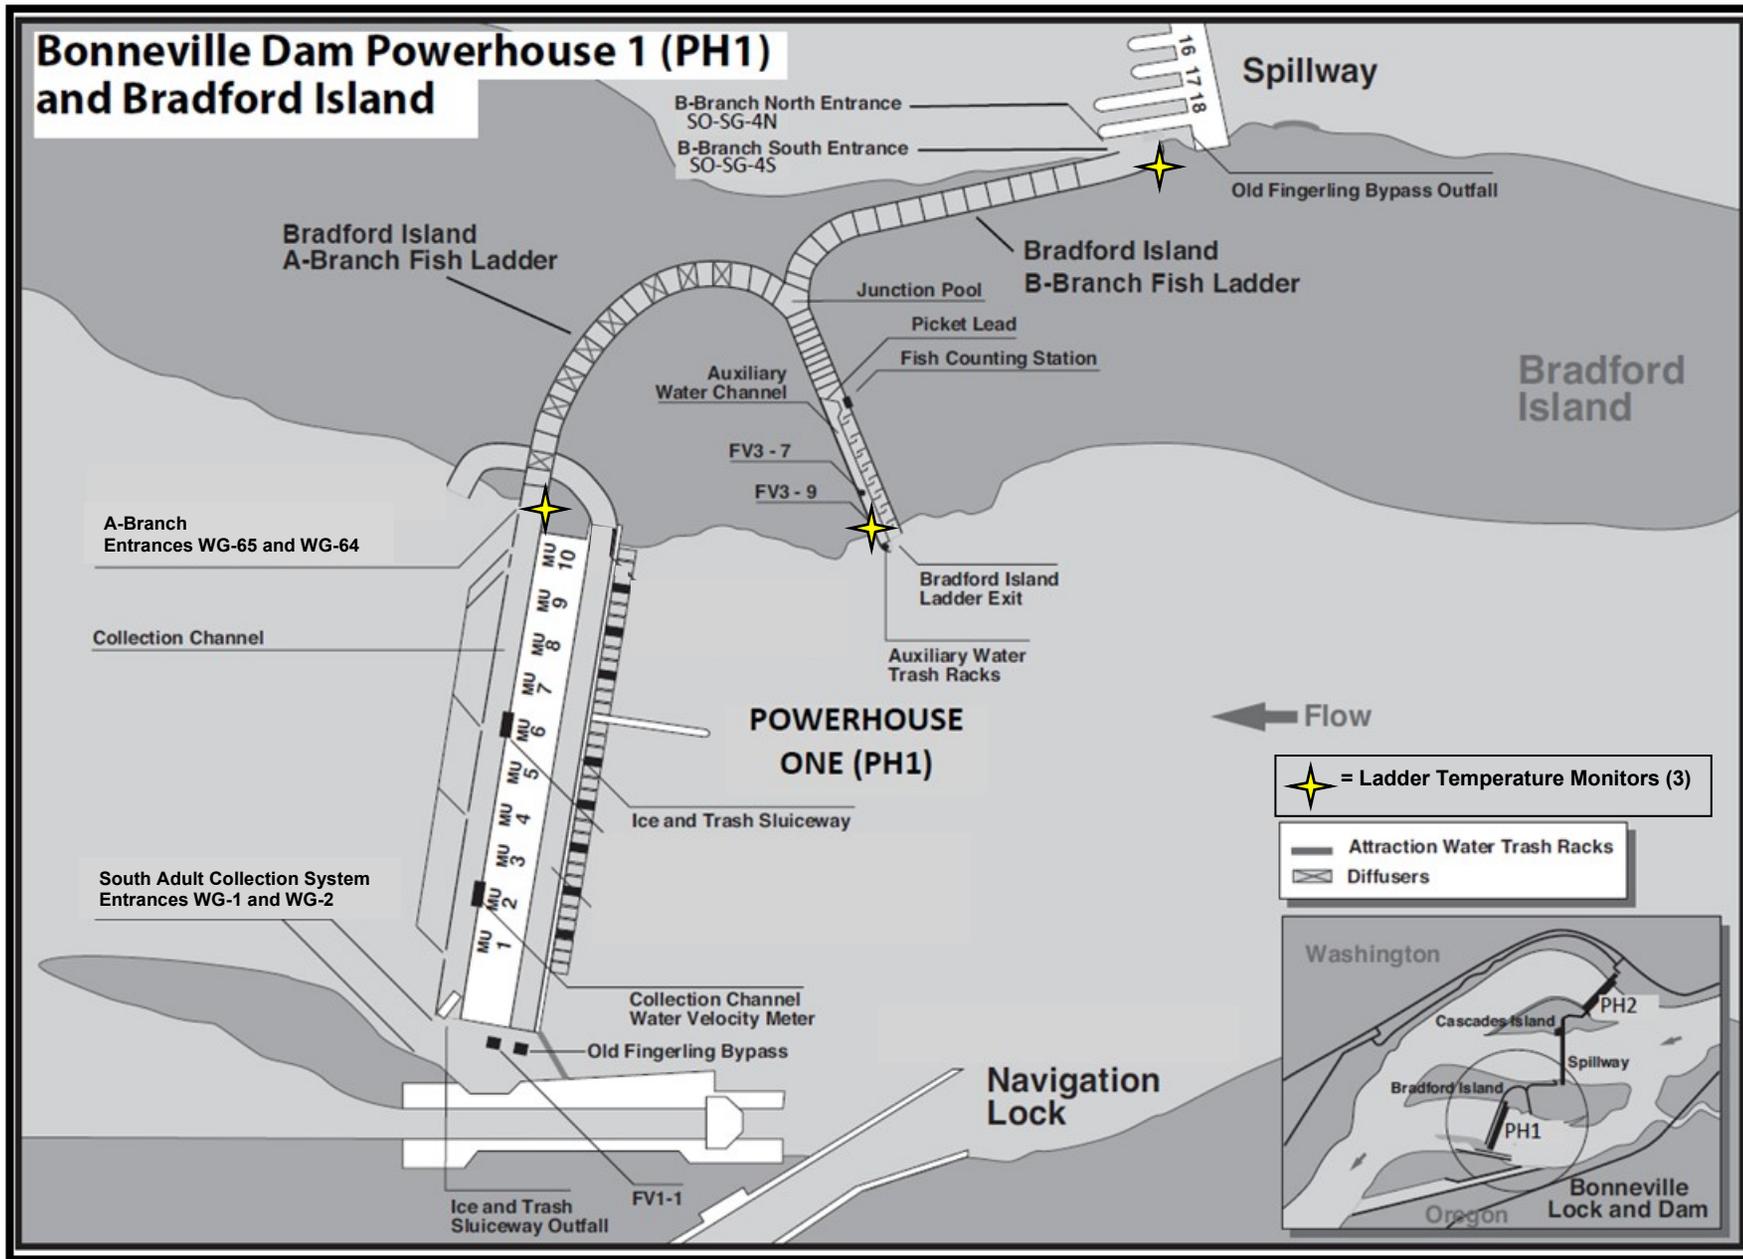


Figure BON-2. Bonneville Dam Powerhouse 1 (PH1) and Bradford Island Adult Fish Ladder A-Branch and B-Branch.

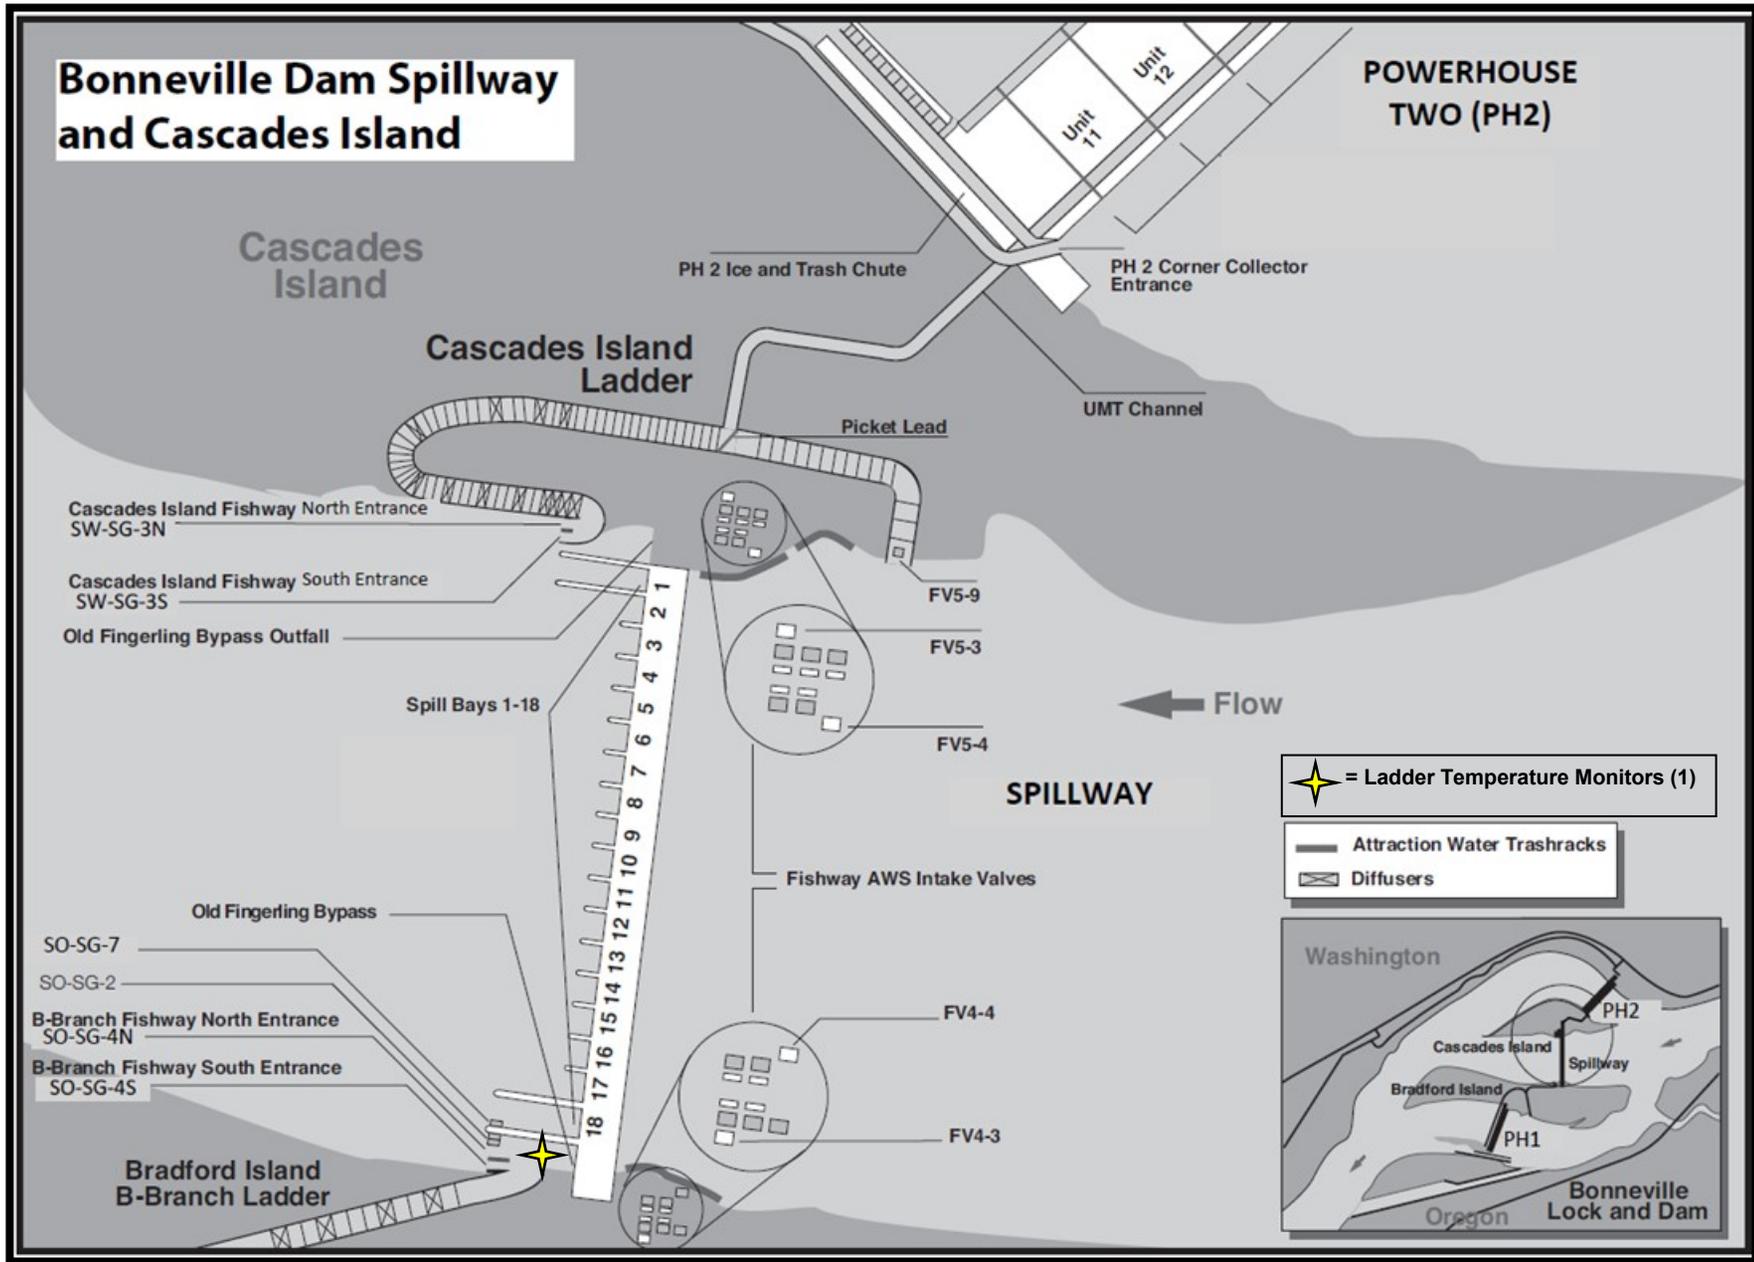


Figure BON-3. Bonneville Dam Spillway, Cascades Island Fish Ladder and Upstream Migrant Transportation (UMT) Channel.

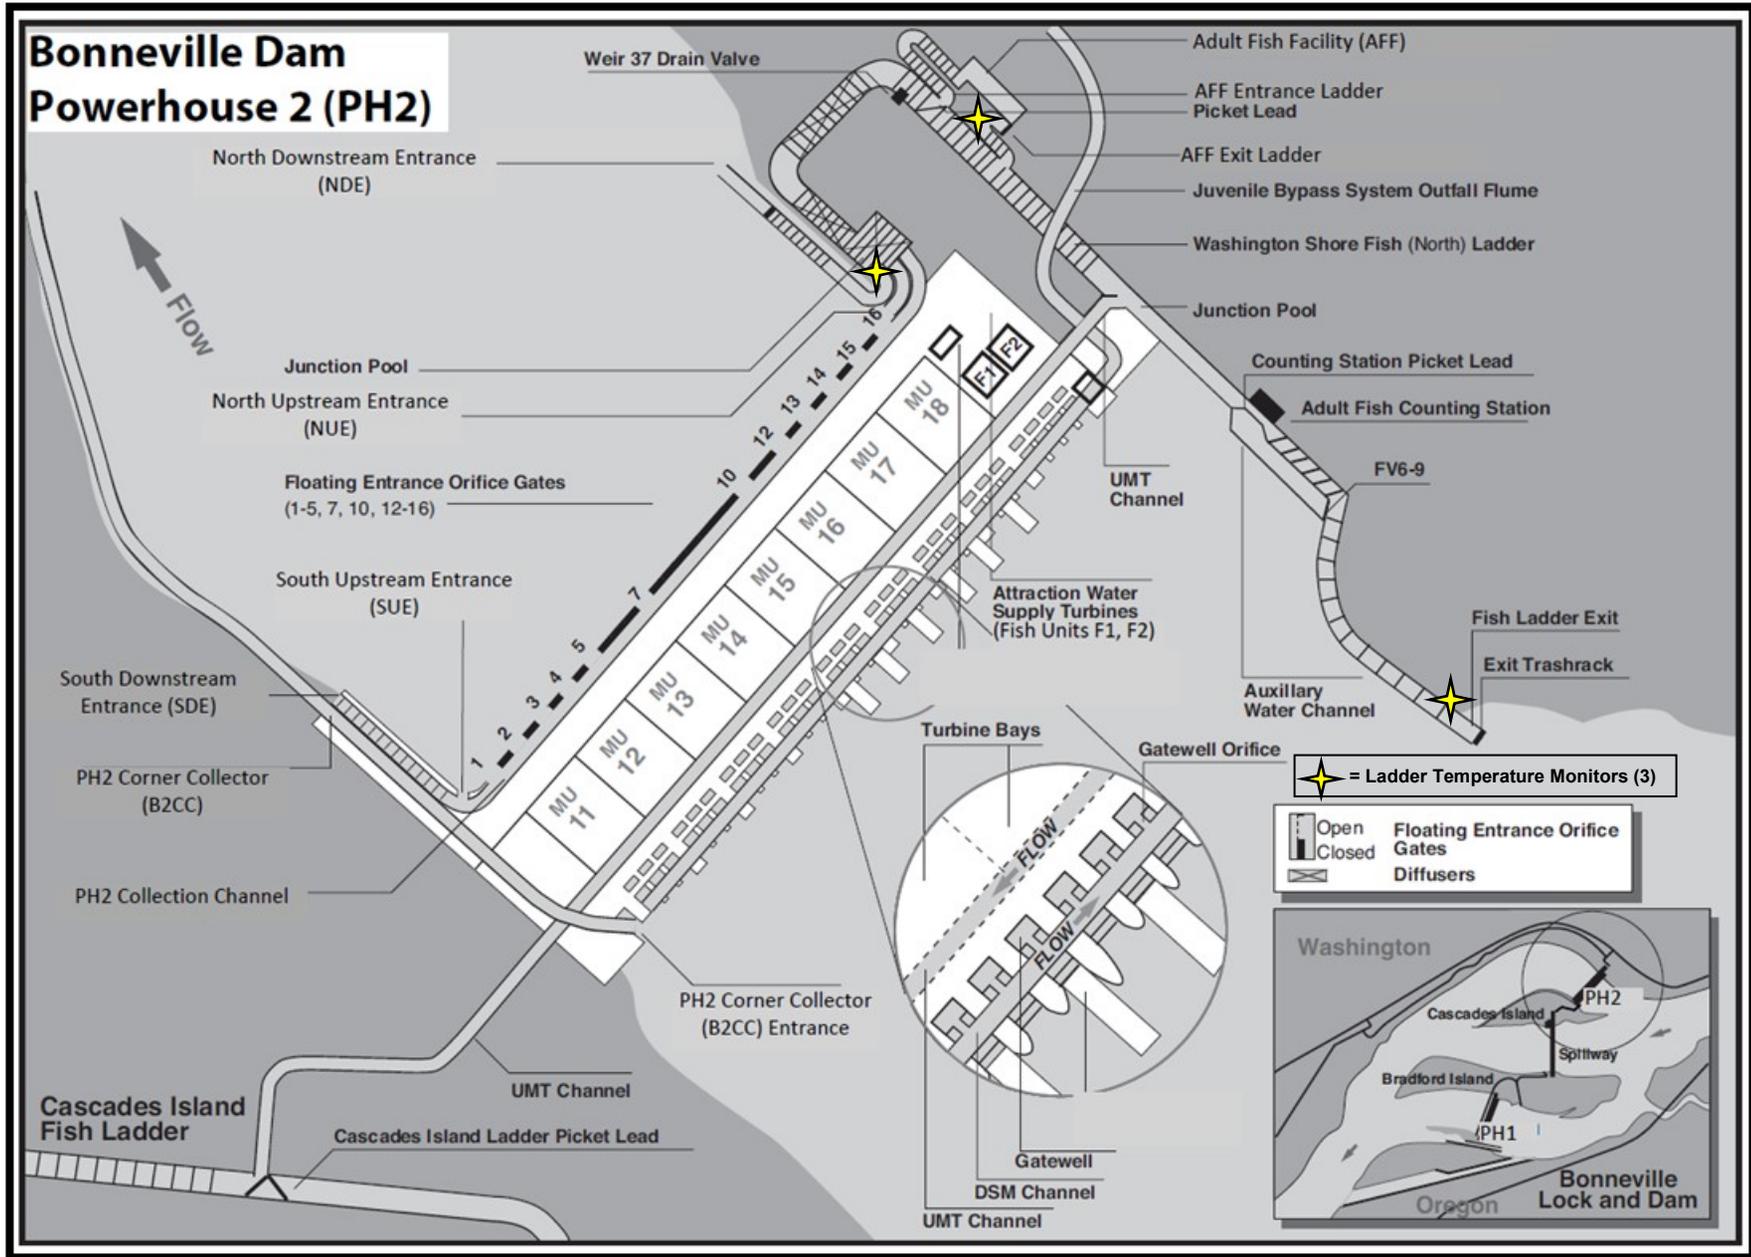


Figure BON-4. Bonneville Dam Powerhouse 2 (PH2) and Washington Shore (WS) North Fish Ladder.

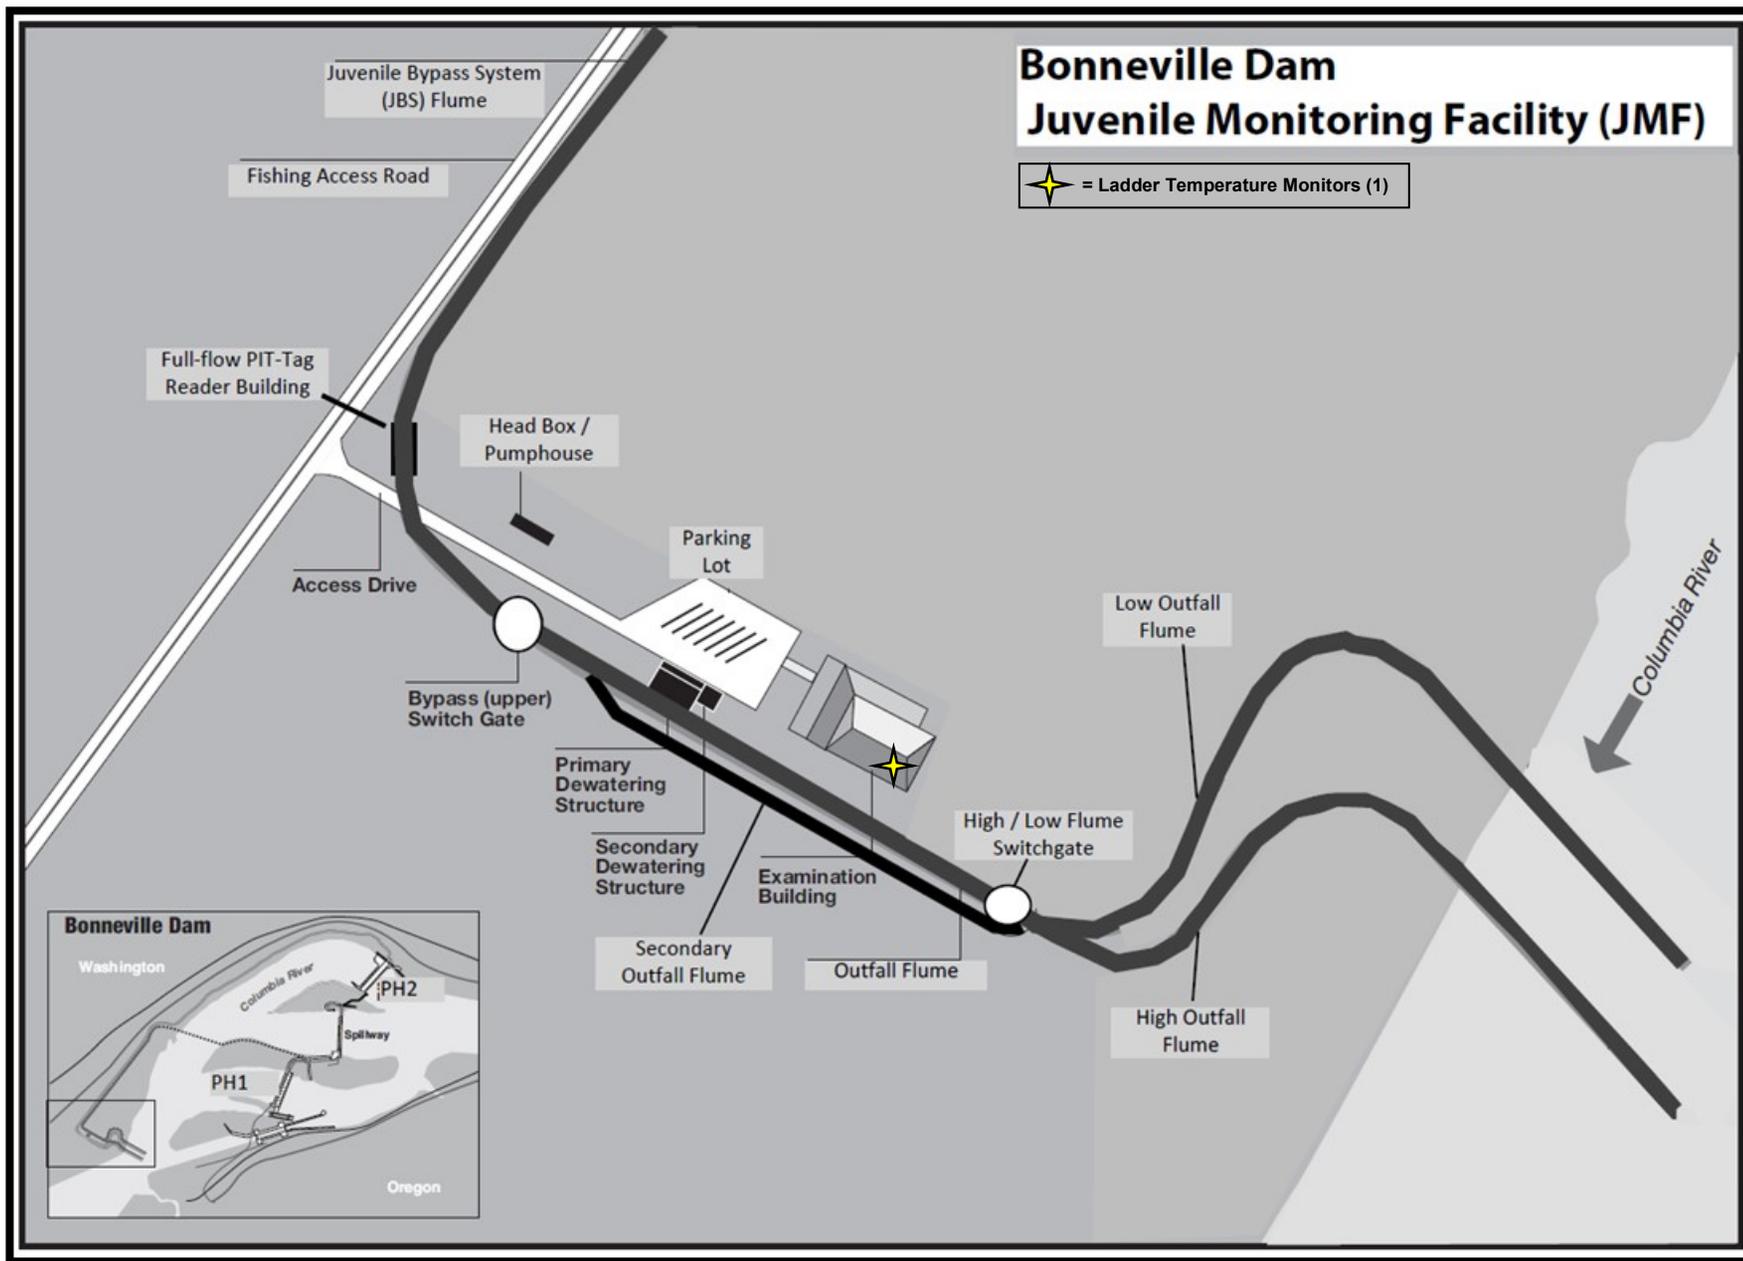


Figure BON-5. Bonneville Dam Juvenile (Smolt) Monitoring Facility (JMF) and Outfall Flumes.

Table BON-1. Bonneville Dam Schedule of Operations and Actions Defined in the 2019 Fish Passage Plan.

Task Name	Start	End	FPP Section	2019											
				Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec
FISH PASSAGE FACILITIES (ADULT & JUVENILE)	3/1/19	2/29/20	2.3 and 2.4												
Fish Passage Season	3/1/19	11/30/19													
Winter Maintenance Period	12/1/19	2/29/20													
PROJECT OPERATIONS FOR FISH PASSAGE	3/1/19	2/29/20													
Spillbays 1,18 for adult attraction	3/1/19	4/9/19	2.2.5												
B2CC Kelt trigger	3/1/19	4/10/19	2.3.2.5.s												
Pinniped hazing	3/1/19	5/31/19	Appendix L												
Operate outfall hydrocannons	3/1/19	11/1/19	2.3.2.6.e												
PH2 STS operation	3/1/19	12/15/19	2.3.2.5.a												
Avian hazing	4/1/19	7/31/19	Appendix L												
Turbine operating range for fish passage	4/1/19	10/31/19	5.2												
Spring Spill	4/10/19	6/15/19	Appendix E												
Min spill 50 kcfs for juvenile egress	4/10/19	8/31/19	2.2.1												
No Entrance SLEDs 6/1-7/20	6/1/19	7/20/19	2.4.2.11												
Reduced nighttime PH2 FU output for lamprey	6/1/19	8/31/19	2.4.2.13.c												
Ladder Temperature Monitoring	6/1/19	9/30/19	2.4.2.2.												
Summer Spill	6/16/19	8/31/19	App E (FOP)												
Day spill <=100 kcfs when PH1 operating	6/16/19	8/31/19	2.2.4												
Split flow criteria	8/15/19	10/31/19	2.1.5												
Spill Bays 1 and/or 18 for adult attraction	9/1/19	2/29/20	2.2.5												
PH1 ITS gates for kelt passage	12/1/19	2/29/20	2.4.1.12												
TDG MONITORING	3/1/19	2/29/20	2.2.2.												
TDG Monitoring - Tailrace (WRNO)	3/1/19	2/29/20													
TDG Monitoring - Tailrace (CCIW)	4/1/19	8/31/19													
TDG Monitoring - Forebay (BON)	4/1/19	8/31/19													
ADULT FISH COUNTING	3/1/19	2/29/20	Table BON-3												
Day Video 0400-2000 PST	3/1/19	3/31/19													
Day Visual 0500-2100 PDT	4/1/19	11/30/19													
Night Video 2100-0500 PDT	5/15/19	9/30/19													
Day Video 0400-2000 PST	12/1/19	2/29/20													
REPORTS	3/1/19	2/29/20	3.3.												
Weekly Reports (year-round)	3/1/19	2/29/20													
Annual Report due NLT 31-Jan	1/31/20	1/31/20													
STUDIES	3/1/19	6/30/20	Appendix A												
PH2 FGE - Unit 15 Construction & Measurements	3/1/19	6/30/20													
Lamprey Passage Evaluations	4/1/19	9/30/19													

1. FISH PASSAGE INFORMATION

Fish passage facilities at Bonneville Lock & Dam are shown in **Figures BON-1** through **BON-5** and described below. The annual schedule of project operations, maintenance, and other actions described in this Fish Passage Plan (FPP) and Appendices is included in **Table BON-1**.

1.1. Juvenile Fish

1.1.1. Juvenile Fish Passage Facilities. Juvenile fish passage routes at Bonneville Dam Powerhouse 1 (PH1) and Powerhouse 2 (PH2) include:

- i. PH1 ice and trash sluiceway (ITS);
- ii. PH1 minimum gap runner (MGR) turbines;
- iii. PH2 juvenile bypass system consists of streamlined trash racks, submersible traveling screens (STS), vertical bar screens (VBS), two 12.5" orifices per gatewell in Main Units 11-14 and Fish Unit 2, one 12.5" orifice in all other gatewells flowing into the bypass channel, an excess water elimination facility, and a 48" fish transport pipe which connects the bypass channel to the downstream Juvenile Monitoring Facility (JMF) and the tailrace via 48" and 42" transport pipes (high and low outfall, respectively). Two smaller turbines (Fish Units) supply auxiliary water to the adult fishway and have a fine trashrack with 0.75" clear opening but do not have STSs or streamlined trashracks.
- iv. The corner collector (B2CC) on the south side of the PH2 tailrace extends several hundred feet west (downstream) and empties at the tip of Cascades Island.

1.1.2. Juvenile Fish Migration. The juvenile migration season is March 1–November 30. Yearling Chinook salmon and most other juvenile salmonids migrate downstream in the spring, whereas sub-yearling Chinook salmon predominantly migrate in the summer after mid-June. Studies specific to Bonneville Dam indicate that juvenile fish survival through various passage routes differ between spring and summer. The most recent 10 years of juvenile salmonid passage timing is summarized in **Table BON-2**. Bull trout, lamprey, juvenile sturgeon, and other listed salmonids are recorded as by-catch in the Juvenile Monitoring Facility (JMF) reports. To minimize impacts on downstream migrants, maintenance of juvenile fish facilities is scheduled between December 16 and the end of February and will be coordinated to avoid or minimize potential impacts on juvenile migrants that may be present during the work.

Table BON-2. Bonneville Dam Juvenile Salmonid Passage Timing for the Most Recent 10 Years Based on Daily & Yearly Collection Data.*

Year	10%	50%	90%	# Days	10%	50%	90%	# Days
	Yearling Chinook				Subyearling Chinook* (Brights only**)			
2009	19-Apr	11-May	26-May	38	20-Jun	30-Jun	19-Jul	30
2010	27-Apr	13-May	1-Jun	36	19-Jun	5-Jul	20-Jul	32
2011	17-Apr	10-May	18-May	32	24-Jun	14-Jul	2-Aug	40
2012	24-Apr	12-May	23-May	30	23-Jun	9-Jul	26-Jul	34
2013	28-Apr	12-May	21-May	24	29-Jun	9-Jul	16-Jul	18
2014	22-Apr	9-May	24-May	33	28-Jun	9-Jul	25-Jul	28
2015	23-Apr	8-May	22-May	30	16-Jun	4-Jul	14-Jul	29
2016	18-Apr	2-May	13-May	26	24-Jun	7-Jul	24-Jul	31
2017	16-Apr	5-May	19-May	33	20-Jun	9-Jul	21-Jul	31
2018	14-Apr	4-May	17-May	33	7-Jun	8-Jul	22-Jul	45
10-Yr MEDIAN	20-Apr	9-May	21-May	32	15-Jun*	29-Jun*	19-Jul*	35*
10-Yr MIN	14-Apr	2-May	13-May	24	6-Jun*	22-Jun*	14-Jul*	30*
10-Yr MAX	28-Apr	13-May	1-Jun	38	21-Jun*	9-Jul*	15-Aug*	70*
	Unclipped Steelhead				Clipped Steelhead			
2009	30-Apr	13-May	29-May	30	4-May	13-May	26-May	23
2010	1-May	14-May	1-Jun	32	6-May	14-May	7-Jun	33
2011	23-Apr	15-May	31-May	39	24-Apr	12-May	29-May	36
2012	26-Apr	11-May	29-May	34	29-Apr	10-May	28-May	30
2013	22-Apr	12-May	3-Jun	43	28-Apr	9-May	28-May	31
2014	22-Apr	10-May	28-May	37	2-May	12-May	23-May	22
2015	30-Apr	18-May	29-May	30	4-May	11-May	25-May	22
2016	18-Apr	5-May	22-May	35	29-Apr	5-May	19-May	21
2017	24-Apr	10-May	30-May	36	22-Apr	5-May	20-May	28
2018	22-Apr	9-May	29-May	37	21-Apr	2-May	29-May	38
10-Yr MEDIAN	23-Apr	11-May	29-May	37	29-Apr	10-May	27-May	29
10-Yr MIN	18-Apr	5-May	22-May	30	21-Apr	2-May	19-May	21
10-Yr MAX	1-May	18-May	3-Jun	43	6-May	14-May	7-Jun	38
	Coho				Sockeye (Wild & Hatchery)			
2009	28-Apr	22-May	1-Jun	35	15-May	26-May	5-Jun	22
2010	24-Apr	14-May	5-Jun	43	19-May	1-Jun	10-Jun	23
2011	11-Apr	14-May	24-May	44	4-May	17-May	4-Jun	32
2012	26-Apr	18-May	7-Jun	43	9-May	14-May	23-May	15
2013	16-Apr	14-May	1-Jun	47	14-May	20-May	26-May	13
2014	25-Apr	12-May	28-May	34	15-May	22-May	30-May	16
2015	15-Apr	9-May	28-May	44	14-May	22-May	29-May	16
2016	13-Apr	2-May	19-May	37	5-May	11-May	20-May	16
2017	8-Apr	28-Apr	23-May	45	22-Apr	15-May	25-May	33
2018	16-Apr	6-May	24-May	38	7-May	14-May	23-May	16
10-Yr MEDIAN	16-Apr	13-May	28-May	43	11-May	18-May	27-May	17
10-Yr MIN	8-Apr	28-Apr	19-May	34	22-Apr	11-May	20-May	13
10-Yr MAX	28-Apr	22-May	7-Jun	47	19-May	1-Jun	10-Jun	33

* Subyearling Chinook **MEDIAN, MIN, MAX** based on 1998-2006 data. Data 2007-present not included due to potential bias from missed sample days during high water temperature sampling protocols (**Appendix K**).

** Includes upriver brights only in order to exclude influence by Spring Creek NFH Tules.

1.2. Adult Fish

1.2.1. Adult Fish Passage Facilities. Bonneville Dam adult passage facilities consist of two main fishway segments described below. Annual maintenance is scheduled during the winter maintenance period, December 1 through the end of February, to minimize impacts on upstream migrants and to minimize fallback of adult fall Chinook and steelhead.

i. Bradford Island (Figure BON-2) is formed by the PH1 collection channel and Bradford Island A-branch ladder that join the B-branch (south spillway) ladder at the Bradford Island junction pool. The PH1 ice & trash sluiceway (ITS) is also used for adult passage year-round (**section 2.4.1**). The Bradford Island fishway has a counting station and auxiliary water supplies for attraction flow.

ii. Washington Shore (Figures BON-3, BON-4) is formed by the PH2 collection channel and north and south monoliths that join the Washington Shore (North) ladder and Cascades Island (north spillway) ladder at the upstream migrant transportation (UMT) channel. Washington Shore and Cascades Island fishways have counting stations. Washington Shore also has an Adult Fish Facility (AFF). All collection systems have auxiliary water supplies for attraction flow.

1.2.1.2. Adult Fish Migration Timing & Counting. Upstream migrants are present throughout the year and adult facilities are operated year-round. Counts of adult salmon, steelhead, lamprey, and shad typically occur year-round (**Table BON-3**) and data are posted daily at: www.fpc.org/adultsalmon_home.html. Fish passage is relatively light November 1–March 31 and counting is done by video and posted online every three days, primarily to monitor ESA-listed winter steelhead. Sturgeon and bull trout are relatively infrequent and reported in *Miscellaneous Fish Counts* and the *Annual Fish Passage Report*. Yearly counts through the most recent passage year are used to determine the earliest and latest dates of peak adult passage in **Table BON-4**. Time-of-day (diel) distributions of adult salmonid activity at Bonneville Dam fishway entrances and exits are shown in **Figure BON-6**.

Table BON-3. Bonneville Dam Adult Fish Count Schedule March 2019 - February 2020.

Count Period	Counting Method and Hours*
March 1 – March 31	Video 0400–2000 hours (PST)
April 1 – November 30	Visual 0500–2100 hours (PDT) Night Video (May 15-Sep 15) 2100-0500 hours (PDT)
December 1 – end of February	Video 0400–2000 hours (PST)

*PST= Pacific Standard Time; PDT= Pacific Daylight Time (in effect during daylight saving time 3/10/19-11/3/19).

Table BON-4. Bonneville Dam Adult Count Period and Peak Passage Timing (based on yearly counts since 1938, except winter steelhead since 1999 and lamprey since 2001).

Species	Count Period	Earliest Peak	Latest Peak
Spring Chinook	Mar 15 – May 31	Apr 15	May 27
Summer Chinook	Jun 1 – Jul 31	Jun 3	Jul 31
Fall Chinook	Aug 1 – Nov 15	Aug 30	Sep 17
Sockeye	Jun 1 – Aug 15	Jun 20	Jul 13
Steelhead	Year-round	Jul 16	Sep 22
Winter Steelhead	Nov 16 – Mar 31	Mar 1	Mar 28
Coho	Jul 15 – Nov 15	Aug 29	Oct 11
Lamprey	Mar 15 – Nov 15	Jun 20	Jul 27

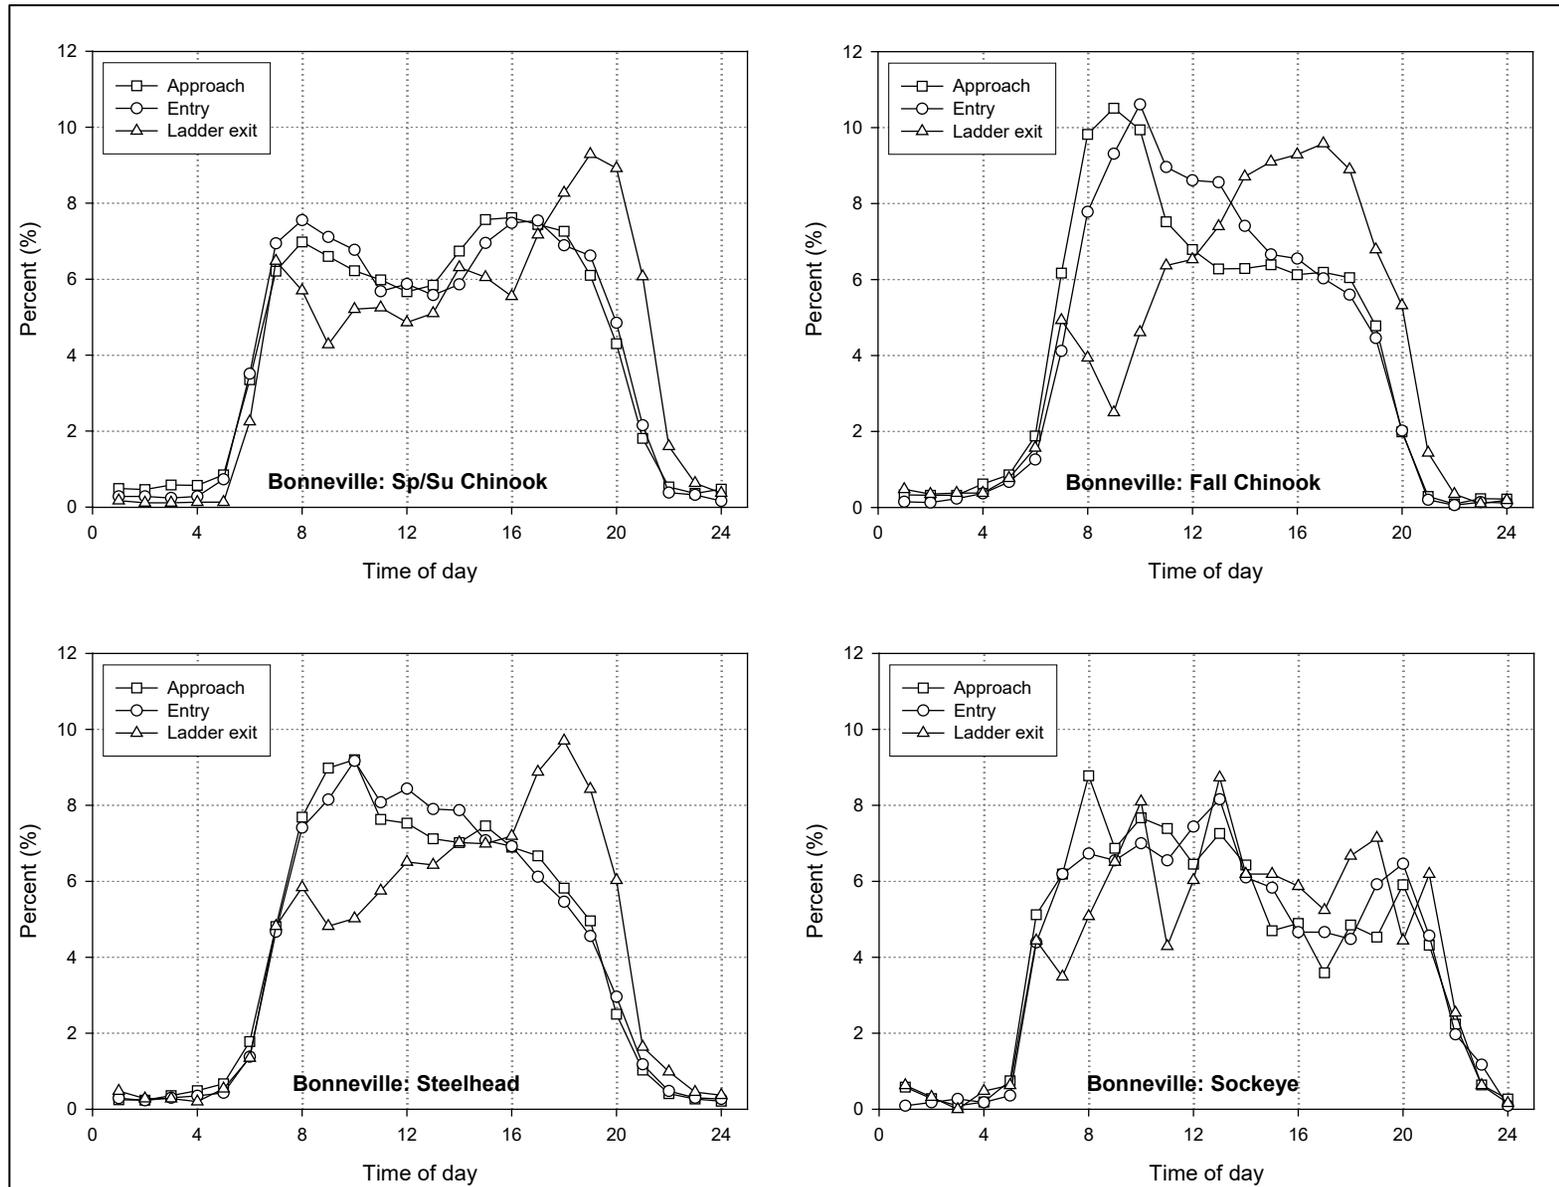


Figure BON-6. Diel Distribution of Adult Salmonids at Bonneville Dam Fishway Entrances and Exits (Keefer & Caudill 2008).

pweb.crohms.org/tmt/documents/FPOM/2010/2013 FPOM MEET/2013 JUN/

2. **FISH FACILITIES OPERATION**

2.1. **General**

2.1.1. All activities within boat restricted zones (BRZ) will be coordinated with the Project at least two weeks in advance, unless deemed an emergency (see coordination guidance in **FPP Chapter 1 - Overview**).

2.1.2. Special operations related to research planned for this year are described as currently coordinated in **Appendix A - Special Project Operations & Studies**.

2.1.3. Research, non-routine maintenance, fish-related activities, and construction will not be conducted within 100' of any fishway entrance or exit, within 50' of any other part of the adult fishway, or directly in, above, or adjacent to any fishway, unless coordinated with FPOM or FFDRWG by the Project, District Operations and/or Planning or Construction office. Alternate actions will be considered by District and Project biologists in conjunction with the Regional fish agencies on a case-by-case basis.

2.1.4. Emergency situations should be dealt with immediately by the Project in coordination with the Project and/or District biologist. If unavailable, the biologists will be informed immediately following the incident of steps taken to correct the situation. On a monthly basis, as necessary, the project biologist will provide FPOM a summary of any emergency actions undertaken.

2.1.5. Split Flows. See **section 5** for unit priority order and operating ranges during split flows.

2.1.5.1.a. Before August 31, if adult and jack salmonid counts equal or exceed 30,000 fish/day, Project Fisheries will initiate coordination with FPOM to discuss options for splitting flow between powerhouses to balance attraction flow and adult passage among the project's fishways.

2.1.5.1.b. After August 31, when adult and jack salmonid counts equal or exceed 25,000 fish/day, the Project will operate two or more priority turbines at PH1 in an attempt to balance adult passage between both powerhouses (assuming no PH1 units are already operating). While PH2 is still priority, Project Fisheries, at their discretion, may shift additional unit flow up to half the combined powerhouse flow, to PH1 as necessary to alleviate adult fishway crowding. This operation will continue until adult and jack salmonid counts fall below 20,000 fish/day.

2.2. **Spill Management**

2.2.1. Spring and summer spill operations for juvenile fish passage are defined in the *Fish Operations Plan* (FOP), included in the FPP as **Appendix E**. Spill patterns are in **Table BON-15**. Spill changes will be made through regional coordination at TMT. From April 10–August 31, minimum spill is 50 kcfs to provide acceptable tailrace conditions for juvenile fish egress. However, during extreme low flow conditions, lower spill levels may be considered and coordinated through TMT. There is no minimum spill level September 1–April 9. See the FOP (**Appendix E**) for more information.

2.2.2. Excessive total dissolved gas (TDG) may harm fish and will be controlled to the extent possible, subject to river conditions. Management tools include system-wide spill distribution through the Spill Priority List issued by the Corps Northwestern Division Reservoir Control Center (RCC), night and/or day spill limits, and shaping of spill. Night spill is limited as necessary to control TDG, and adjustments may be granted on a case-by-case basis by the RCC, dependent upon TDG monitoring at stations downstream of the dam, biological monitoring, and fish movement. Monitoring of TDG at Bonneville Dam occurs during the periods defined in **Table BON-1**, pursuant to the Corps' annual *TDG Management Plan* and the current *Dissolved Gas Monitoring Plan of Action*.¹ Starting March 1, TDG at Cascades Island will be reported every 4 hours, as well as the spill rate and total project outflow.

2.2.3. Hours for "Day" and "Night" spill are defined in **Table BON-5**. The transition between Day and Night spill will normally take 15–20 minutes due to the time required to start, synchronize, and load multiple generators. The transition to Day spill should not start until after the Night period. Frequently, a change in total river flow will occur concurrently with these transitions. The transition to Night spill should begin early enough to minimize the chance of violating the established Night spill maximum for TDG.

2.2.4. From June 16 through August, when PH1 is operating, Day spill will be limited to not exceed 100 kcfs to minimize adult fallback. Normally, this will apply 1 hour before sunrise to ½ hour after sunset (**Table BON-5**). From June 16–July 15, this spill limit will apply until 1 hour after sunset to minimize impacts to adult sockeye.

2.2.5. From September 1 through April 9, during Day hours (**Table BON-5**), spill will occur from Bays 1 and 18, each open 6" (1 stop), to provide attraction flow to the Cascades Island and Bradford Island B-Branch entrances, respectively. From December 1 through the end of February, spill will only occur from the Bay(s) adjacent to an operating ladder entrance.

2.2.6. During spill that occurs September 1–April 9 (outside of fish passage spill season), the B2CC will be operated if available to provide a surface passage route.

¹ TDG Management Plan (Appendix 4 of the WMP) - pweb.crohms.org/tmt/documents/wmp/
TDG Monitoring Plan of Action - www.nwd.usace.army.mil/Missions/Water/Columbia/Water-Quality/

Table BON-5. Day/Night Spill Schedule for Bonneville Dam.

Date Range	Day Start Hour	Day End Hour	Night Start Hour ^a	Night End Hour
Jan 1 – Jan 19	0700	1730	1730	0700
Jan 20 – Feb 14	0630	1800	1800	0630
Feb 15 – Mar 1	0600	1830	1830	0600
Mar 2 – Start DST ^b	0600	1930	1930	0600
Start DST ^b – Apr 2	0700	2030	2030	0700
Apr 3 – Apr 20	0600	2130	2130	0600
Apr 21 – May 16	0600	2200	2200	0600
May 17 – May 31	0530	2230	2230	0530
Jun 1 – Jun 30	0530	2230	2230	0530
Jul 1 – Jul 31	0530	2300	2300	0530
Aug 1 – Aug 15	0600	2245	2245	0600
Aug 16 – Aug 31	0600	2130	2130	0600
Sep 1 – Sep 16	0630	2100	2100	0630
Sep 17 – Oct 4	0700	2030	2030	0700
Oct 5 – Oct 19	0730	2000	2000	0730
Oct 20 – Oct 29	0730	1930	1930	0730
Oct 30 – End DST ^b	0730	1800	1800	0730
End DST ^b – Dec 31	0630	1700	1700	0630

a. Transition to Night spill begins 15-20 minutes *before* the Night Start Hour.

b. DST = Daylight Saving Time, in effect from the second Sunday in March through the first Sunday in November.

2.3. Operating Criteria - Juvenile Fish Facilities

2.3.1. Juvenile Facilities - Winter Maintenance Period (December 1 – end of February).

2.3.1.1. Debris will be removed from the forebay, trash racks, and gatewell slots at both powerhouses as necessary to maintain these areas debris-free.

2.3.1.2. The PH1 ice & trash sluiceway (ITS) will be operated for adult passage according to criteria in **section 2.4.1.**

2.3.1.3. Avian Lines. See the *Avian Monitoring & Deterrence Action Plans* in **Appendix L.** From September through March, there will be no avian abatement measures other than avian lines. Avian lines will be repaired and/or reinstalled as soon as possible following damage or removal. New avian lines will be installed and maintained in locations determined to have significant avian predation. Avian abatement measures shall be in place by March 1 unless delayed by weather, in which case work will be completed as soon as weather permits.

2.3.1.4. Powerhouse Two (PH2).

2.3.1.4.a. STSs will remain in service through December 15 to prevent adult salmonids from falling back through turbine units, thereby shortening some aspects of the winter maintenance period by two weeks. Unscreened units will be operated on a last-on, first-off basis. Beginning December 16, all STSs may be removed.

2.3.1.4.b. VBSs will be video or manually inspected for damage, holes, debris, protrusions, and proper seating. All VBSs in operable units will be cleaned and repaired as necessary to maintain functionality.

2.3.1.4.c. Each STS will be inspected and operated on trial run (dogged off at deck level). STSs will be installed in each intake of operational units by the end of February.

2.3.1.4.d. The PH2 Downstream Migrant (DSM2) channel may be dewatered only when required for maintenance and will be minimized to the extent practicable.

2.3.1.4.e. All gatewell orifices, orifice lighting, and flushing systems will be inspected and cleaned and/or repaired as necessary so that orifices and associated systems are fully functional.

2.3.1.4.f. Dewatering screens and associated equipment will be inspected and cleaned and/or repaired as necessary.

2.3.1.4.g. The DSM channel, conduit outfall walls, and floor will be inspected and any deficiencies corrected.

2.3.1.4.h. The outfall flume pipe (from exit of DSM to outfall) and associated switch gates from the transition section leaving the powerhouse to the outfall return to the river will be visually inspected once per year for obstructions, protrusions, or structural deficiencies that may affect fish passage.

2.3.1.4.i. During spill that occurs September 1–April 9 (outside of fish passage spill season), the PH2 corner collector (B2CC) will be operated if available to provide a surface passage route.

2.3.1.5. Spillway.

2.3.1.5.a. Spill gates and control systems will be inspected and repaired where necessary. The spillway, except for coordinated exceptions, must be able to achieve FPP spill patterns on the first day of the juvenile fish passage season.

2.3.1.5.b. Per *Bonneville Operating Order 14*, each spill gate will be raised and lowered to test for operability and check calibration prior to start of spill season, usually in March.

2.3.1.5.c. Spill guidance during the winter maintenance period is defined in **section 2.2** and the FOP (**Appendix E**).

2.3.2. Juvenile Facilities - Juvenile Fish Passage Season (March 1 – November 30).

2.3.2.1. Main unit gatewell drawdown will be measured a minimum of once per week. Debris will be removed from forebay and trashracks as required to maintain less than 1.5' of total drawdown in gatewells.

2.3.2.2. A slight oily sheen is commonly found in many gatewells from sources such as lubricated lifting beams, etc. Unusual accumulations of oil (e.g., oil slick) in gate slots will be removed within 24 hours. Appropriate procedures to remove fish during this situation will be determined in coordination with FPOM. Regardless of unit operating status, oil accumulations will be dealt with promptly.

2.3.2.3. Avian Deterrence. See the *Avian Monitoring & Deterrence Action Plans* in **Appendix L**. From April through August, avian abatement measures other than avian lines will be implemented as necessary. Avian lines will be repaired and/or reinstalled as soon as possible following damage or removal. New avian lines will be installed and maintained in locations determined to have significant avian predation. From September through March, there will be no avian abatement measures other than avian lines.

2.3.2.4. PH1 ITS chain gates 1A and 1B will be set at 70' msl. If chain gates for Unit 1 are OOS, chain gates 2A and 2B will be set at 70' msl. Gates 3B, 6C, and 10B will be operated according to **Table BON-6**.

Table BON-6. Bonneville Dam Powerhouse One (PH1) Ice & Trash Sluiceway (ITS) Chain Gates 3B, 6C, and 10B Elevation (ft).

Forebay Elevation (ft)	PH1 ITS Chain Gates			Forebay Elevation (ft)	PH1 ITS Chain Gates		
	3B	6C	10B		3B	6C	10B
<72	70.00	70.00	70.00	75	71.75	72.25	73.00
72	70.00	70.00	70.00	76	73.50	73.50	74.00
73	70.00	70.25	70.75	77	75.00	75.00	75.00
74	70.75	71.50	71.75	>77	75.00	75.00	75.00

2.3.2.5. Powerhouse Two (PH2).

2.3.2.5.a. Juvenile fish protection devices (STS, etc.) will be in place prior to the juvenile fish passage season. Screens (STSs, VBSs) will remain in operation through December 15 to prevent adult salmonids from falling back through turbine units.

2.3.2.5.b. Main unit gatewell drawdown will be measured a minimum of once per week, or more often during times of overwhelming debris, per **section 2.3.2.5.p**.

2.3.2.5.c. Debris will be removed from forebay and trash racks as required to maintain gatewell drawdown at or below 1.5', or as indicated by fish condition (e.g., higher than expected descaling), or as determined by the Project Biologist. STSs in units being raked will run continuously during raking. Gatewell orifices of the unit being raked must be closed during the procedure.

2.3.2.5.d. STSs will be operated at 60° angle from vertical.

2.3.2.5.e. Turbines without a full complement of STSs will not operate except when in compliance with other coordinated fish measures.

2.3.2.5.f. Each STS watt and/or amp gauge will be monitored and recorded at least once per day. If an STS failure occurs, procedures in *Fish Facility Maintenance (section 4)* will be followed.

2.3.2.5.g. Each STS will be video or manually inspected once per month (or 720 hours run time) and each VBS a minimum of once every two months (or 1,440 hours run time). Frequency of monthly inspections may be based on individual turbine unit run time.

2.3.2.5.h. STS inspections will not be scheduled when it may cause excessive TDG due to increased forced spill.

2.3.2.5.i. VBS inspections will occur immediately prior to peaks in juvenile fish migrations, which begin about May 1, mid-July, and September 1.

2.3.2.5.j. More frequent inspections may be required by the Project Biologist or under the following conditions: deteriorating fish condition, increased debris in bypass system, and/or other indications of STS or VBS malfunctions or failure.

2.3.2.5.k. If VBSs are manually inspected, units will be shut off and gatewells dipped prior to pulling VBS. It is not necessary to dip gatewells of units that have been off for 48 hours or longer.

2.3.2.5.l. VBSs will be cleaned when drawdowns read 1.1' on any day (including weekends) and when drawdowns reach 0.9' on Thursdays.

2.3.2.5.m. If a screen has reached the cleaning threshold, all 3 screens in that unit will be cleaned.

2.3.2.5.n. Unit will be shut down if VBS drawdown equals or exceeds 1.5' in 12-hours.

2.3.2.5.o. Trashracks at Units 11 and 12 will be raked prior to March 1 and at least once/month throughout fish passage season.

2.3.2.5.p. If STS or VBS damage or plugging is detected, procedures in *Fish Facilities Maintenance (section 4)* will be followed. In the event of overwhelming debris (as defined below) follow the procedures below and monitor gatewell drawdown daily:

p.1. VBSs will be cleaned by installing the spare VBS in the back slot, pulling the main VBS up and spraying it off with a fire hose, then replace back in slot and pull spare (reverse order).

p.2. If the TIE crane is out of service, the Gantry Crane will be used to pull the main VBS and the spare VBS will not be installed in the back slot.

p.3. If the VBS drawdown criteria of <1.1' CANNOT be maintained during the day due to debris, the spare VBS will not be installed in the back slot and the gatewells will not be dipped. The Project will pull the main screen, spray it off with a fire hose and then re-install.

p.4. If the VBS drawdown criteria of <1.5' over 12 hours CANNOT be maintained due to debris even after performing the above operations, then STSs will be pulled out until the screen re-installation criteria below have been met.

p.5. Once screens have been removed, these units should operate only as necessary to maintain TDG levels below gas cap limits.

p.6. Screen Re-Installation Criteria. At the discretion of the Project Biologist and in consultation with FPOM, the Project will install STSs in the highest priority unit available. When VBS drawdown for that unit remains below 1.1' for 24 hours, the Project will re-install the remaining STSs.

2.3.2.5.q. Gatewell Orifice Systems. All gatewell orifice systems should be operational.

q.1. Orifices automatically flush 3 times/day, one orifice every 10 minutes. Orifices with less than a clear flow jet will be flushed manually during the inspection.

q.2. Orifices known to have recurring plugging or other problems will be manually flushed.

q.3. Orifice jets will be observed through the light tubes during the inspection. Light tubes and orifice tube lenses shall be replaced and kept clean as required so that visual observations of orifice jets are possible during fishway inspections.

q.4. All non-operational orifice lights will be replaced within 24 hours. Orifice lights shall remain lighted 24 hours/day. DSM gallery lights should be off except when there are personnel in the gallery.

2.3.2.5.r. Gatewell Cleaning. The project will clean gatewells before the water surface becomes 50% covered with debris. If due to the volume of debris, it is not possible to keep the gatewell surfaces 50% clear, they will be cleaned at least once daily.

r.1. Turbines with a gatewell fully covered with debris will not be operated except to be in compliance with other coordinated fish measures, and then only on a last-on/first-off basis.

r.2. Gatewell orifices will be closed during the cleaning operations. After cleaning a gatewell, inspect and, if necessary, clean the orifice in that gatewell and then check gatewell drawdown.

r.3. Gatewell cleaning will be coordinated with JMF personnel operating downstream juvenile sampling facilities.

r.4. A slight oily sheen is commonly found in many gatewells. When unusual accumulations of oil occur in gate slots, it will be removed within 24 hours. When this is not possible, the gatewell orifice will be closed and the turbine unit will be shut down until cleaning is accomplished. Appropriate procedures to remove fish during

this situation will be determined in coordination with FPOM. Regardless of unit operating status, oil accumulations will be dealt with promptly.

2.3.2.5.s. Powerhouse Two Corner Collector (B2CC).

s.1. March 1–April 10 (Kelt Trigger): B2CC will be open for downstream migrating steelhead kelts if the following criteria are achieved based on kelt counts at the JMF adult/debris separator. If 2 kelts/day are counted on 2 consecutive days, and the total cumulative count since March 1 is ≥ 20 kelts, JMF personnel will notify Project Fisheries and the Control Room to open the B2CC within 1 hour.

s.2. April 10–August 31 (Spring & Summer Spill): B2CC will be open during spring and summer spill for fish passage, as defined in the FOP (**Appendix E**). The B2CC will be opened within one hour of the start of spring spill on April 10 (unless already open for kelt, as defined above in **t.1**) and closed within one hour of the end of summer spill on August 31.

s.3. September 1–April 9: During spill that occurs outside of fish passage spill season, the B2CC will be opened if available to provide a surface passage route.

2.3.2.5.t. DSM2 Channel.

t.1. Screen Cleaners. The primary screen cleaner will be the airburst system. The system may be set to cycle every 20, 60, or 180 minutes, depending on debris loads.

i. In the event the air system is unable to maintain desired water elevation in the dewatering area, the cleaning cycle duration will be increased as necessary.

ii. If the system is still unable to accommodate debris loads, then the mechanical brush system will be activated in conjunction with the airburst system to maintain the desired water elevation. The systems will continue to work in tandem until debris loads lessen and the airburst system can maintain a correct water elevation.

iii. Once water elevations can be maintained, the mechanical system will be returned to standby and the airburst system cleaning will be the primary system.

iv. Project biologists shall have the discretion to modify the cleaning system program at any time to maintain FPP criteria.

v. Mechanical screen cleaners will be run once a week to exercise the equipment.

t.2. Operation. Maintain the channel elevation between 64.2'–64.4' as measured at the staff gauge in front of the ERG. DSM channel elevation is maintained by a combination of add-in water, 30 non-regulating orifices and 12 regulating orifices (units 11-14). The add-in water provides a fixed input of 60 cfs and the non-regulating orifices are open at all forebay elevations. If the channel elevation exceeds the range of 64.2-64.4', the regulating orifices will open one at a time from south to north (starting at Unit 11) until proper channel elevation is achieved.

2.3.2.6. Juvenile Monitoring Facility (JMF).

2.3.2.6.a. Project Biologists or JMF personnel will operate the upper switchgate as necessary for sampling requirements.

2.3.2.6.b. The lower switchgate is in automatic control. JMF personnel (PSMFC) will monitor and report any problems with the lower switchgate to Project Biologists.

2.3.2.6.c. On seasonal ascending tailwater elevations, the transition from low to high outfall should be between tailwater elevations at the upper end of 16'–18' range.

2.3.2.6.d. On seasonal descending tailwater elevations, the transition from high to low outfall should be between tailwater elevations at the lower end of 16'–18' range.

2.3.2.6.e. Operate the outfall avian hydrocannons March 1–November 1. The cannons will be operated 24 hours/day during fish passage season.

2.3.2.6.f. For detailed monitoring facility guidance, see *Protocols for Juvenile Monitoring Facility Operations at Bonneville Dam (Appendix J)*.

2.4. Operating Criteria - Adult Fish Facilities

2.4.1. Adult Facilities - Winter Maintenance (December 1 – end of February).

2.4.1.1. Adult fish passage facilities will be operated according to fish passage season standards (**section 2.4.2**). Systems may be dewatered or operated out of criteria for repair and maintenance.

2.4.1.2. Outage periods will be minimized to the extent practicable.

2.4.1.3. Only one ladder servicing the powerhouses and the associated powerhouse collection system (including auxiliary water supply system) may be out of service or out of standard operating criteria at one time, unless specifically coordinated.

2.4.1.4. One of the two ladders servicing the spillway will be in full operation at all times unless otherwise coordinated.

2.4.1.5. Spillbays 1 and/or 18 will be operated for adult attraction (**section 2.2.5**).

2.4.1.6. Fish counting station crowders will be adjusted to fully open if videotaping is temporarily discontinued due to unscheduled events or during winter maintenance (dewatering) period.

2.4.1.7. Sea Lion Exclusion Devices (SLEDs) will be installed at all adult fishway entrances and all floating orifice gates (FOGs).

2.4.1.8. All staff gauges and water level indicators will be inspected and repaired and/or cleaned where necessary.

2.4.1.9. Unless specially coordinated, all ladders will be dewatered. All dewatered sections of fish facilities will be inspected for projections, debris, or plugged orifices that could injure fish or slow their progress up the ladder. Deficiencies will be repaired.

2.4.1.10. Ladder exits will be inspected and cleared of debris.

2.4.1.11. Counting station picket leads will be reinstalled prior to watering up ladders during maintenance.

2.4.1.12. PH1 ITS. Except when closed to facilitate maintenance activities, the PH1 ITS gates 1A, 1B, 3B, 6C, and 10B should remain open from December 1 through the end of February for steelhead kelt passage. Chain gate 1A and 1B will be set at 70' msl. Gates 3B, 6C, and 10B will be operated according to **Table BON-6**.

2.4.1.12.a. From December 15 through end of February, the Project may close the ITS end gate or ITS gates for winter maintenance (including researcher equipment O&M). Closures may not exceed six hours per day unless otherwise coordinated with FPOM.

2.4.1.13. In the appropriate year (when the fishway is out of service for winter maintenance), dredge AWS intakes to maintain the following elevations:

a.1. PH2 Fish Unit intake: -22' to -24' msl;

a.2. BI exit, FV3-7, FV3-9: +63' msl.

2.4.2. Adult Fish Passage Season (March 1 – November 30).

2.4.2.1. Water depths will be measured at the Bradford Island A- and B-branch staff gauges, at the Washington Shore weirs 37 and 38, and at the UMT staff gauge in the Cascades Island fishway. Maintain water depth over fish ladder weirs at 1.0' \pm 0.1' during non-shad passage season (< 5,000 shad/day/count station) and at 1.3' \pm 0.1' during shad passage season (\geq 5,000 shad/day/count station).

2.4.2.2. Temperature Monitoring.

2.4.2.2.a. Water temperature will be measured in an adult fishway at each powerhouse. When water temperature reaches 70°F, all fish handling activities will be coordinated through FPOM prior to any action to verify protocols that will be followed. Fish handling activities in the Adult Fish Facility (AFF) will implement protocols in **Appendix G**.

2.4.2.2.b. From June 1 through September 30, water temperature will be monitored at adult fishway entrances and exits (**Figure BON-2, BON-4**).

b.1. Temperature monitors shall be placed within 10 meters of all shore-oriented entrances and exits.

b.2. If possible, the entrance monitor shall be within 1 meter above the ladder floor and at least 10 meters downstream of ladder diffusers to allow for sufficient mixing with surface water.

b.3. The exit monitor shall be within 1 meter above the ladder floor and above all diffusers to allow for sufficient mixing with surface water.

b.4. If an existing temperature monitoring location is proposed for either the exit or entrance, it shall be verified that the site accurately reflects water temperature within 10 meters of the entrance or exit.

b.5. Project Fisheries will submit temperature data to the Fish Passage Center (FPC) on a weekly basis for posting online at:
www.fpc.org/river/Q_ladderwatertempgraph.php.

2.4.2.3. Head on all entrances should be 1'–2' (1.5' preferred). Head at the NUE is calculated differently because the collection channel staff gauge is in the junction pool. A head of approximately 1'–2' at the NUE entrance is indicated by a 1.2'–2.2' (1.7' preferred) entrance head calculated using the fishway and tailwater staff gauges closest to NUE. Refer to **Table BON-12** when unable to achieve head criterion.

2.4.2.4. Water velocity shall be maintained between 1.5 feet per second (fps) and 4 fps (2 fps preferred) for the full length of the powerhouse collection channel, and the lower ends of the fish ladders that are below the tailwater. Water velocities will be measured directly, and monitored during fishway inspections to verify channels are operating between 1.5 and 4 fps.

2.4.2.5. Maximum head of 0.5' will be allowed on the PH1 attraction water intakes and trash racks at all the ladder exits, with 4" maximum head on all picket leads. Debris shall be removed when significant amounts accumulate.

2.4.2.6. Staff gauges and water level indicators will be readable at all water levels encountered during the fish passage season, including: PH1 south collection channel, PH1 north collection channel, PH1 north tailwater, PH1 south forebay, BI A- and B-branch ladders, BI weir, B-branch entrance, CI entrance, CI ladder below UMT entrance, NUE/NDE/SUE/SDE collection channel, NUE/SUE tailwater, and PH2 north forebay.

2.4.2.7. Stillwells used in lieu of staff gauges will be checked for calibration once/week.

2.4.2.8. Fish Counting. The current fish counting program is in **Table BON-3**. Count station crowders shall remain in operating position while visual counting and/or videotaping is being conducted. All equipment should be maintained and in good condition. The counting window and backboard should be cleaned as needed to maintain good visibility.

2.4.2.8.a. The crowder shall be opened to full count slot width when not counting. During counting, the crowder shall be open as far as possible to allow accurate counting and shall not be closed to less than 18". This will usually occur during high turbidity conditions to maintain count accuracy. All equipment will be maintained in good condition. The counting window and backboard will be cleaned as needed to maintain good visibility.

The crowder ranges are as follows:

- i.** Washington Shore = 22.8" – 38.4"
- ii.** Cascades Island = currently out of service (max. opening approximately 36")
- iii.** Bradford Island = 20.4" – 36.0"

2.4.2.8.b. If passage is impaired by this condition, the count slot may be widened until proper passage conditions are achieved, even though count accuracy may be compromised to some degree.

2.4.2.8.c. Project biologists, FFU, and the fish count supervisor shall coordinate to achieve optimum count slot passage and/or count accuracy conditions.

2.4.2.8.d. If counting is temporarily discontinued due to unscheduled events, the crowder shall be fully opened.

2.4.2.8.e. The crowder may remain in operating position during the counters' hourly 10-minute break period.

2.4.2.8.f. The fish passage slot lights shall remain on overnight.

2.4.2.8.g. Upstream light banks in both count stations shall remain off to facilitate fish passage through the count slot and to reduce the number of fish impacting the count window framework, unless other passage problems result or count accuracy is compromised as determined by the fish count supervisor and coordinated with FPOM.

2.4.2.8.h. Inspect and ensure that optimum passage conditions are maintained at fishway entrances, exits, and in the count slots.

2.4.2.9. When spilling exclusively for adult attraction, spillbays 1 and/or 18 shall be open 6" during day hours only if adjacent to operating fishway entrances (**section 2.2.5**).

2.4.2.10. Ladder entrances at Cascades Island are labeled "SW-SG" (Washington Sluice Gate) and entrances at Bradford Island are "SO-SG" (Oregon Sluice Gate).

2.4.2.10.a. Side entrances SW-SG-5 and SO-SG-7 shall remain closed.

2.4.2.10.b. Downstream entrances SW-SG-1 and SO-SG-2 shall operate as continuously-open, free-flowing vertical slots.

2.4.2.10.c. Downstream entrances SW-SG-3 and SO-SG-4, adjacent to shorelines, consist of pairs of sluice gates (north and south):

c.1. At Cascades Island, -3N and -3S shall be closed at all tailwater elevations.

c.2. At B-Branch, when tailwater exceeds 17', -4N and -4S shall be closed. When tailwater is between 9' and 17', sluice gate -4N shall be open. When the tailwater is below 9', both sluice gates -4N and -4S shall be open.

2.4.2.11. SLEDs. Sea Lion Exclusion Devices (SLEDs) will be at all adult fishway entrances and all floating orifice gates (FOGs). All SLEDs may be left in year-round.

2.4.2.12. Powerhouse One (PH1).

2.4.2.12.a. Weir Gates. PH1 weir gates will be operated as shown in **Table BON-10**.

i. Gate Pairing. The four weir gates will be operated in two pairs. Only one gate pair will be allowed to operate at a time. Gates 1 and 65 will operate together as the active pair for tailwater elevations greater than 23' msl, while gates 2 and 64 will operate together as the active pair for tailwater elevations less than 26' msl. For tailwater elevations between 23' and 26', the designated active pair will depend on whether the tailwater elevation has been rising or falling with a “dead band” of 1.5'.

ii. Transition Positioning. During a transition, the former active pair is closed and the new active pair is positioned according to tailwater.

2.4.2.12.b. Fish Valve FV1-1.

i. Emergency Closure. If collection channel/tailwater differential is greater than 2.5', or if pressure differential between the auxiliary water supply conduit and the collection channel becomes excessive, as determined by operators, close FV1-1.

ii. Differential. Low: collection channel/tailwater differential <1'. High: collection channel/tailwater differential >2.0'.

2.4.2.12.c. Fish Valve FV3-7. Maintain the opening concurrent with the charts for valve opening, as set by the forebay and tailwater elevations.

2.4.2.12.d. Bradford Island A-Branch. Bradford Island A-branch diffuser gates FG3-3 through FG3-9 are open according to patterns in **Table BON-7**.

2.4.2.12.e. PH1 Collection Channel Diffusers. Diffuser valves are operated according to patterns in **Table BON-11**.

2.4.2.12.f. CAC1 Discharge. Direct discharge from the PH1 air conditioning into the gateway of a running unit (8 or 9), when available.

Table BON-7. Bradford Island A-branch Fish Ladder Diffuser Operating Ranges.

Diffuser	Operating Setpoint – Tailwater Elevation (ft)	Position
FG3-3	>8.2	Open
FG3-4	>13.7	Open
FG3-5	>16.7	Open
FG3-6	>19.7	Open
FG3-7	>25.2	Open
FG3-8	>28.2	Open
FG3-9	> 31.2	Open

Table BON-8. Bradford Island B-Branch Fish Ladder Diffuser Operating Ranges.

Diffuser	Operating Range (ft)	Diffuser	Operating Range (ft)	Diffuser	Operating Range (ft)
FG3-18	>34	FG3-23	>19	FG3-28	<25
FG3-19	>31	FG3-24	>16	FG3-29	Manual open
FG3-20	>28	FG3-25	13-34	FG3-30	Manual open
FG3-21	>25	FG3-26	12-31	FG3-31	>25
FG3-22	>22	FG3-27	10.5-28	FG3-32	>26
				FG3-33	>27

Table BON-9. Cascades Island Fish Ladder Diffuser Operating Ranges.

Diffuser	Operating Range (ft)	Diffuser	Operating Range (ft)	Diffuser	Operating Range (ft)
FG6-5	>31	FG6-10	>17	FG6-15	Manual open
FG6-6	>29	FG6-11	>14	FG6-16	Manual open
FG6-7	>25	FG6-12	>11	FG6-17	Manual open
FG6-8	>23	FG6-13	>10	FG6-18	>12
FG6-9	>20	FG6-14	>9	FG6-19	>15
				FG6-20	>19

Table BON-10. Bonneville Dam Powerhouse One (PH1) Weir Gate Requirements.

Weir Gate	Submergence Requirement (ft)	Differential Requirement (ft)	Sill Elevation (ft)
1	>8	1-2	8.5
2	>8	1-2	2
64	8-8.4	1-2	2
65	8-8.4	1-2	8.5

Table BON-11. Bonneville Dam Powerhouse One (PH1) Collection Channel Diffuser Valve Operation. *Any diffusers not listed should be CLOSED.*

Valve	Setting	Valve	Setting
FG2-4	Open	FG2-20	Open
FG2-8	Open	FG2-21	Open
FG2-12	Open	FG2-22A	Open
FG2-19	Open	FG2-22B	Open

2.4.2.13. Powerhouse Two (PH2).

2.4.2.13.a. All north (NUE, NDE) and south (SUE, SDE) entrances will be operated during day spill (**Table BON-5**). Weir crests will be operated at elevation 1' (fully lowered) at tailwater elevation $\leq 14'$. At tailwater elevation $> 14'$, weir crest will be operated at $\geq 13'$ below tailwater.

2.4.2.13.b. All 12 active PH2 floating gate fishway entrances will be operated.

2.4.2.13.c. Lamprey Operations June 1–August 31: During night spill (**Table BON-5**), fish unit output will be reduced to operate all north (NUE, NDE) and south (SUE, SDE) entrances at 0.5' of entrance head. To ensure proper function of fish units, B2 fish unit

output can be further reduced or placed on standby to float debris as necessary from 2200-0400 hours.

2.4.2.13.d. Fish unit gatewell drawdown will be measured at least once per week. When head across trash racks exceeds 1.5', the trash racks will be cleaned that day (may be done by raking late in the workday). However, if head exceeds 3', or if the adult fishway head is reduced, the unit's racks will be raked immediately, even if it is early in the day.

2.4.2.13.e. Soundings will be taken annually at the PH2 Fish Unit intake and the BI exit/AWS intake to determine sediment accumulation and plan for the appropriate dredging need. Fish Unit intake dredging is a key component to maintaining a reliable AWS system and should be prioritized during winter maintenance (**section 2.4.1**).

3. FISH FACILITIES MONITORING & REPORTING

3.1. Inspections

3.1.1. The results of all inspections and the readiness of the facilities for operation will be reported to the FPOM at the meeting immediately prior to the fish passage season.

3.1.2. During fish passage season, fish passage facilities will be inspected at least three times/day, seven days/week to assure operation according to established criteria. Daily inspections will include at least one by Project Fisheries, one by Project Operators and one modified (PLC check).

3.1.3. During winter maintenance season, fish passage facilities will be inspected at least once/day, seven days/week, with at least three inspections per week performed by Project Fisheries.

3.1.4. More frequent inspections will occur as noted throughout the text.

3.1.5. Project fish biologists and biological staff will conduct at least three inspections per week.

3.2. Zebra Mussel Monitoring

3.2.1. A zebra mussel monitoring program will continue. These organisms have become a serious problem elsewhere in the country and may become introduced into the Columbia River basin. Inspections should also be made when dewatering all project facilities.

3.3. Reporting

3.3.1. Project biologists shall prepare weekly reports throughout the year summarizing project operations. The weekly reports will provide an overview of how the project and the fish passage facilities operated during the week and an evaluation of resulting fish passage conditions. The reports shall include:

- i.** Any out-of-criteria situations observed and subsequent corrective actions taken;
- ii.** Any equipment malfunctions, breakdowns, or damage along with a summary of resulting repair activities;

- iii. Adult fishway control calibrations;
- iv. STS and VBS inspections;
- v. AWS closures (i.e., cleaning times);
- vi. When trapping is occurring in the AFF;
- vii. Any unusual activities at the project that may affect fish passage.

3.3.2. Weekly Reports shall cover Sunday–Saturday and e-mailed to CENWP-OD, CENWD-PDW-R (RCC) and other interested parties as soon as possible the following week.

3.3.3. Memorandum for the Record (MFR) shall be prepared by Project biologists for any adverse or negative impact to fish or fishways. The MFR will be sent to FPOM by the next working day and added to the next FPOM agenda for review. See **FPP Chapter 1 – Overview** for the MFR template.

3.3.4. Annual Reports shall be prepared by Project biologists by January 31 summarizing the operation of the project fish passage facilities for the previous year.

3.3.4.1. The annual report will cover from the beginning of one adult fish facility winter maintenance period to the beginning of the next.

3.3.4.2. The annual report also will include a description of all actions taken to discourage avian predation at the project, with an overview of the effectiveness of the activities.

3.3.4.3. The annual report will be provided to CENWP-OD in time for distribution to FPOM members at the February meeting.

4. FISH FACILITIES MAINTENANCE

4.1. General

4.1.1. Staff gauges and other water-level sensors will be installed, cleaned, and/or repaired as required.

4.1.2. Scheduled fishway maintenance, to the extent practicable, will be conducted during periods when passage has been documented to be at its lowest during the regular scheduled workday, to minimize impacts to migrating salmonids.

4.1.3. Maintenance activities that occur during the fish passage period and that may affect fish passage will be reported in the weekly reports.

4.2. Maintenance - Juvenile Fish Facilities

4.2.1. Routine Maintenance.

4.2.1.1. Submersible Traveling Screens (STS). The STS system will receive preventive maintenance or repair at all times of the year, including the winter maintenance period. Whenever a generator malfunctions or is scheduled for maintenance, the three STSs in that

turbine may be maintained, repaired, or exchanged for other STSs needing maintenance or repair. One third of the STSs at Bonneville are scheduled for complete overhaul each year resulting in a three-year maintenance cycle unless future developments indicate that longer life expectancy is possible.

4.2.1.2. Juvenile Bypass Systems (JBS). The JBS will receive preventive maintenance throughout the year. During the juvenile fish passage season, this will normally be above-water work such as maintenance of automatic systems, air lines, electrical systems, and monitoring equipment. During the winter maintenance period, the systems may be dewatered downstream of the gatewell orifices. The systems will then be visually inspected in all accessible areas for damaged equipment and in areas that may cause problems to the juvenile fish. Any problem areas identified are to be repaired if the project is able. In extreme cases, the work will be contracted as soon as possible or repaired during the next winter maintenance period. Channel modifications and general maintenance also should be completed at this time.

4.2.1.2.a. Trash racks are to be raked just prior to the juvenile fish passage season and whenever trash accumulations are suspected because of increased head across the trash racks (>1.5') or increased juvenile fish descaling. Additional trash rack raking may be necessary when a storm brings large quantities of debris down river to the project. Gatewell orifices in the unit being raked will be closed during the procedure.

4.2.1.3. Turbines and Spillways. Maintenance and routine repair of project turbines and spillways is a regular and recurring process which requires units to be shut down for extended periods of time.

4.2.1.3.a. The maintenance schedules for turbines and spillways will reflect equal weighting given to fish, power, and water management and will be coordinated with the appropriate fish and resource agencies through FPOM.

4.2.1.3.b. Certain turbine and spillway flows at the projects are secondarily used to attract adult fish to fishway entrances, to keep predator fish from accumulating near juvenile release sites, and/or to move juveniles downstream away from the project. During fish passage season, do not take units F1, F2, 1, 3, 11, and 18 out of service, when practicable.

4.2.1.3.c. Whenever practicable, except during split flows operation, do not take any other PH2 units out of service June 21–September 15, to minimize PH1 operation.

4.2.1.3.d. Fish units may be taken out of service to facilitate cleaning of the fish unit brush rigging. Through trial and error, it has been determined that the rigging should be cleaned twice during the passage season. One cleaning operation is performed in conjunction with the mid-year collection channel diffuser grating inspection, and the second stands alone on the outage schedule.

4.2.1.3.e. Some types of turbine maintenance will require testing the turbine throughout its full operating range before returning it to normal service. These operations will be coordinated with the appropriate resource agencies.

4.2.2. Non-Routine Maintenance. Maintenance of facilities that sometimes break down during fish passage season (e.g., fish screens) will be carried out as described below.

4.2.2.1. Unscheduled maintenance that will have a significant impact on juvenile fish passage shall be coordinated with the Regional fish agencies through FPOM and with RCC on a case-by-case basis by CENWP-OD biologists. See **FPP Chapter 1 - Overview** for the Memo of Coordination (MOC) instructions and template. The CENWP-OD biologists will be notified by the project as soon as possible after it becomes apparent that maintenance repairs are required. The Project Operations Manager has the authority to initiate work prior to notifying CENWP-OD when delay of the work will result in an unsafe situation for people, property, or fish.

4.2.2.2. Screens. If an STS or VBS is found to be damaged or inoperative in an operating unit, the unit will be regarded as an unscreened unit. The screen will be repaired or replaced before returning the unit to normal service.

4.2.2.3. Juvenile Bypass Systems (JBS).

4.2.2.3.a. The JBS is controlled automatically (PLC). When an automatic system fails, it can usually be operated manually. This allows either facility to operate according to criteria while repair of the automatic system is completed.

4.2.2.3.b. Orifices allow fish out of the gatewells into a bypass channel. If an orifice valve system becomes inoperative, it will be repaired expeditiously. When the orifices become plugged with debris they are pneumatically flushed.

4.2.2.3.c. If automatic systems fail and the system is operated manually, facility inspections should increase to a frequency to ensure systems operate within criteria.

4.2.2.3.d. All STS gatewells will be inspected daily and cleaned before they become 50% covered with debris. If due to volume of debris it is not possible to keep the gatewell surfaces at least 50% clear, they will be cleaned at least once daily. Turbines with a gatewell fully covered with debris will not be operated, except on a last-on/first-off basis, if required to be in compliance with other coordinated fish measures. This is to maintain clean orifices and minimize fish injury. The gatewell orifices will be closed during the cleaning operation. Check gatewell drawdown and clean trashracks if necessary.

4.2.2.3.e. Powerhouse One (PH1). PH1 juvenile passage routes consist of the ITS and MGR turbines. The DSM is no longer in service.

4.2.2.3.f. Powerhouse Two (PH2). If the bypass system fails in the dewatering section or release pipe, fish may be released through the emergency relief conduit. This operation will continue until repairs are accomplished or until the end of the fish passage season. Any decision on whether or not to shut this system down for dewatering and repairs will be made in coordination with the FPOM. During this emergency operating mode, power generation will be minimized at the PH2. Repairs will receive high priority.

4.2.2.3.g. During fishway inspections, VBSs may be found plugged, damaged or not properly seated. In these cases, the associated unit will be taken out of service as if unscreened and repairs will be made before returning the unit to normal service. If screens are pulled and replaced, the underwater video inspection camera will be deployed to check the screens for proper seating.

4.2.2.4. Turbines and Spillways. If a spill gate becomes inoperable, the operator will make the changes necessary to accommodate the spill and then immediately notify the operations supervisor and Project Biologist to determine the best pattern to follow until repairs are completed. This interim operation shall be coordinated with the FPOM through the district biologist who will provide additional guidance to the project.

4.3. Maintenance - Adult Fish Facilities

4.3.1. Routine Maintenance. Maintenance activities that occur during the fish passage period and that may affect fish passage will be reported in the weekly reports.

4.3.1.1. Fishway Auxiliary Water Systems. Bonneville Project auxiliary water systems consist of gravity flow and hydroelectric generating systems. Preventive maintenance and normal repair are carried out as needed throughout the year. Trash racks for the AWS intakes will be raked when drawdown exceeds criteria. When practicable, rake trash racks during the time of day when fish passage is least affected.

4.3.1.2. Powerhouse and Spillway Adult Fish Collection Systems. Preventive maintenance and repair occurs throughout the year. During the primary adult fish passage season this maintenance will not involve any operations which will cause failure to comply with the adult fishway criteria except as specially coordinated or as needed for semi-annual maintenance. Inspection of those parts of the adult collection channel systems which require dewatering, such as diffusion gratings, leads, and entrance gates, will be scheduled once per year during the winter maintenance season while the system is dewatered, with one additional inspection during the fish passage season, unless a channel must be dewatered for fishway modifications or to correct observed problems.

4.3.1.2.a. An underwater video system or diver may be used for underwater inspections. This scheduled inspection and any associated maintenance will occur during winter maintenance period and once during fish passage season unless specially coordinated. Any non-routine maintenance and fishway modifications will be handled individually.

4.3.1.2.b. A Project Biologist will attend all dewatering activities potentially involving fish, as well as inspections, to provide fish related input.

4.3.1.3. Diffuser Gratings: Diffuser chambers for adding auxiliary water to fish ladders and collection channels are covered by gratings attached by several different methods. Diffuser gratings are normally checked during the winter maintenance period to make sure they are in place. These inspections are done by either dewatering the fish passage way and physically inspecting the diffuser gratings, or by using other methods to inspect the gratings. Diffuser gratings may come loose during the fish passage season.

4.3.1.3.a. Daily inspections of fish ladders and collection systems should include looking for any flow changes that may indicate problems with diffuser gratings.

4.3.1.3.b. If a diffuser grating is known to or suspected of having moved, creating an opening into a diffuser chamber, efforts must immediately be taken to correct the situation and minimize impacts on adult fish in the fishway.

4.3.1.3.c. If possible, a video inspection should be made ASAP to determine the extent of the problem. If diffusers gratings are found to be missing or displaced, creating openings into the diffuser chambers, a method of repair shall be developed and coordinated with the fish agencies and tribes through the established FPOM coordination procedure.

4.3.1.3.d. Repairs shall be made as quickly as possible unless coordinated differently.

4.3.1.3.e. Clean debris from diffuser pits using a rolling operation. Diffusers are opened for a period of ~5 minutes, one at a time, starting with the furthest diffuser upstream to allow debris in the pits to be flushed down the ladder. This should be done at A-branch, B-branch, Cascades Island, and any other diffuser deemed necessary by Project Fisheries. This should be done in November before the start of winter maintenance, and in summer during the same time as ROV inspections in order to minimize impacts on fish passage.

4.3.1.4. Adult Fish Ladders & Counting Stations. Also see *Adult Fish Trapping Protocols (Appendix G)*. Adult fish ladders will be dewatered once each year during winter maintenance. During this time, the ladders will be inspected for blocked orifices, projections into the fishway that may injure fish, weir stability, damaged picket leads, exit gate problems, loose diffusion gratings, unreadable or damaged staff gauges, defective diffusion valves, malfunctioning operating equipment at the counting stations, as well as other potential problems. Problems identified throughout the passage year that do not affect fish passage, as well as those identified during the dewatered period, may then be repaired. Trash racks at the ladder exits will be raked when criteria is approached or exceeded. When practicable, rake trash racks during the time of day when fish passage is least affected, usually late morning (**Figure BON-6**). Fish count station windows, light panels, and crowder panels will be cleaned as needed to achieve accurate counts and, when practicable, during the time of day when fish passage is least affected, usually late morning.

4.3.2. Non-Routine Maintenance. Maintenance activities that occur during the fish passage period that may affect fish passage will be reported in the weekly reports. Non-routine maintenance that will significantly affect the operation of a facility, such as repair of displaced diffuser gratings, will be coordinated with RCC and Regional fish agencies through FPOM. Coordination procedures for non-routine maintenance of adult and juvenile facilities are the same. Any non-routine maintenance and fishway modifications will be handled individually.

4.3.2.1. Fishway Auxiliary Water Systems. Most fishway auxiliary water systems are operated automatically. If the automatic system fails, then the system will be manually operated by project personnel to maintain criteria while repair of the automatic system is carried out. When this operation becomes necessary, project personnel will increase the

surveillance of the adult system to ensure that criteria are being met. In the event of AWS failure, FPOM will be used in an advisory capacity to assist the project as needed.

4.3.2.1.a. Powerhouse One (PH1). If any valves or other part of the system fails, the project shall attempt to maintain criteria by adjusting functioning valves. Conduit pressure must be monitored and not allowed to exceed the established limits.

4.3.2.1.b. Spillway. Two separate fishway auxiliary water valves add water to each spillway ladder (Cascades Island and B-branch ladders). If one of these valves or any other part of the system malfunctions, the functioning parts of the system are to be adjusted to compensate. If repairs cannot be made in 24 hours, close the sluice gate entrance, if open. This will divert the reduced available water to the entrance slots. If a head of 1' is still not achieved, stop logs are to be added to the entrance slots until the desired head or a weir depth of not less than 6' below the tailwater surface is reached. At this point maintain the gate positions until the auxiliary water system is repaired.

4.3.2.1.c. Powerhouse Two (PH2).

c.1. If either or both fishway auxiliary water turbines do not provide sufficient water to meet full criteria, the adult facilities will be operated according to *Emergency Operations for Bonneville PH2 AWS Systems Operations (Table BON-12)* or until a fishway head of 1' is achieved.

c.2. When one of the fish turbines has failed or been taken out of service, refer to **Table BON-12** for turbine operations, floating orifices, diffuser gates, and main gates during emergency situations. **Table BON-12** guidance should be followed to the extent practicable, and shore entrance weirs should be raised in increments or closed as needed to maintain the proper fishway head.

c.3. From September 1–March 31, if both fish unit turbines fail and repairs cannot be made within 8 hours, coordination with FPOM will occur to develop operational guidelines that may include modified powerhouse priority operations.

c.4. PH2 adult fishway diffusion system valves A3, A4 have been removed due to damage. These valves were designed to be closed when tailwater drops below 11' and 9', respectively. Even though the valves cannot be closed, velocity in the channel has remained in criteria.

Table BON-12. Bonneville Dam PH2 Auxiliary Water Supply Emergency Operations.

Tailwater Elevation (ft)	Turbine (MW)	Turbine Q (cfs)	*****CLOSED*****			
			Floating Orifices	South "B" Diffusers	PH "C" Diffusers	Main Entrances
8	13.90	2,950	All	B3-8	C1-5	None
9	13.95	3,010	All	B3-8	C1-5	None
10	14.05	3,090	All	B3-8	C1-5	None
11	14.15	3,165	All	B3-8	C1-5	None
12	14.20	3,230	All	B3-8	C1-5	None
13	14.40	3,340	All	B3-8	C1-5	None
14	14.40	3,400	All	B3-8	C1-5	None
15	14.60	3,520	All	B3-8	C1-5	None
16	14.30	3,515	All	B3-8	C1-5	None
17	14.20	3,560	All	B3-8	C1-5	None
18	14.00	3,575	All	B5-8	None	NU-E
19	13.60	3,535	All	B5-8	None	NU-E
20	13.30	3,520	All	B4-8	None	NU-E
21	13.00	3,510	All	B4-8	None	NU-E
22	12.70	3,505	All	B4-8	None	NU-E
23	12.40	3,505	All	B4-8	None	NU-E
24	12.20	3,535	All	B4-8	None	NU-E
25	11.60	3,535	All	B4-8	None	NU-E
26	11.10	3,365	All	B4-8	None	NU-E
27	10.60	3,285	All	B4-8	None	NU-E
28	10.00	3,160	All	B3-8	None	NU-E

4.3.2.2. Powerhouse & Spillway Adult Fish Collection Systems. Bonneville Project contains several types of fishway entrances. In most cases, if failures occur, the entrance can and will be operated manually by project personnel until repairs are made. If this operation becomes necessary, project personnel will increase the surveillance of the adult system to ensure that criteria are being met. In those cases in which the failure will not allow the entrance to be operated manually, the gate will be maintained, to the extent possible, in an operational position. If this is not possible, the entrance will be repaired expediently and returned to manual or automatic control at the earliest possible date.

4.3.2.3. Adult Fish Ladders & Counting Stations. Ladder components include picket leads, counting stations, fishway exits, and overflow weirs with orifices. Pickets with excessive spacing (greater than 1"), concrete erosion around the leads, or missing pickets can allow fish into areas where escape is difficult. In some instances of picket lead failure, spare leads and spare installation slots are available. In these cases the spare leads are installed and the damaged leads are removed and repaired. In the remaining instances of picket lead failure or concrete erosion, the timing and method of repair will depend upon the severity of the problem. The decision of whether or not to dewater the fishway and repair any problems will be made in coordination with the Regional fish agencies through FPOM.

4.3.2.4. Diffuser Gratings. Diffuser chambers for adding auxiliary water to fish ladders and collection channels are covered by gratings attached by several different methods. Diffuser

gratings are normally checked during the winter maintenance period to make sure they are in place. These inspections are done by either dewatering the fish passage way and physically inspecting the diffuser gratings, or by using other methods to inspect the gratings. Diffuser gratings may come loose during the fish passage season.

4.3.2.4.a. Daily inspections of fish ladders and collection systems should include looking for any flow changes that may indicate problems with diffuser gratings.

4.3.2.4.b. If a diffuser grating is known to or suspected of having moved, creating an opening into a diffuser chamber, efforts must immediately be taken to correct the situation and minimize impacts on adult fish in the fishway.

4.3.2.4.c. If possible, a video inspection should be made as soon as possible to determine the extent of the problem. If diffuser gratings are found to be missing or displaced, creating openings into the diffuser chambers, a method of repair shall be developed and coordinated with the Regional fish agencies through FPOM.

4.3.2.4.d. Repairs shall be made as quickly as possible unless coordinated differently.

5. TURBINE UNIT OPERATION & MAINTENANCE

5.1. Turbine Unit Priority Order

5.1.1. Turbine units will be operated in the order of priority defined in **Table BON-13** to optimize fish passage conditions. If a unit is out of service, the next unit in the priority order will be operated. Unit priority order may be coordinated differently for fish research, construction, or project maintenance.

5.1.2. When splitting flows (**section 2.1.5**), the top two available PH1 priority units will be operated first, followed by normal PH2 unit priority. If more units are needed after all available PH2 units are operating, proceed with normal PH1 unit priority.

5.1.3. During high head events (e.g., higher than normal forebay), the top priority unit at PH1 may be operated when necessary to keep PH2 units within the 1% range.

Table BON-13. Bonneville Dam Turbine Unit Priority Order.

PERIOD / OPERATION	UNIT PRIORITY ORDER *
Year-Round: Fish Ladders in service; PH1 Ladder out of service	PH2: 11, 18, 12, 17, 13, 14, 15, 16, Then PH1: 1, 10, 3, 6, 9, 4, 5, 8, 7, 2
PH2 Fish Ladder out of service	PH1: 1, 10, 3, 6, 9, 4, 5, 8, 7, 2, Then PH2: 11, 18, 12, 17, 13, 14, 15, 16
Split Flows (section 2.1.5)	PH1: 1, 10 (or top two available PH1 priority units), Then PH2: 11, 18, 12, 17, 13, 14, 15, 16, Then PH1: 3, 6, 9, 4, 5, 8, 7, 2
PH1 Unit Priority	1, 10, 3, 6, 9, 4, 5, 8, 7, 2
PH2 Unit Priority	11, 18, 12, 17, 13, 14, 15, 16

* Changes in unit priorities may occur and will be authorized in RCC teletypes as needed.

5.2. Turbine Unit Operating Range

5.2.1. In-Season (April 1–October 31). Turbine units will be operated within $\pm 1\%$ of peak efficiency (1% range), as specified in the *BPA Load Shaping Guidelines (Appendix C)*, and turbine units at PH1 may be operated up to the Best Operating Point (BOP). Lower and upper limits of the operating ranges at PH1 and PH2 are defined in **Tables BON-14 and BON-15**, respectively.

5.2.1.1. From April 10 through June 15, as a soft constraint, PH2 units should not be operated below the 1% mid-range (<13 kcfs) to minimize turbulence that may impact fish that pass through the turbines.

5.2.1.2. From April 1 through July 31, PH2 units will be operated per the modified guidelines below in order to minimize gatewell turbulence until structural modifications are completed. RCC will issue a teletype with any updates as construction and testing is completed. During this time period, turbine units will be operated in the order of priority in **Table BON-13** and in the following order of operating ranges to pass increasing flow:

5.2.1.2.a. PH2 units within the 1% mid-range (13-15 kcfs) and PH1 units up to BOP;

5.2.1.2.b. Then, additional flow will be passed in one of the following ways, or as otherwise determined by Project Fisheries based on observed conditions:

i. April 1–9 and June 16–July 31: PH2 units up to the 1% upper limit.

ii. April 10–June 15 (Spring Spill):

- Adult Trigger: when adult spring Chinook total passage counts² (excluding jacks) are greater than juvenile spring Chinook collection

² **Adult spring Chinook** reported as “*Adult Chinook daily*” in the Corps’ Adult Fish Count Running Sum Report for Bonneville, available online at: <http://www.fpc.org/environment/home.asp>

counts³ for two consecutive days, Project Fisheries will notify the control room to increase PH2 up to the 1% upper limit in order from north to south: 18, 17, 16, 15, 14, 13, 12, 11.

- **Juvenile Trigger:** when juvenile spring Chinook collection counts³ are greater than adult spring Chinook total passage counts² (excluding jacks) for three consecutive days, Project Fisheries will notify the control room to maintain PH2 units within the 1% mid-range as a hard constraint and pass additional flow as spill.

5.2.1.3. From August 1 through October 31, PH2 units may be operated within the full 1% range. During this period, PH2 units will typically be operated within the 1% mid-range; however, the full 1% range may be used as necessary to avoid dead-band issues during lower flows. Operations above the mid-range will be infrequent, consistent with previous years.

5.2.1.4. If operation outside the 1% range is necessary, Project personnel shall record the information to provide to BPA on a weekly basis according to the *Guidelines*. Operation outside the 1% range may be necessary to:

- i. Meet BPA load requests made pursuant to BPA's policy, statutory requirements, and *Load Shaping Guidelines (Appendix C)*;
- ii. If the draft tube is to be dewatered (**section 6.5**), the unit will be operated at full load >1% (or at speed-no-load <1% if not possible to load) for a minimum of 15 minutes prior to installing tail logs in order to flush fish from the unit;
- iii. Operate a turbine unit solely to provide station service; or
- iv. Comply with other coordinated fish measures.

5.2.2. Off-Season (November 1–March 31). While not required to do so in the off-season, turbines will normally run within the 1% range since it is the optimum point for maximizing energy output of a given unit of water over time. Operation outside the 1% range is allowed if needed for power generation or other needs.

³ **Juvenile spring Chinook** reported as “*CollCount*” in SMP Smolt Data (query current year, BO2, Combined Chinook Yearling), online at: http://www.fpc.org/smolt/smolt_queries/Q_smolt_dailypassageindex_query.php

Table BON-14. Bonneville Dam Turbine Unit Power (MW) and Flow (cfs) at ±1% of Peak Efficiency (1% Range), PH1 Best Operating Point (BOP), and Operating Limit. ^{a, b}

Project Head (feet)	PH1 Units 1–10							
	1% Lower Limit		1% Upper Limit		Best Operating Point (BOP)		Operating Limit	
	MW	cfs	MW	cfs	MW	cfs	MW	cfs
35	18.9	7,203	23.6	9,019	27.3	10,527	31.8	12,960
36	19.5	7,205	24.3	8,985	28.3	10,564	33.0	12,997
37	20.1	7,205	25.0	8,951	29.2	10,598	34.1	13,028
38	20.7	7,204	25.6	8,918	30.2	10,627	35.3	13,054
39	21.3	7,202	26.3	8,886	31.2	10,654	36.4	13,076
40	21.9	7,199	26.9	8,854	32.1	10,677	37.6	13,093
41	22.5	7,201	28.0	8,969	33.2	10,759	38.8	13,147
42	23.1	7,202	29.1	9,077	34.3	10,837	40.0	13,197
43	23.6	7,203	30.1	9,180	35.4	10,910	41.1	13,242
44	24.2	7,203	31.2	9,278	36.5	10,979	42.3	13,284
45	24.8	7,203	32.3	9,370	37.6	11,045	43.5	13,322
46	25.4	7,210	33.2	9,416	38.8	11,109	44.6	13,303
47	26.0	7,217	34.1	9,459	39.9	11,170	45.7	13,280
48	26.6	7,223	35.0	9,500	41.0	11,227	46.7	13,253
49	27.3	7,229	36.0	9,539	42.1	11,282	47.8	13,222
50	27.9	7,234	36.9	9,575	43.2	11,333	48.8	13,188
51	28.5	7,241	37.8	9,618	44.2	11,356	49.9	13,207
52	29.1	7,248	38.4	9,577	45.2	11,378	51.0	13,222
53	29.7	7,254	39.0	9,537	46.2	11,398	52.1	13,234
54	30.3	7,260	39.7	9,499	47.2	11,418	53.1	13,242
55	30.9	7,266	41.6	9,768	48.2	11,465	54.2	13,248
56	31.5	7,269	42.5	9,808	49.2	11,478	54.6	13,046
57	32.1	7,272	43.4	9,846	50.3	11,518	54.9	12,841
58	32.7	7,274	44.4	9,883	51.4	11,557	55.3	12,633
59	33.3	7,277	45.3	9,918	52.4	11,594	55.5	12,421
60	33.8	7,279	46.3	9,952	53.5	11,630	55.8	12,206
61	34.5	7,296	46.9	9,930	54.3	11,610	56.1	12,048
62	35.1	7,311	47.6	9,909	55.1	11,591	56.3	11,887
63	35.8	7,326	48.3	9,889	56.0	11,572	56.5	11,721
64	36.5	7,340	49.0	9,868	56.6	11,519	56.7	11,552
65	37.1	7,354	49.7	9,849	56.8	11,388	56.8	11,379
66	37.6	7,341	50.6	9,876	57.1	11,265	57.4	11,328
67	38.1	7,329	51.4	9,902	57.3	11,124	58.1	11,275
68	38.6	7,317	52.3	9,928	57.6	11,021	58.6	11,220
69	39.0	7,305	53.2	9,954	57.8	10,896	59.2	11,161
70	39.5	7,294	54.1	9,979	58.0	10,736	59.8	11,100

Project	PH2 Units 11-18 - With STS						PH2 Units 11-18 - No STS					
	1% Lower Limit		1% Upper Limit		Operating Limit		1% Lower Limit		1% Upper Limit		Operating Limit	
	MW	cfs	MW	cfs	MW	cfs	MW	cfs	MW	cfs	MW	cfs
35	27.6	11,259	44.3	18,068	46.7	19,283	28.2	11,444	45.1	18,277	46.7	19,168
36	28.5	11,271	45.8	18,097	49.0	19,714	29.2	11,455	46.6	18,306	49.0	19,597
37	29.4	11,279	47.3	18,121	51.4	20,146	30.1	11,464	48.1	18,331	51.4	20,026
38	30.3	11,284	48.8	18,139	53.9	20,580	31.0	11,470	49.7	18,350	53.9	20,457
39	31.3	11,287	50.3	18,153	56.4	21,014	32.0	11,473	51.2	18,364	56.4	20,889
40	32.2	11,288	51.8	18,162	59.0	21,450	32.9	11,474	52.7	18,374	59.0	21,321
41	33.0	11,259	53.3	18,197	61.2	21,654	33.7	11,445	54.3	18,409	61.2	21,535
42	33.8	11,230	54.9	18,228	63.4	21,854	34.6	11,415	55.8	18,441	63.4	21,744
43	34.6	11,201	56.4	18,255	65.6	22,049	35.4	11,386	57.4	18,468	65.6	21,949
44	35.4	11,172	57.9	18,278	67.8	22,240	36.2	11,357	58.9	18,493	67.8	22,150
45	36.2	11,144	59.4	18,299	70.1	22,427	37.0	11,328	60.5	18,514	70.1	22,347
46	37.0	11,139	61.0	18,366	72.1	22,441	37.9	11,324	62.1	18,581	72.1	22,390
47	37.8	11,135	61.9	18,200	74.2	22,450	38.7	11,319	63.0	18,415	74.2	22,429
48	38.7	11,129	62.7	18,040	76.3	22,455	39.6	11,314	63.8	18,255	76.3	22,463
49	39.5	11,124	63.5	17,887	76.5	21,994	40.4	11,308	64.7	18,101	76.5	22,040
50	40.3	11,118	67.5	18,598	76.5	21,497	41.3	11,303	68.7	18,817	76.5	21,527
51	41.3	11,154	69.8	18,850	76.5	20,999	42.2	11,339	71.1	19,072	76.5	21,015
52	42.3	11,187	72.1	19,091	76.5	20,502	43.2	11,373	73.4	19,316	76.5	20,502
53	43.2	11,219	74.5	19,323	76.5	20,005	44.2	11,405	75.8	19,551	76.5	19,989
54	44.2	11,249	Operating Limit ^b		76.5	19,536	45.2	11,436	Operating Limit ^b		76.5	19,431
55	45.2	11,278	Operating Limit ^b		76.5	19,115	46.2	11,466	Operating Limit ^b		76.5	18,975
56	46.4	11,343	Operating Limit ^b		76.5	18,718	47.4	11,531	Operating Limit ^b		76.5	18,581
57	47.6	11,404	Operating Limit ^b		76.5	18,336	48.6	11,593	Operating Limit ^b		76.5	18,202
58	48.8	11,461	Operating Limit ^b		76.5	17,967	49.9	11,652	Operating Limit ^b		76.5	17,836
59	50.0	11,515	Operating Limit ^b		76.5	17,611	51.1	11,707	Operating Limit ^b		76.5	17,483
60	51.2	11,567	Operating Limit ^b		76.5	17,267	52.3	11,760	Operating Limit ^b		76.5	17,142
61	51.8	11,532	Operating Limit ^b		76.5	16,978	53.0	11,724	Operating Limit ^b		76.5	16,857
62	52.5	11,498	Operating Limit ^b		76.5	16,699	53.7	11,690	Operating Limit ^b		76.5	16,582
63	53.1	11,466	Operating Limit ^b		76.5	16,428	54.3	11,657	Operating Limit ^b		76.5	16,315
64	53.7	11,434	Operating Limit ^b		76.5	16,166	55.0	11,625	Operating Limit ^b		76.5	16,056
65	54.4	11,405	Operating Limit ^b		76.5	15,912	55.6	11,595	Operating Limit ^b		76.5	15,806
66	55.4	11,448	Operating Limit ^b		76.5	15,671	56.7	11,639	Operating Limit ^b		76.5	15,570
67	56.5	11,490	Operating Limit ^b		76.5	15,437	57.8	11,682	Operating Limit ^b		76.5	15,341
68	57.5	11,532	Operating Limit ^b		76.5	15,210	58.9	11,724	Operating Limit ^b		76.5	15,119
69	58.6	11,571	Operating Limit ^b		76.5	14,990	59.9	11,764	Operating Limit ^b		76.5	14,903
70	59.6	11,610	Operating Limit ^b		76.5	14,775	61.0	11,803	Operating Limit ^b		76.5	14,693

- a. Table values for 1% lower and upper limits from HDC report (Jun 2000); values for PH1 "Best Operating Point" from Turbine Survival Program (TSP) modeling and analysis (Jan 2013). Flow (cfs) is calculated as a function of turbine efficiency, project head, and power output (MW).
- b. "Operating Limit" is the maximum safe operating point based on cavitation or generator limit (added Feb 2018). At project head ≥ 54 ft, PH2 units are restricted by the Operating Limit of 76.5 MW and cannot achieve the modeled upper limit of the 1% range.

5.3. Turbine Unit Maintenance

5.3.1. Maintenance Schedules. Turbine unit maintenance schedules will be reviewed by Project and District Operations biologists for fish impacts.

5.3.1.1. Priority unit maintenance will be scheduled for the winter maintenance period or when there are few fish passing the project, to the extent possible. Priority units 1, 3, 11, and 18 will be scheduled for any necessary extended outages between December 1 and April 30.

5.3.1.2. Non-priority units should not be scheduled for routine or extended outages during this time if it will delay or conflict with priority unit maintenance.

5.3.1.3. To maintain the priority importance of Unit 1 when PH1 must be used, long-term outages will be avoided after the beginning of the juvenile fish passage season until after the adult fall Chinook and coho migration ends in late October. Unit 1 provides important attraction flow for adult fish and helps pass juvenile fish downstream when PH1 is operating.

5.3.2. Operational Testing. Operational testing may deviate from priority units and may require water that would otherwise be used for spill if units operating for reliability are at the 1% lower limit (minimum generation). Water for operational testing will be used from powerhouse allocation when possible, and diverted from spill only to the extent necessary to maintain power system reliability.

5.3.2.1. Pre-Maintenance: Before units go into maintenance status, units may be operationally tested for up to 60 minutes by running at various loads within and outside of the 1% range for pre-maintenance measurements and testing. Units will be run for a minimum of 3 hours to flush fish prior to installing tail logs.

5.3.2.2. Post-Maintenance: After maintenance or repair, units may be operationally tested while remaining in maintenance or forced outage status by running for up to a cumulative time of 60 minutes within and outside of the 1% range before returning to operational status.

5.3.2.3. Units may be operated outside of the 1% range for up to 20 minutes during testing. Unit operations below the 1% range will be minimized to the extent practicable.

5.3.3. Idle Units. When a unit is idle, wicket gates will remain in a closed position unless tail logs are installed and fish salvage has been done in the draft tube, or the project is holding a safety pool below the level of the wicket gates.

5.3.4. Slow Roll. Turbines that have been idle/out-of-service will be started by slow rolling the unit after tipping turbine blades from flat to steep and back to flat.

5.3.5. Long-Term Outages. In the event of long-term powerhouse outages, affected units will be exercised periodically. Each unit will be operated for 4-8 hours every 2 weeks to exercise governor components and clean wetted surfaces of corrosion so that if the unit is needed, fish injury will be minimized and the units will be in good operating condition. Actual runtime will be minimum necessary to keep the unit in good working condition and may be performed at

night, day or whenever unit cycling will have the minimum effect on fish as determined by the Project Biologist.

5.3.6. Head gates⁴ at Units 11-18 have been dogged off and the system depressurized. Oil leaks develop frequently when the system operates with normal pressure. Further related instructions are described in a memo from the Project Chief of Operations (*Memorandum for All Operations, dated September 23, 1993. Subject: Powerhouse 2 Hydraulic Head Gate Operation*).

6. DEWATERING PLANS

6.1. General

6.1.1. *Guidelines for Dewatering and Fish Handling Plans (Appendix F)* and project *Dewatering Plans*⁵ have been developed by the projects and approved by FPOM, and are followed for most project facility dewaterings. The plans include consideration for fish safety and are consistent with the following general guidance. The appropriate plans are reviewed by participants before each salvage operation.

6.1.2. Whether pumps or drain valves are used, automatic pump shut off devices will be utilized to prevent stranding fish. If automatic pump shut off devices and low water alarms are not used, the dewatering process must be continuously monitored to prevent stranding.

6.1.3. Project Biologist(s) and/or alternate Corps fish personnel will attend all project activities involving fish handling.

6.1.4. The fish agencies and tribes will be notified of any dewaterings and may be invited if additional help is deemed necessary and all safety considerations can be met.

6.1.5. Adult salmonids will be released into the forebay and juvenile salmonids will be released into the tailrace, depending on the age composition of fish in the tank. If a ladder is dewatered in the spring or summer, steelhead kelts will be released into the tailrace. If large numbers of sturgeon are present, it may be necessary to release them into either the forebay or tailrace, depending on the location of the recovery operation.

6.2. Dewatering – Juvenile Bypass Systems (JBS)

6.2.1. See *Guidelines for Dewatering and Fish Handling (Appendix F)* and project *Dewatering Plans*⁵.

⁴ Head gates may also be referred to as “operating” gates at some projects. The terms are interchangeable.

⁵ Project dewatering plans are available on the FPOM website at: pweb.crohms.org/tmt/documents/FPOM/2010/

6.3. Dewatering – Adult Fish Ladder

6.3.1. Routine Maintenance.

6.3.1.1. When possible, the ladder to be dewatered will be operated at orifice flow prior to dewatering for at least 24 hours, and up to 96 hours. This operation shall not be initiated prior to 1800 hours on November 30 if a ladder outage is scheduled for December 1.

6.3.1.2. All fishway auxiliary water supplies will be discontinued at least 24 hours, but no more than 96 hours, prior to dewatering. This operation shall not be initiated until 1800 hours on November 30 if a ladder outage is scheduled for December 1.

6.3.1.3. A Project Biologist will ensure that fish rescue equipment is available and will coordinate to ensure adequate numbers of personnel will be available to move fish out of the dewatered ladder.

6.3.1.4. Project personnel will install head gates to shut down ladder flow. Where possible, a minimum depth of 1"-2" will be maintained in the ladder until fish are rescued.

6.3.1.5. Orifice blocking devices that are placed in the lower-most weirs to prevent fish from re-ascending the dewatered portion of the adult fishway shall have ropes placed on them to be tied to fishway railings. The orifice blocks shall be removed just before the fishway is returned to service. The ropes will help identify and prevent the orifice blocks from being accidentally left in place after fishway water-up. The orifice blocking devices will appear on the pre-water-up checklist maintained by the Project Biologist.

6.3.2. Non-Routine Maintenance.

6.3.2.1. Follow steps in **section 6.3.1** above. When possible, discontinue fishway auxiliary water and operate the ladder at orifice flow as long as possible (prefer 3-24 hours) prior to dewatering.

6.4. Dewatering – Powerhouse Fish Collection System

6.4.1. Routine Maintenance.

6.4.1.1. During the pumping or draining operation to dewater a portion or the entire collection channel, the water level will not be allowed to drop to a level which strands fish. Personnel shall remain onsite during pumping operations to ensure stranding does not occur, or a water-level sensor that deactivates the dewatering process will be used.

6.4.1.2. Project Fisheries will directly assist fish rescue operations, provide technical guidance, ensure fish safety and ensure rescue equipment/personnel are available if needed.

6.5. Dewatering – Turbine Units

6.5.1. Immediately before setting the head gates, remove juvenile fish from gatewell(s) that will be drained by use of a special dipping basket. Typically, at least one gatewell is drained to allow ventilation into the draft tube.

6.5.2. If the draft tube is to be dewatered, place head gates and tail logs immediately after the turbine unit is shut down when possible. Bottom tail logs should be placed first. This is necessary for both scheduled and unscheduled outages.

6.5.3. If a turbine unit has been idle and the draft tube is to be dewatered, it will be operated when possible at full load for a minimum of 1 hour, 4 hours preferred. Stop logs will then be placed immediately. It is recommended adjacent units also be operated for a minimum of 1 hour, 4 hours preferred, to flush fish prior to placing tail logs in the unit to be OOS. It is also recommended that units adjacent to OOS units not be voluntarily taken OOS until the adjacent units return to service.

6.5.4. Water levels in the draft tube will not be allowed to drop to a level that strands fish. Adequate inspections will be conducted to ensure that stranding does not occur.

6.5.5. Fish rescue personnel will inspect dewatered turbine draft tubes, scroll cases, and intakes as soon as water levels reach a depth permitting visual inspection and the hatch cover is opened.

6.5.6. A Project Biologist will provide technical guidance for fish safety and will directly participate in fish salvage.

6.5.7. A Project Biologist will invite FPOM members to participate in the dewatering, and will assure that rescue equipment is available if needed.

6.5.8. If the unit is planned to be out of service and partially drained for less than 4 days and low numbers of fish are trapped, then it will not be necessary to remove fish from draft tubes as long as an adequate safety pool is maintained. Adequate inspections will be conducted to ensure the safety pool is maintained and fish are in good condition.

6.6. Dewatering – Navigation Lock

6.6.1. The navigation lock is frequently dewatered for routine maintenance in late February/early March, in conjunction with navigation lock outages at The Dalles and John Day dams.

6.6.2. The area between the upstream bulkhead and the upstream gate is surveyed for fish as water levels allow. The lateral and pool areas on the floor of the lock are surveyed for fish from above. Most of these areas remain full of water, precluding the ability to implement successful fish salvage operations. Areas where water levels slowly decrease are accessed via crane when pool levels reach a depth of approximately 3 feet. The fill conduits are accessed and checked for fish only if needed and can be done safely. All salvaged fish are removed, transported via bag or tank and released to the river.

7. FOREBAY DEBRIS REMOVAL

7.1. General

7.1.1. Debris can impact fish passage conditions in several ways. It can plug or block trash racks, VBSs, gateway orifices, dewatering screens, and facility piping, resulting in impingement, injuries, and descaling of fish.

7.1.2. Debris is removed by operating the PH1 ITS, B2CC, or passing it through the spillway with a special spill gate operation.

7.1.3. Special spill operations that don't follow the normal spill schedule or rate limits will be coordinated prior to their implementation. Normally, the project shall contact CENWP-OD at least two workdays prior to the day the special operation is required. Using information provided by the project, CENWP-OD will coordinate with FPOM and with RCC, as necessary. Once the coordination is complete, RCC will issue a teletype to the project with the details.

8. RESPONSE TO HAZARDOUS MATERIALS SPILLS

8.1. General

8.1.1. Bonneville Project's guidance for responding to hazardous substance spills is contained in its Emergency Spill Response Plan.

8.1.2. In the event of a hazardous materials spill, the Project Biologist has the authority to make fishway adjustments outside of operating criteria as necessary to prevent contamination of the ladder until unified command is formed and consultation is established with FPOM. NOAA Fisheries will be notified within 24 hours of a ladder closure.

8.1.3. Project Fisheries will be contacted as soon as possible after a hazardous material release and prior to any modification to fishway operations. Project biologist(s) will in turn contact the CENWP-OD biologist and FPOM. Attempts should be made to first contact the Project Biologist on duty. During fish passage season, there is a Project Biologist on duty seven days a week. If a Project Biologist cannot be reached by radio or in the office, attempts to contact Project Fisheries will occur in the following order (contact information available in Control Room):

- i.** Ben Hausmann, Supervisory Fishery Biologist
- ii.** Leif Halvorson, Fishery Biologist
- iii.** Brian Bissell, Fishery Biologist
- iv.** Andrew Derugin, Fishery Biologist
- v.** Tammy Mackey, Fisheries Supervisor

Table BON-15. [pg 1 of 10] Bonneville Dam Spill Patterns in Vertical Gate Opening (ft) per Spillbay.^a

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcfs)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
0.5																	0.5	1	2.3
0.5	0.5																0.5	1.5	3.4
0.5	0.5															0.5	0.5	2	4.6
0.5	0.5														0.5	0.5	0.5	2.5	5.7
0.5	0.5		0.5												0.5	0.5	0.5	3	6.9
0.5	0.5		0.5	0.5											0.5	0.5	0.5	3.5	8.0
0.5	0.5		0.5	0.5									0.5		0.5	0.5	0.5	4	9.2
0.5	0.5		0.5	0.5						0.5			0.5		0.5	0.5	0.5	4.5	10.3
0.5	0.5		0.5	0.5					0.5	0.5			0.5		0.5	0.5	0.5	5	11.5
0.5	0.5		0.5	0.5			0.5		0.5	0.5			0.5		0.5	0.5	0.5	5.5	12.6
0.5	0.5	0.5	0.5	0.5			0.5		0.5	0.5			0.5		0.5	0.5	0.5	6	13.8
0.5	0.5	0.5	0.5	0.5			0.5		0.5	0.5			0.5		0.5	1	0.5	6.5	14.9
0.5	1	0.5	0.5	0.5			0.5		0.5	0.5			0.5		0.5	1	0.5	7	16.0
0.5	1	0.5	0.5	0.5	0.5		0.5		0.5	0.5			0.5		0.5	1	0.5	7.5	17.2
0.5	1	0.5	0.5	0.5	0.5		0.5		0.5	0.5			0.5	0.5	0.5	1	0.5	8	18.3
0.5	1	0.5	0.5	0.5	0.5	0.5	0.5		0.5	0.5			0.5	0.5	0.5	1	0.5	8.5	19.5
0.5	1	0.5	0.5	0.5	0.5	0.5	0.5		0.5	0.5	0.5		0.5	0.5	0.5	1	0.5	9	20.6
0.5	1	0.5	0.5	0.5	0.5	0.5	0.5		0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	0.5	9.5	21.8
0.5	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	0.5	10	22.9
0.5	1	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	0.5	10.5	24.1
0.5	1	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	1	11	25.2
1	1	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	1	11.5	26.3
1	1	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	1	1	12	27.4
1	1	1	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	1	1	12.5	28.6
1	1	1	1	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	1	1	1	13	29.7
1	1	1	1	0.5	0.5	0.5	0.5	1	0.5	0.5	0.5	0.5	0.5	1	1	1	1	13.5	30.8
1	1	1	1	0.5	0.5	1	0.5	1	0.5	0.5	0.5	0.5	0.5	1	1	1	1	14	31.9
1	1	1	1	0.5	0.5	1	0.5	1	0.5	0.5	1	0.5	0.5	1	1	1	1	14.5	33.1
1	1	1	1	0.5	1	1	0.5	1	0.5	0.5	1	0.5	0.5	1	1	1	1	15	34.2
1	1	1	1	0.5	1	1	0.5	1	0.5	0.5	1	1	0.5	1	1	1	1	15.5	35.3
1	1	1	1	0.5	1	1	0.5	1	1	0.5	1	1	0.5	1	1	1	1	16	36.4
1	1	1	1	1	1	1	0.5	1	1	0.5	1	1	0.5	1	1	1	1	16.5	37.6
1	1	1	1	1	1	1	1	1	1	0.5	1	1	0.5	1	1	1	1	17	38.7
1	1	1	1	1	1	1	1	1	1	0.5	1	1	1	1	1	1	1	17.5	39.8
1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	18	40.9
1	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	18.5	42.0
1	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1.5	1	19	43.2
1	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1	1.5	1.5	1	19.5	44.3
1	1.5	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1.5	1.5	1	20	45.4
1.5	1.5	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1.5	1.5	1	20.5	46.5
1.5	1.5	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1.5	2	1.5	21	47.6
1.5	1.5	1.5	1	1	1	1	1	1	1	1	1	1	1	1	1.5	2	1.5	21.5	48.6
2	2	2	0	2	0	0	2	0	2	0	0	2	2	0	2	2	2	22	49.0
2	2	2	0	2	0	0	2	0	2	0	0	2	2	0	2	2.5	2	22.5	50.1
2	2.5	2	0	2	0	0	2	0	2	0	0	2	2	0	2	2.5	2	23	51.1
2	2.5	2	0	2	0	0	2	0	2	0	0	2	2	0	2.5	2.5	2	23.5	52.2
2	2	2	0	2	0	2	2	0	2	0	0	2	2	0	2	2	2	24	53.5

^a This table defines spill patterns in increments of ½-ft total gate opening (1 stop) per row. Spill (kcfs) is calculated as a function of total gate opening (ft) at forebay elevation 74.0 ft (updated 2007).

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcfs)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
2	2	2	0	2	0	2	2	0	2	0	0	2	2	0	2	2.5	2	24.5	54.5
2	2.5	2	0	2	0	2	2	0	2	0	0	2	2	0	2	2.5	2	25	55.6
2	2.5	2	0	2	0	2	2	0	2	0	0	2	2	0	2.5	2.5	2	25.5	56.6
2	2	2	0	2	0	2	2	0	2	2	0	2	2	0	2	2	2	26	57.9
2	2	2	0	2	0	2	2	0	2	2	0	2	2	0	2	2.5	2	26.5	59.0
2	2.5	2	0	2	0	2	2	0	2	2	0	2	2	0	2	2.5	2	27	60.0
2	2.5	2	0	2	0	2	2	0	2	2	0	2	2	0	2.5	2.5	2	27.5	61.1
2	2	2	2	2	0	2	2	0	2	2	0	2	2	0	2	2	2	28	62.4
2	2	2	2	2	0	2	2	0	2	2	0	2	2	0	2	2.5	2	28.5	63.4
2	2.5	2	2	2	0	2	2	0	2	2	0	2	2	0	2	2.5	2	29	64.5
2	2.5	2	2	2	0	2	2	0	2	2	0	2	2	0	2.5	2.5	2	29.5	65.6
2	2	2	2	2	0	2	2	0	2	2	0	2	2	2	2	2	2	30	66.8
2	2	2	2	2	0	2	2	0	2	2	0	2	2	2	2	2.5	2	30.5	67.9
2	2.5	2	2	2	0	2	2	0	2	2	0	2	2	2	2	2.5	2	31	69.0
2	2.5	2	2	2	0	2	2	0	2	2	0	2	2	2	2.5	2.5	2	31.5	70.0
2	2	2	2	2	2	2	2	0	2	2	0	2	2	2	2	2	2	32	71.3
2	2	2	2	2	2	2	2	0	2	2	0	2	2	2	2	2.5	2	32.5	72.4
2	2.5	2	2	2	2	2	2	0	2	2	0	2	2	2	2	2.5	2	33	73.4
2	2.5	2	2	2	2	2	2	0	2	2	0	2	2	2	2.5	2.5	2	33.5	74.5
2	2	2	2	2	2	2	2	0	2	2	2	2	2	2	2	2	2	34	75.8
2	2	2	2	2	2	2	2	0	2	2	2	2	2	2	2	2.5	2	34.5	76.8
2	2.5	2	2	2	2	2	2	0	2	2	2	2	2	2	2	2.5	2	35	77.9
2	2.5	2	2	2	2	2	2	0	2	2	2	2	2	2	2.5	2.5	2	35.5	78.9
2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	36	80.2
2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2.5	2	36.5	81.3
2	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2.5	2	37	82.3
2	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2	2.5	2.5	2	37.5	83.4
2	2.5	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	2.5	2	38	84.4
2	2.5	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	2.5	2.5	38.5	85.5
2.5	2.5	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	2.5	2.5	39	86.6
2.5	2.5	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	3	2.5	39.5	87.6
2.5	3	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	3	2.5	40	88.6
2.5	3	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	3	3	40.5	89.7
3	3	2.5	2	2	2	2	2	2	2	2	2	2	2	2	2.5	3	3	41	90.7
3	3	2.5	2	2	2	2	2	2	2	2	2	2	2	2	3	3	3	41.5	91.7
3	3	3	2	2	2	2	2	2	2	2	2	2	2	2	3	3	3	42	92.8
3	3	3	2	2	2	2	2	2	2	2	2	2	2	2.5	3	3	3	42.5	93.8
3	3	3	2.5	2	2	2	2	2	2	2	2	2	2	2.5	3	3	3	43	94.9
3	3	3	2.5	2	2	2	2	2	2	2	2	2	2.5	2.5	3	3	3	43.5	96.0
3	3	3	2.5	2.5	2	2	2	2	2	2	2	2	2.5	2.5	3	3	3	44	97.0
3	3	3	2.5	2.5	2	2	2	2.5	2	2	2.5	2	2.5	2.5	3	3	3	44.5	98.1
3	3	3	2.5	2.5	2.5	2	2	2.5	2	2	2.5	2	2.5	2.5	3	3	3	45	99.1
3	3	3	2.5	2.5	2.5	2	2	2.5	2	2	2.5	2	2.5	2.5	3	3	3	45.5	100.2
3	3	3	2.5	2.5	2.5	2.5	2.5	2	2	2	2.5	2.5	2.5	2.5	3	3	3	46.5	102.3
3	3	3	2.5	3	2.5	2.5	2.5	2	2	2	2.5	2.5	2.5	3	3	3	3	47.5	104.4
3	3	3	3	3	2.5	2.5	2.5	2	2	2	2.5	2.5	2.5	3	3.5	3	3	48.5	106.4
3	3.5	3	3	3	2.5	2.5	2.5	2	2.5	2	2.5	2.5	2.5	3	3.5	3.5	3	50	109.5
3	3.5	3.5	3	3	2.5	2.5	2.5	2	2.5	2	2.5	2.5	2.5	3	3.5	3.5	3	50.5	110.5
3	3.5	3.5	3	3	2.5	2.5	2.5	2	2.5	2.5	2.5	2.5	2.5	3	3.5	3.5	3	51	111.6
3	3.5	3.5	3	3	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	3	3.5	3.5	3	51.5	112.6
3	3.5	3.5	3	3	3	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	3	3.5	3.5	3	52	113.7
3	3.5	3.5	3	3	3	3	2.5	2.5	2.5	2.5	2.5	2.5	2.5	3	3.5	3.5	3	52.5	114.7

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcf/s)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
3	3.5	3.5	3	3	3	3	2.5	2.5	2.5	2.5	2.5	2.5	2.5	3	3.5	3.5	3.5	53	115.7
3	3.5	3.5	3	3	3	3	2.5	2.5	2.5	2.5	2.5	2.5	2.5	3	3.5	4	3.5	53.5	116.7
3	3.5	3.5	3	3	3	3	3	2.5	2.5	2.5	2.5	2.5	2.5	3	3.5	4	3.5	54	117.8
3	3.5	3.5	3	3	3	3	3	2.5	2.5	2.5	2.5	2.5	3	3	3.5	4	3.5	54.5	118.8
3	3.5	3.5	3	3	3	3	3	2.5	2.5	2.5	2.5	3	3	3	3.5	4	3.5	55	119.8
3	3.5	3.5	3	3	3	3	3	2.5	2.5	3	2.5	3	3	3	3.5	4	3.5	55.5	120.9
3	3.5	3.5	3	3	3	3	3	2.5	2.5	3	3	3	3	3	3.5	4	3.5	56	121.9
3.5	3.5	3.5	3	3	3	3	3	2.5	2.5	3	3	3	3	3	3.5	4	3.5	56.5	122.9
3.5	3.5	3.5	3.5	3	3	3	3	2.5	2.5	3	3	3	3	3	3.5	4	3.5	57	124.0
3.5	3.5	3.5	3.5	3	3	3	3	2.5	2.5	3	3	3	3	3	3.5	4	4	57.5	124.9
3.5	3.5	3.5	3.5	3	3	3	3	2.5	2.5	3	3	3	3	3.5	3.5	4	4	58	126.0
3.5	3.5	3.5	3.5	3	3	3	3	2.5	2.5	3	3	3	3	3.5	4	4	4	58.5	127.0
3.5	3.5	3.5	3.5	3	3	3	3	2.5	3	3	3	3	3	3.5	4	4	4	59	128.0
3.5	3.5	3.5	3.5	3	3	3	3	3	3	3	3	3	3	3.5	4	4	4	59.5	129.0
3.5	4	3.5	3.5	3	3	3	3	3	3	3	3	3	3	3.5	4	4	4	60	130.0
3.5	4	4	3.5	3	3	3	3	3	3	3	3	3	3	3.5	4	4	4	60.5	131.0
4	4	4	3.5	3	3	3	3	3	3	3	3	3	3	3.5	4	4	4	61	132.0
4	4	4	4	3	3	3	3	3	3	3	3	3	3	3.5	4	4	4	61.5	133.0
4	4	4	4	3	3	3	3	3	3	3	3	3	3	4	4	4	4	62	134.0
4	4	4	4	3	3.5	3	3	3	3	3	3	3	3	4	4	4	4	62.5	135.0
4	4	4	4	3.5	3.5	3	3	3	3	3	3	3	3	4	4	4	4	63	136.1
4	4	4	4	3.5	3.5	3	3	3	3	3	3	3.5	3	4	4	4	4	63.5	137.1
4	4	4	4	3.5	3.5	3	3	3	3	3	3	3.5	3.5	4	4	4	4	64	138.1
4	4	4	4	3.5	3.5	3	3	3	3	3	3	3.5	3.5	4	4	4.5	4	64.5	139.1
4	4	4	4	3.5	3.5	3.5	3	3	3	3	3	3.5	3.5	4	4	4.5	4	65	140.1
4	4	4	4	3.5	3.5	3.5	3	3	3	3	3.5	3.5	3.5	4	4	4.5	4	65.5	141.1
4	4	4	4	3.5	3.5	3.5	3	3	3	3	3.5	3.5	3.5	4	4.5	4.5	4	66	142.1
4	4.5	4	4	3.5	3.5	3.5	3	3	3	3	3.5	3.5	3.5	4	4.5	4.5	4	66.5	143.1
4	4.5	4.5	4	3.5	3.5	3.5	3	3	3	3	3.5	3.5	3.5	4	4.5	4.5	4	67	144.0
4	4.5	4.5	4	3.5	3.5	3.5	3	3	3.5	3	3.5	3.5	3.5	4	4.5	4.5	4	67.5	145.1
4	4.5	4.5	4	3.5	3.5	3.5	3.5	3	3.5	3	3.5	3.5	3.5	4	4.5	4.5	4	68	146.1
4	4.5	4.5	4	3.5	3.5	3.5	3.5	3	3.5	3.5	3.5	3.5	3.5	4	4.5	4.5	4	68.5	147.1
4	4.5	4.5	4	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	4	4.5	4.5	4	69	148.1
4	4.5	4.5	4	4	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	4	4.5	4.5	4	69.5	149.1
4	4.5	4.5	4	4	4	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	4	4.5	4.5	4	70	150.1
4	4.5	4.5	4	4	4	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	4	4	4.5	4.5	70.5	151.1
4	4.5	4.5	4	4	4	4	3.5	3.5	3.5	3.5	3.5	3.5	3.5	4	4	4.5	4.5	71	152.1
4	4.5	4.5	4	4	4	4	3.5	3.5	3.5	3.5	3.5	3.5	4	4	4	4.5	4.5	71.5	153.1
4	4.5	4.5	4	4	4	4	3.5	3.5	3.5	3.5	4	4	4	4	4.5	4.5	4	72	154.1
4	4.5	4.5	4	4	4	4	4	3.5	3.5	3.5	4	4	4	4	4.5	4.5	4	72.5	155.1
4	4.5	4.5	4	4	4	4	4	4	3.5	3.5	4	4	4	4	4.5	4.5	4	73	156.1
4	4.5	4.5	4	4	4	4	4	4	4	3.5	4	4	4	4	4.5	4.5	4	73.5	157.1
4	4.5	4.5	4	4	4	4	4	4	4	4	4	4	4	4	4.5	4.5	4	74	158.1
4	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4	4	4	4.5	4.5	4	74.5	159.1
4	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4	4	4	4.5	4.5	4	75	160.0
4	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4	4	4.5	4.5	4	75.5	161.0
4	4.5	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4.5	4.5	4.5	4	76	162.0
4	4.5	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4.5	4.5	4.5	4	76.5	163.0
4	4.5	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4.5	4.5	4.5	4	77	163.9
4	4.5	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4.5	4.5	4.5	5	77.5	164.9
4	5	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4.5	4.5	4.5	5	78	165.9
4	5	4.5	4.5	4.5	4.5	4	4	4	4	4	4	4	4	4.5	4.5	4.5	5	78.5	166.8

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcf/s)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
4	5	4.5	4.5	4.5	4.5	4.5	4	4	4	4	4.5	4.5	4.5	4.5	4.5	5	4	79	167.8
4	5	4.5	4.5	4.5	4.5	4.5	4	4	4	4	4.5	4.5	4.5	4.5	5	5	4	79.5	168.8
4	5	4.5	4.5	4.5	4.5	4.5	4	4	4	4.5	4.5	4.5	4.5	4.5	5	5	4	80	169.8
4	5	5	4.5	4.5	4.5	4.5	4	4	4	4.5	4.5	4.5	4.5	4.5	5	5	4	80.5	170.7
4	5	5	4.5	4.5	4.5	4.5	4	4	4	4.5	4.5	4.5	4.5	5	5	5	4	81	171.7
4	5	5	5	4.5	4.5	4.5	4	4	4	4.5	4.5	4.5	4.5	5	5	5	4	81.5	172.6
4	5	5	5	4.5	4.5	4.5	4	4.5	4	4.5	4.5	4.5	4.5	5	5	5	4	82	173.6
4	5	5	5	4.5	4.5	4.5	4	4.5	4	4.5	4.5	4.5	5	5	5	5	4	82.5	174.6
4	5	5	5	4.5	4.5	4.5	4.5	4.5	4	4.5	4.5	4.5	5	5	5	5	4	83	175.6
4	5	5	5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	5	5	5	5	4	83.5	176.5
4	5	5	5	4.5	5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	5	5	5	5	4	84	177.5
4	5	5	5	4.5	5	4.5	4.5	4.5	4.5	4.5	4.5	5	5	5	5	5	4	84.5	178.5
4	5	5	5	4.5	5	4.5	4.5	4.5	4.5	4.5	5	5	5	5	5	5	4	85	179.4
4	5	5	5	5	5	4.5	4.5	4.5	4.5	4.5	5	5	5	5	5	5	4	85.5	180.4
4	5	5	5	5	5	4.5	5	4.5	4.5	4.5	5	5	5	5	5	5	4	86	181.3
4	5	5	5	5	5	4.5	5	4.5	5	4.5	5	5	5	5	5	5	4	86.5	182.3
4	5	5	5	5	5	4.5	5	5	5	4.5	5	5	5	5	5	5	4	87	183.3
4	5	5	5	5	5	5	5	5	5	4.5	5	5	5	5	5	5	4	87.5	184.2
4	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	4	88	185.2
4	5.5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	4	88.5	186.1
4	5.5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5.5	4	89	187.1
4	5.5	5	5	5	5	5	5	5	5	5	5	5	5	5	5.5	5.5	4	89.5	188.0
4	5.5	5.5	5	5	5	5	5	5	5	5	5	5	5	5	5.5	5.5	4	90	189.0
4	5.5	5.5	5	5.5	5	5	5	5	5	5	5	5	5	5	5.5	5.5	4	90.5	189.9
4	5.5	5.5	5	5.5	5	5	5	5	5	5	5	5	5	5.5	5.5	5.5	4	91	190.8
4	5.5	5.5	5.5	5.5	5	5	5	5	5	5	5	5	5	5.5	5.5	5.5	4	91.5	191.8
4	5.5	5.5	5.5	5.5	5	5	5	5	5.5	5	5	5	5	5.5	5.5	5.5	4	92	192.7
4	5.5	5.5	5.5	5.5	5	5	5.5	5	5.5	5	5	5	5	5.5	5.5	5.5	4	92.5	193.7
4	5.5	5.5	5.5	5.5	5	5	5.5	5	5.5	5	5	5.5	5	5.5	5.5	5.5	4	93	194.6
4	5.5	5.5	5.5	5.5	5	5	5.5	5.5	5.5	5	5	5.5	5	5.5	5.5	5.5	4	93.5	195.6
4	5.5	5.5	5.5	5.5	5.5	5	5.5	5.5	5.5	5	5	5.5	5	5.5	5.5	5.5	4	94	196.5
4	5.5	5.5	5.5	5.5	5.5	5	5.5	5.5	5.5	5	5.5	5.5	5	5.5	5.5	5.5	4	94.5	197.5
4	5.5	5.5	5.5	5.5	5.5	5	5.5	5.5	5.5	5	5.5	5.5	5.5	5.5	5.5	5.5	4	95	198.4
4	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5	5.5	5.5	5.5	5.5	5.5	5.5	4	95.5	199.3
4	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	4	96	200.3
4	5.5	5.5	5.5	6	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	4	96.5	201.2
4	5.5	5.5	5.5	6	5.5	5.5	5.5	5.5	5.5	5.5	5.5	6	5.5	5.5	5.5	5.5	4	97	202.1
4	5.5	5.5	5.5	6	5.5	5.5	5.5	5.5	5.5	5.5	6	6	5.5	5.5	5.5	5.5	4	97.5	203.1
4	5.5	5.5	5.5	6	6	5.5	5.5	5.5	5.5	5.5	6	6	5.5	5.5	5.5	5.5	4	98	204.0
4	5.5	5.5	5.5	6	6	5.5	6	5.5	5.5	5.5	6	6	5.5	5.5	5.5	5.5	4	98.5	204.9
4	5.5	5.5	5.5	6	6	5.5	6	5.5	6	5.5	6	6	5.5	5.5	5.5	5.5	4	99	205.9
4	6	5.5	5.5	6	6	5.5	6	5.5	6	5.5	6	6	5.5	5.5	5.5	5.5	4	99.5	206.8
4	6	5.5	5.5	6	6	5.5	6	5.5	6	5.5	6	6	5.5	5.5	5.5	6	4	100	207.7
4	6	5.5	5.5	6	6	5.5	6	5.5	6	5.5	6	6	5.5	5.5	6	6	4	100.5	208.6
4	6	6	5.5	6	6	5.5	6	5.5	6	5.5	6	6	5.5	5.5	6	6	4	101	209.6
4	6	6	5.5	6	6	5.5	6	5.5	6	5.5	6	6	6	5.5	6	6	4	101.5	210.5
4	6	6	5.5	6	6	5.5	6	5.5	6	5.5	6	6	6	5.5	6	6	4.5	102	211.5
4.5	6	6	5.5	6	6	5.5	6	5.5	6	5.5	6	6	6	5.5	6	6	4.5	102.5	212.4
4.5	6	6	6	6	6	5.5	6	5.5	6	5.5	6	6	6	6	6	6	4.5	103	213.4
4.5	6	6	6	6	6	5.5	6	5.5	6	5.5	6	6	6	6	6	6	4.5	103.5	214.3
4.5	6	6	6	6	6	5.5	6	6	6	5.5	6	6	6	6	6	6	4.5	104	215.2
4.5	6	6	6	6	6	6	6	6	6	5.5	6	6	6	6	6	6	4.5	104.5	216.2

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcfs)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
4.5	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	4.5	105	217.1
4.5	6	6	6	6.5	6	6	6	6	6	6	6	6	6	6	6	6	4.5	105.5	218.0
4.5	6	6	6	6.5	6	6	6	6	6	6	6	6.5	6	6	6	6	4.5	106	218.9
4.5	6	6	6	6.5	6	6	6	6	6	6	6	6.5	6.5	6	6	6	4.5	106.5	219.8
4.5	6	6	6	6.5	6.5	6	6	6	6	6	6	6.5	6.5	6	6	6	4.5	107	220.7
4.5	6	6	6	6.5	6.5	6	6.5	6	6	6	6	6.5	6.5	6	6	6	4.5	107.5	221.6
4.5	6	6	6	6.5	6.5	6	6.5	6	6	6	6	6.5	6.5	6	6	6.5	4.5	108	222.6
4.5	6.5	6	6	6.5	6.5	6	6.5	6	6	6	6	6.5	6.5	6	6	6.5	4.5	108.5	223.5
4.5	6.5	6	6	6.5	6.5	6	6.5	6	6	6	6	6.5	6.5	6	6	6.5	4.5	109	224.4
4.5	6.5	6.5	6	6.5	6.5	6	6.5	6	6	6	6	6.5	6.5	6	6	6.5	4.5	109.5	225.3
4.5	6.5	6.5	6	6.5	6.5	6	6.5	6	6.5	6	6	6.5	6.5	6	6	6.5	4.5	110	226.2
4.5	6.5	6.5	6	6.5	6.5	6	6.5	6	6.5	6	6	6.5	6.5	6	6.5	6.5	4.5	110.5	227.1
4.5	6.5	6.5	6.5	6.5	6.5	6	6.5	6	6.5	6	6	6.5	6.5	6	6.5	6.5	4.5	111	228.0
4.5	6.5	6.5	6.5	6.5	6.5	6	6.5	6	6.5	6	6	6.5	6.5	6.5	6.5	6.5	4.5	111.5	228.9
4.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6	6.5	6	6	6.5	6.5	6.5	6.5	6.5	4.5	112	229.9
4.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	4.5	112.5	230.8
4.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	4.5	113	231.7
4.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5	113.5	232.6
5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5	114	233.6
5	6.5	6.5	6.5	7	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5	114.5	234.5
5	6.5	6.5	6.5	7	6.5	6.5	6.5	6.5	6.5	6.5	6.5	7	6.5	6.5	6.5	6.5	5	115	235.4
5	6.5	6.5	6.5	7	6.5	6.5	6.5	6.5	6.5	6.5	7	7	6.5	6.5	6.5	6.5	5	115.5	236.3
5	6.5	6.5	6.5	7	7	6.5	6.5	6.5	6.5	6.5	7	7	6.5	6.5	6.5	6.5	5	116	237.2
5	6.5	6.5	6.5	7	7	6.5	7	6.5	6.5	6.5	7	7	6.5	6.5	6.5	6.5	5	116.5	238.1
5	6.5	6.5	6.5	7	7	6.5	7	6.5	6.5	6.5	7	7	6.5	6.5	6.5	7	5	117	239.0
5	7	6.5	6.5	7	7	6.5	7	6.5	6.5	6.5	7	7	6.5	6.5	6.5	7	5	117.5	239.9
5	7	6.5	6.5	7	7	6.5	7	6.5	6.5	6.5	7	7	6.5	6.5	7	7	5	118	240.8
5	7	7	6.5	7	7	6.5	7	6.5	6.5	6.5	7	7	6.5	6.5	7	7	5	118.5	241.7
5	7	7	6.5	7	7	6.5	7	6.5	7	6.5	7	7	6.5	6.5	7	7	5	119	242.6
5	7	7	6.5	7	7	6.5	7	6.5	7	6.5	7	7	6.5	7	7	7	5	119.5	243.5
5	7	7	7	7	7	6.5	7	6.5	7	6.5	7	7	6.5	7	7	7	5	120	244.4
5	7	7	7	7	7	6.5	7	6.5	7	6.5	7	7	7	7	7	7	5	120.5	245.3
5	7	7	7	7	7	7	7	6.5	7	6.5	7	7	7	7	7	7	5	121	246.2
5	7	7	7	7	7	7	7	7	6.5	7	7	7	7	7	7	7	5	121.5	247.1
5	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	5	122	248.0
5	7	7	7	7.5	7	7	7	7	7	7	7	7	7	7	7	7	5	122.5	248.8
5	7	7	7	7.5	7	7	7	7	7	7	7	7	7	7	7	7	5	123	249.7
5	7	7	7	7.5	7	7	7	7	7	7	7	7.5	7.5	7	7	7	5	123.5	250.6
5	7	7	7	7.5	7.5	7	7	7	7	7	7	7.5	7.5	7	7	7	5	124	251.5
5	7	7	7	7.5	7.5	7	7.5	7	7	7	7	7.5	7.5	7	7	7	5	124.5	252.4
5	7	7	7	7.5	7.5	7	7.5	7	7	7	7	7.5	7.5	7	7	7.5	5	125	253.3
5	7	7.5	7	7.5	7.5	7	7.5	7	7	7	7	7.5	7.5	7	7	7.5	5	125.5	254.1
5	7	7.5	7	7.5	7.5	7	7.5	7	7.5	7	7.5	7.5	7	7	7.5	7	5	126	255.0
5	7	7.5	7	7.5	7.5	7	7.5	7	7.5	7	7.5	7.5	7	7.5	7.5	7	5	126.5	255.9
5	7	7.5	7.5	7.5	7.5	7	7.5	7	7.5	7	7.5	7.5	7	7.5	7.5	7	5	127	256.8
5	7	7.5	7.5	7.5	7.5	7	7.5	7	7.5	7	7.5	7.5	7.5	7.5	7.5	7	5	127.5	257.7
5	7	7.5	7.5	7.5	7.5	7.5	7.5	7	7.5	7	7.5	7.5	7.5	7.5	7.5	7	5	128	258.6
5	7	7.5	7.5	7.5	7.5	7.5	7.5	7	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7	5	128.5	259.5
5	7	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7	5	129	260.3
5	7	7.5	7.5	8	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7	5	129.5	261.2
5	7	7.5	7.5	8	7.5	7.5	7.5	7.5	7.5	7.5	7.5	8	7.5	7.5	7.5	7	5	130	262.1
5	7	7.5	7.5	8	7.5	7.5	7.5	7.5	7.5	7.5	8	8	7.5	7.5	7.5	7	5	130.5	262.9

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcfs)	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18			
5	7	7.5	7.5	8	8	7.5	7.5	7.5	7.5	7.5	8	8	7.5	7.5	7.5	7	5	131	263.8	
5	7	7.5	7.5	8	8	7.5	8	7.5	7.5	7.5	8	8	7.5	7.5	7.5	7	5	131.5	264.7	
5	7	7.5	7.5	8	8	7.5	8	7.5	7.5	7.5	8	8	7.5	7.5	7.5	7.5	5	132	265.6	
5	7.5	7.5	7.5	8	8	7.5	8	7.5	7.5	7.5	8	8	7.5	7.5	7.5	7.5	5	132.5	266.5	
5	7.5	7.5	7.5	8	8	7.5	8	7.5	7.5	7.5	8	8	7.5	7.5	8	7.5	5	133	267.3	
5	7.5	8	7.5	8	8	7.5	8	7.5	7.5	7.5	8	8	7.5	7.5	8	7.5	5	133.5	268.2	
5	7.5	8	7.5	8	8	7.5	8	7.5	8	7.5	8	8	7.5	7.5	8	7.5	5	134	269.1	
5	7.5	8	7.5	8	8	7.5	8	7.5	8	7.5	8	8	7.5	8	8	7.5	5	134.5	269.9	
5	7.5	8	8	8	8	7.5	8	7.5	8	7.5	8	8	7.5	8	8	7.5	5	135	270.8	
5	7.5	8	8	8	8	7.5	8	7.5	8	7.5	8	8	8	8	8	7.5	5	135.5	271.7	
5	7.5	8	8	8	8	8	8	7.5	8	7.5	8	8	8	8	8	7.5	5	136	272.5	
5	7.5	8	8	8	8	8	8	8	7.5	8	8	8	8	8	8	7.5	5	136.5	273.4	
5	7.5	8	8	8	8	8	8	8	8	8	8	8	8	8	8	7.5	5	137	274.3	
5	7.5	8	8	8.5	8	8	8	8	8	8	8	8	8	8	8	7.5	5	137.5	275.1	
5	7.5	8	8	8.5	8	8	8	8	8	8	8	8.5	8	8	8	7.5	5	138	276.0	
5	7.5	8	8	8.5	8	8	8	8	8	8	8	8.5	8.5	8	8	7.5	5	138.5	276.9	
5	7.5	8	8	8.5	8.5	8	8	8	8	8	8	8.5	8.5	8	8	7.5	5	139	277.7	
5	7.5	8	8	8.5	8.5	8	8.5	8	8	8	8	8.5	8.5	8	8	7.5	5	139.5	278.6	
5	7.5	8	8	8.5	8.5	8	8.5	8	8	8	8	8.5	8.5	8	8	8	5	140	279.5	
5	8	8	8	8.5	8.5	8	8.5	8	8	8	8	8.5	8.5	8	8	8	5	140.5	280.3	
5	8	8	8	8.5	8.5	8	8.5	8	8	8	8	8.5	8.5	8	8	8.5	8	5	141	281.2
5	8	8.5	8	8.5	8.5	8	8.5	8	8	8	8	8.5	8.5	8	8	8.5	8	5	141.5	282.0
5	8	8.5	8	8.5	8.5	8	8.5	8	8.5	8	8.5	8.5	8	8	8.5	8	5	142	282.9	
5	8	8.5	8	8.5	8.5	8	8.5	8	8.5	8	8.5	8.5	8	8.5	8.5	8	5	142.5	283.8	
5	8	8.5	8.5	8.5	8.5	8	8.5	8	8.5	8	8.5	8.5	8	8.5	8.5	8	5	143	284.6	
5	8	8.5	8.5	8.5	8.5	8	8.5	8	8.5	8	8.5	8.5	8.5	8.5	8.5	8	5	143.5	285.5	
5	8	8.5	8.5	8.5	8.5	8.5	8.5	8	8.5	8	8.5	8.5	8.5	8.5	8.5	8	5	144	286.3	
5	8	8.5	8.5	8.5	8.5	8.5	8.5	8	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8	5	144.5	287.2	
5	8	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8	5	145	288.1	
5	8	8.5	8.5	9	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8	5	145.5	288.9	
5	8	8.5	8.5	9	8.5	8.5	8.5	8.5	8.5	8.5	8.5	9	8.5	8.5	8.5	8	5	146	289.7	
5	8	8.5	8.5	9	8.5	8.5	8.5	8.5	8.5	8.5	9	9	8.5	8.5	8.5	8	5	146.5	290.6	
5	8	8.5	8.5	9	9	8.5	9	8.5	8.5	8.5	9	9	8.5	8.5	8.5	8	5	147	291.4	
5	8	8.5	8.5	9	9	8.5	9	9	8.5	8.5	9	9	8.5	8.5	8.5	8	5	147.5	292.3	
5	8	8.5	8.5	9	9	8.5	9	9	8.5	8.5	9	9	8.5	8.5	8.5	8	5	148	293.1	
5	8	8.5	8.5	9	9	8.5	9	9	9	8.5	9	9	8.5	8.5	8.5	8	5	148.5	294.0	
5	8	8.5	8.5	9	9	9	9	9	9	9	9	9	8.5	8.5	8.5	8	5	149	294.8	
5	8	8.5	8.5	9	9	9	9	9	9	9	9	9	8.5	8.5	8.5	8	5	149.5	295.7	
5	8	8.5	8.5	9	9	9	9	9	9	9	9	9	9	9	8.5	8	5	150	296.5	
5	8	8.5	9	9	9	9	9	9	9	9	9	9	9	9	8.5	8	5	151	298.2	
5	8	8.5	9	9	9	9	9	10	9	9	9	9	9	9	8.5	8	5	152	299.9	
5	8	8.5	9	9	9	9	9	10	10	9	9	9	9	9	8.5	8	5	153	301.5	
5	8	8.5	9	9	9	9	10	10	10	10	9	9	9	9	8.5	8	5	154	303.2	
5	8	8.5	9	9	9	9	10	10	10	10	10	9	9	9	8.5	8	5	155	304.9	
5	8	8.5	9	9	9	9	10	11	10	10	10	9	9	9	8.5	8	5	156	306.5	
5	8	8.5	9	9	9	9	10	11	11	11	10	9	9	9	8.5	8	5	157	308.1	
5	8	8.5	9	9	9	10	10	11	11	11	10	9	9	9	8.5	8	5	158	309.8	
5	8	8.5	9	9	9	10	11	11	11	11	10	10	9	9	8.5	8	5	160	313.1	
5	8	8.5	9	9	9	10	11	11	11	11	11	10	9	9	8.5	8	5	161	314.7	
5	8	8.5	9	9	9	10	11	12	11	11	10	9	9	9	8.5	8	5	162	316.3	
5	8	8.5	9	9	9	10	11	12	12	11	10	9	9	9	8.5	8	5	163	317.9	

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcf/s)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
5	8	8.5	9	9	10	10	11	12	12	11	10	9	9	9	8.5	8	5	164	319.6
5	8	8.5	9	9	10	10	11	12	12	11	10	10	9	9	8.5	8	5	165	321.2
5	8	8.5	9	9	10	11	11	12	12	11	10	10	9	9	8.5	8	5	166	322.8
5	8	8.5	9	9	10	11	11	12	12	11	11	10	9	9	8.5	8	5	167	324.5
5	8	8.5	9	9	10	11	12	12	12	11	11	10	9	9	8.5	8	5	168	326.1
5	8	8.5	9	9	10	11	12	12	12	12	11	10	9	9	8.5	8	5	169	327.7
5	8	8.5	9	9	10	11	12	13	12	12	11	10	9	9	8.5	8	5	170	329.2
5	8	8.5	9	9	10	11	12	13	13	12	11	10	9	9	8.5	8	5	171	330.8
5	8	8.5	9	10	10	11	12	13	13	12	11	10	9	9	8.5	8	5	172	332.5
5	8	8.5	9	10	10	11	12	13	13	12	11	10	10	9	8.5	8	5	173	334.1
5	8	8.5	9	10	11	11	12	13	13	12	11	10	10	9	8.5	8	5	174	335.8
5	8	8.5	9	10	11	11	12	13	13	12	11	11	10	9	8.5	8	5	175	337.4
5	8	8.5	9	10	11	12	12	13	13	12	11	11	10	9	8.5	8	5	176	339.0
5	8	8.5	9	10	11	12	12	13	13	12	12	11	10	9	8.5	8	5	177	340.6
5	8	8.5	9	10	11	12	13	13	13	12	12	11	10	9	8.5	8	5	178	342.2
5	8	8.5	9	10	11	12	13	13	13	13	12	11	10	9	8.5	8	5	179	343.7
5	8	8.5	9	10	11	12	13	14	13	13	12	11	10	9	8.5	8	5	180	345.3
5	8	8.5	9	10	11	12	13	14	14	13	12	11	10	9	8.5	8	5	181	346.8
5	8	8.5	9	10	11	12	13	15	14	13	12	11	10	9	8.5	8	5	182	348.4
5	8	8.5	9	10	11	12	14	15	15	13	12	11	10	9	8.5	8	5	184	351.5
5	8	8.5	9	10	11	12	14	15	15	14	12	11	10	9	8.5	8	5	185	353.1
5	8	8.5	9	10	11	13	14	15	15	14	12	11	10	9	8.5	8	5	186	354.6
5	8	8.5	9	10	11	13	14	15	15	14	13	11	10	9	8.5	8	5	187	356.2
5	8	8.5	9	10	12	13	14	15	15	14	13	11	10	9	8.5	8	5	188	357.8
5	8	8.5	9	10	12	13	14	15	15	14	13	12	10	9	8.5	8	5	189	359.4
5	8	8.5	9	10	12	13	14	16	15	14	13	12	10	9	8.5	8	5	190	360.9
5	8	8.5	9	10	12	13	14	16	16	14	13	12	10	9	8.5	8	5	191	362.5
5	8	8.5	9	10	12	13	15	16	16	14	13	12	10	9	8.5	8	5	192	364.0
5	8	8.5	9	10	12	13	15	16	16	15	13	12	10	9	8.5	8	5	193	365.6
5	8	8.5	9	10	12	14	15	16	16	15	13	12	10	9	8.5	8	5	194	367.1
5	8	8.5	9	10	12	14	15	16	16	15	14	12	10	9	8.5	8	5	195	368.7
5	8	8.5	9	10	12	14	15	17	16	15	14	12	10	9	8.5	8	5	196	370.2
5	8	8.5	9	10	12	14	15	17	17	15	14	12	10	9	8.5	8	5	197	371.8
5	8	8.5	9	10	12	14	16	17	17	15	14	12	10	9	8.5	8	5	198	373.3
5	8	8.5	9	10	12	14	16	17	17	16	14	12	10	9	8.5	8	5	199	374.9
5	8	8.5	9	10	12	14	16	18	17	16	14	12	10	9	8.5	8	5	200	376.4
5	8	8.5	9	10	12	14	16	18	18	16	14	12	10	9	8.5	8	5	201	378.0
5	8	8.5	9	11	12	14	16	18	18	16	14	12	10	9	8.5	8	5	202	379.6
5	8	8.5	9	11	12	14	16	18	18	16	14	12	11	9	8.5	8	5	203	381.2
5	8	8.5	9	11	13	14	16	18	18	16	14	12	11	9	8.5	8	5	204	382.8
5	8	8.5	9	11	13	14	16	18	18	16	14	13	11	9	8.5	8	5	205	384.4
5	8	8.5	9	11	13	15	16	18	18	16	14	13	11	9	8.5	8	5	206	385.9
5	8	8.5	9	11	13	15	16	18	18	16	15	13	11	9	8.5	8	5	207	387.4
5	8	8.5	9	11	13	15	17	18	18	16	15	13	11	9	8.5	8	5	208	389.0
5	8	8.5	9	11	13	15	17	18	18	17	15	13	11	9	8.5	8	5	209	390.5
5	8	8.5	9	11	13	15	17	19	18	17	15	13	11	9	8.5	8	5	210	392.1

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcf/s)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
5	8	8.5	9	11	13	15	17	19	19	17	15	13	11	9	8.5	8	5	211	393.7
5	8	8.5	10	11	13	15	17	19	19	17	15	13	11	9	8.5	8	5	212	395.3
5	8	8.5	10	11	13	15	17	19	19	17	15	13	11	10	8.5	8	5	213	397.0
5	8	8.5	10	12	13	15	17	19	19	17	15	13	11	10	8.5	8	5	214	398.6
5	8	8.5	10	12	13	15	17	19	19	17	15	13	12	10	8.5	8	5	215	400.2
5	8	8.5	10	12	14	15	17	19	19	17	15	13	12	10	8.5	8	5	216	401.7
5	8	8.5	10	12	14	15	17	19	19	17	15	14	12	10	8.5	8	5	217	403.3
5	8	8.5	10	12	14	16	17	19	19	17	15	14	12	10	8.5	8	5	218	404.8
5	8	8.5	10	12	14	16	17	19	19	17	16	14	12	10	8.5	8	5	219	406.4
5	8	8.5	10	12	14	16	18	19	19	17	16	14	12	10	8.5	8	5	220	407.9
5	8	8.5	10	12	14	16	18	19	19	18	16	14	12	10	8.5	8	5	221	409.5
5	8	8.5	10	12	14	16	18	20	19	18	16	14	12	10	8.5	8	5	222	411.1
5	8	8.5	10	13	14	16	18	20	20	18	16	14	12	10	8.5	8	5	224	414.2
5	8	8.5	10	13	14	16	18	20	20	18	16	14	13	10	8.5	8	5	225	415.8
5	8	8.5	10	13	15	16	18	20	20	18	16	14	13	10	8.5	8	5	226	417.4
5	8	8.5	10	13	15	16	18	20	20	18	16	15	13	10	8.5	8	5	227	418.9
5	8	8.5	10	13	15	17	18	20	20	18	16	15	13	10	8.5	8	5	228	420.4
5	8	8.5	10	13	15	17	18	20	20	18	17	15	13	10	8.5	8	5	229	422.0
5	8	8.5	10	13	15	17	19	20	20	18	17	15	13	10	8.5	8	5	230	423.6
5	8	8.5	10	13	15	17	19	20	20	19	17	15	13	10	8.5	8	5	231	425.1
5	8	8.5	10	13	15	17	19	21	20	19	17	15	13	10	8.5	8	5	232	426.7
5	8	8.5	10	13	15	17	19	21	21	19	17	15	13	10	8.5	8	5	233	428.3
5	8	8.5	10	13	16	17	19	21	21	19	17	15	13	10	8.5	8	5	234	429.9
5	8	8.5	10	13	16	17	19	21	21	19	17	16	13	10	8.5	8	5	235	431.4
5	8	8.5	10	13	16	18	19	21	21	19	17	16	13	10	8.5	8	5	236	433.0
5	8	8.5	10	13	16	18	19	21	21	19	18	16	13	10	8.5	8	5	237	434.5
5	8	8.5	10	13	16	18	20	21	21	19	18	16	13	10	8.5	8	5	238	436.1
5	8	8.5	10	13	16	18	20	21	21	20	18	16	13	10	8.5	8	5	239	437.7
5	8	8.5	10	13	16	18	20	22	21	20	18	16	13	10	8.5	8	5	240	439.4
5	8	8.5	10	13	16	18	20	22	22	20	18	16	13	10	8.5	8	5	241	441.0
5	8	8.5	10	13	16	19	20	22	22	20	18	16	13	10	8.5	8	5	242	442.6
5	8	8.5	10	13	16	19	20	22	22	20	19	16	13	10	8.5	8	5	243	444.1
5	8	8.5	10	13	16	19	21	22	22	20	19	16	13	10	8.5	8	5	244	445.8
5	8	8.5	10	13	16	19	21	22	22	21	19	16	13	10	8.5	8	5	245	447.4
5	8	8.5	10	13	16	19	21	23	22	21	19	16	13	10	8.5	8	5	246	449.1
5	8	8.5	10	13	16	19	21	23	23	21	19	16	13	10	8.5	8	5	247	450.7
5	8	8.5	10	13	16	19	22	23	23	21	19	16	13	10	8.5	8	5	248	452.4
5	8	8.5	10	13	16	19	22	23	23	22	19	16	13	10	8.5	8	5	249	454.0
5	8	8.5	10	13	16	19	22	24	23	22	19	16	13	10	8.5	8	5	250	455.8
5	8	8.5	10	13	16	19	22	24	24	22	19	16	13	10	8.5	8	5	251	457.5
5	8	8.5	10	13	16	19	22	25	24	22	19	16	13	10	8.5	8	5	252	459.3
5	8	8.5	10	13	16	19	22	25	25	22	19	16	13	10	8.5	8	5	253	461.1
5	8	8.5	11	13	16	19	22	25	25	22	19	16	13	10	8.5	8	5	254	462.7
5	8	8.5	11	13	16	19	22	25	25	22	19	16	13	11	8.5	8	5	255	464.3
5	8	8.5	11	14	16	19	22	25	25	22	19	16	13	11	8.5	8	5	256	465.9
5	8	8.5	11	14	16	19	22	25	25	22	19	16	14	11	8.5	8	5	257	467.5

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcf/s)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
5	8	8.5	11	14	17	19	22	25	25	22	19	16	14	11	8.5	8	5	258	469.0
5	8	8.5	11	14	17	19	22	25	25	22	19	17	14	11	8.5	8	5	259	470.5
5	8	8.5	11	14	17	20	22	25	25	22	19	17	14	11	8.5	8	5	260	472.1
5	8	8.5	11	14	17	20	22	25	25	22	20	17	14	11	8.5	8	5	261	473.7
5	8	8.5	11	14	17	20	23	25	25	22	20	17	14	11	8.5	8	5	262	475.4
5	8	8.5	11	14	17	20	23	25	25	23	20	17	14	11	8.5	8	5	263	477.1
5	8	8.5	11	14	17	20	23	26	25	23	20	17	14	11	8.5	8	5	264	478.9
5	8	8.5	11	14	17	20	23	26	26	23	20	17	14	11	8.5	8	5	265	480.8
5	8	10	11	14	17	20	23	26	26	23	20	17	14	11	8.5	8	5	266.5	483.3
5	8	10	11	14	17	20	23	26	26	23	20	17	14	11	10	8	5	268	485.8
5	8	10	12	14	17	20	23	26	26	23	20	17	14	11	10	8	5	269	487.4
5	8	10	12	14	17	20	23	26	26	23	20	17	14	12	10	8	5	270	489.0
5	8	10	12	15	17	20	23	26	26	23	20	17	14	12	10	8	5	271	490.5
5	8	10	12	15	17	20	23	26	26	23	20	17	15	12	10	8	5	272	492.1
5	8	10	12	15	18	20	23	26	26	23	20	17	15	12	10	8	5	273	493.6
5	8	10	12	15	18	20	23	26	26	23	20	18	15	12	10	8	5	274	495.2
5	8	10	12	15	18	21	23	26	26	23	20	18	15	12	10	8	5	275	496.8
5	8	10	12	15	18	21	23	26	26	23	21	18	15	12	10	8	5	276	498.4
5	8	10	12	15	18	21	24	26	26	23	21	18	15	12	10	8	5	277	500.2
5	8	10	12	15	18	21	24	26	26	24	21	18	15	12	10	8	5	278	501.9
5	8	11	12	15	18	21	24	26	26	24	21	18	15	12	10	8	5	279	503.5
5	8	11	12	15	18	21	24	26	26	24	21	18	15	12	11	8	5	280	505.2
5	8	11	13	15	18	21	24	26	26	24	21	18	15	12	11	8	5	281	506.7
5	8	11	13	15	18	21	24	26	26	24	21	18	15	13	11	8	5	282	508.3
5	8	11	13	16	18	21	24	26	26	24	21	18	15	13	11	8	5	283	509.8
5	8	11	13	16	18	21	24	26	26	24	21	18	16	13	11	8	5	284	511.4
5	8	11	13	16	19	21	24	26	26	24	21	18	16	13	11	8	5	285	512.9
5	8	11	13	16	19	21	24	26	26	24	21	19	16	13	11	8	5	286	514.5
5	8	11	13	16	19	22	24	26	26	24	21	19	16	13	11	8	5	287	516.2
5	8	11	13	16	19	22	24	26	26	24	22	19	16	13	11	8	5	288	517.8
5	8	11	13	16	19	22	25	26	26	24	22	19	16	13	11	8	5	289	519.6
5	8	11	13	16	19	22	25	26	26	25	22	19	16	13	11	8	5	290	521.4
5	8	11	13	16	20	22	25	26	26	25	22	19	16	13	11	8	5	291	523.0
5	8	11	13	16	20	22	25	26	26	25	22	20	16	13	11	8	5	292	524.6
5	8	11	13	16	20	23	25	26	26	25	22	20	16	13	11	8	5	293	526.3
5	8	11	13	16	20	23	25	26	26	25	23	20	16	13	11	8	5	294	527.9
5	8	11	13	16	20	23	26	26	26	25	23	20	16	13	11	8	5	295	529.8
5	8	11	13	16	20	23	26	26	26	26	23	20	16	13	11	8	5	296	531.6
6	8	11	13	16	20	23	26	26	26	26	23	20	16	13	11	8	5	297	533.5
6	8	11	13	16	20	23	26	26	26	26	23	20	16	13	11	8	6	298	535.4
6	9	11	13	16	20	23	26	26	26	26	23	20	16	13	11	8	6	299	537.1
6	9	11	13	16	20	23	26	26	26	26	23	20	16	13	11	9	6	300	538.8
6	9	12	13	16	20	23	26	26	26	26	23	20	16	13	11	9	6	301	540.4
6	9	12	13	16	20	23	26	26	26	26	23	20	16	13	12	9	6	302	542.0
6	9	12	14	16	20	23	26	26	26	26	23	20	16	13	12	9	6	303	543.5
6	9	12	14	16	20	23	26	26	26	26	23	20	16	14	12	9	6	304	545.1

BON Spill Patterns - Vertical Gate Opening (ft) per Spillbay																		Total Open (ft)	Spill ^a (kcf/s)
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
6	9	12	14	17	20	23	26	26	26	26	23	20	16	14	12	9	6	305	546.6
6	9	12	14	17	20	23	26	26	26	26	23	20	17	14	12	9	6	306	548.2
6	9	12	14	17	21	23	26	26	26	26	23	20	17	14	12	9	6	307	549.8
6	9	12	14	17	21	23	26	26	26	26	23	21	17	14	12	9	6	308	551.4
6	9	12	14	17	21	24	26	26	26	26	23	21	17	14	12	9	6	309	553.1
6	9	12	14	17	21	24	26	26	26	26	24	21	17	14	12	9	6	310	554.9
7	9	12	14	17	21	24	26	26	26	26	24	21	17	14	12	9	6	311	556.7
7	9	12	14	17	21	24	26	26	26	26	24	21	17	14	12	9	7	312	558.5
7	10	12	14	17	21	24	26	26	26	26	24	21	17	14	12	9	7	313	560.2
7	10	12	14	17	21	24	26	26	26	26	24	21	17	14	12	10	7	314	561.8
7	10	13	14	17	21	24	26	26	26	26	24	21	17	14	12	10	7	315	563.4
7	10	13	14	17	21	24	26	26	26	26	24	21	17	14	13	10	7	316	565.0
7	10	13	15	17	21	24	26	26	26	26	24	21	17	14	13	10	7	317	566.5
7	10	13	15	17	21	24	26	26	26	26	24	21	17	15	13	10	7	318	568.1
7	10	13	15	18	21	24	26	26	26	26	24	21	17	15	13	10	7	319	569.6
7	10	13	15	18	21	24	26	26	26	26	24	21	18	15	13	10	7	320	571.2
8	10	13	15	18	21	24	26	26	26	26	24	21	18	15	13	10	7	321	572.9
8	10	13	15	18	21	24	26	26	26	26	24	21	18	15	13	10	8	322	574.7
8	11	13	15	18	21	24	26	26	26	26	24	21	18	15	13	10	8	323	576.3
8	11	13	15	18	21	24	26	26	26	26	24	21	18	15	13	11	8	324	577.9
8	11	14	15	18	21	24	26	26	26	26	24	21	18	15	13	11	8	325	579.5
8	11	14	15	18	21	24	26	26	26	26	24	21	18	15	14	11	8	326	581.0
8	11	14	16	18	21	24	26	26	26	26	24	21	18	15	14	11	8	327	582.6
8	11	14	16	18	21	24	26	26	26	26	24	21	18	16	14	11	8	328	584.1
8	11	14	16	19	21	24	26	26	26	26	24	21	18	16	14	11	8	329	585.7
8	11	14	16	19	21	24	26	26	26	26	24	21	19	16	14	11	8	330	587.3
8	11	14	16	19	22	24	26	26	26	26	24	21	19	16	14	11	8	331	588.9
8	11	14	16	19	22	24	26	26	26	26	24	22	19	16	14	11	8	332	590.6
8	11	14	16	19	22	25	26	26	26	26	25	22	19	16	14	11	8	334	594.1
8	12	14	16	19	22	25	26	26	26	26	25	22	19	16	14	11	8	335	595.7
8	12	14	16	19	22	25	26	26	26	26	25	22	19	16	14	12	8	336	597.3
8	12	15	16	19	22	25	26	26	26	26	25	22	19	16	14	12	8	337	598.9
8	12	15	16	19	22	25	26	26	26	26	25	22	19	16	15	12	8	338	600.4
8	12	15	17	19	22	25	26	26	26	26	25	22	19	16	15	12	8	339	602.0
8	12	15	17	19	22	25	26	26	26	26	25	22	19	17	15	12	8	340	603.5
8	12	15	17	20	22	25	26	26	26	26	25	22	19	17	15	12	8	341	605.1
8	12	15	17	20	22	25	26	26	26	26	25	22	20	17	15	12	8	342	606.7