
2020 Fish Passage Plan

Chapter 8 – Little Goose Dam

Table of Contents

1. FISH PASSAGE INFORMATION.....	4
1.1. JUVENILE FISH FACILITIES AND MIGRATION TIMING.	4
1.2. ADULT FISH FACILITIES AND MIGRATION TIMING.	6
2. FISH FACILITIES OPERATIONS.....	8
2.1. GENERAL.....	8
2.2. SPILL MANAGEMENT.	8
2.3. OPERATING CRITERIA – JUVENILE FISH FACILITIES.....	9
2.4. OPERATING CRITERIA - ADULT FISH FACILITIES.....	15
2.5. FISH FACILITY MONITORING & REPORTING.	18
3. FISH FACILITIES MAINTENANCE	19
3.1. DEWATERING & FISH HANDLING	19
3.2. MAINTENANCE - JUVENILE FISH FACILITIES.....	19
3.3. MAINTENANCE - ADULT FISH FACILITIES.....	22
4. TURBINE UNIT OPERATION & MAINTENANCE	24
4.1. TURBINE UNIT PRIORITY ORDER.	24
4.2. TURBINE UNIT OPERATING RANGE.....	24
4.3. TURBINE UNIT MAINTENANCE.....	25
5. FOREBAY DEBRIS REMOVAL	29

Chapter 8 - Little Goose Dam

Project Acronym*	LGS
River Mile (RM)	Snake River - RM 70.3
Reservoir	Lake Bryan
Minimum Instantaneous Flow (kcfs)	Dec–Feb: 0 kcfs \ Mar–Nov: 11.5 kcfs
Forebay Normal Operating Range (ft)	633' – 638'
Tailrace Rate of Change Limit (ft)	1.5'/hr
Powerhouse Length (ft)	656'
Powerhouse Hydraulic Capacity (kcfs)	130 kcfs
Turbine Units (#)	6 (Units 1-3 BLH Kaplan; Units 4-6 Allis Chalmers Kaplan)
Turbine Generating Capacity (MW)	Rated: 810 MW (Units 1-6 @ 135 MW) \ Maximum: 930 MW (Units 1-6 @ 155 MW)
Gatewell Orifice Diameter (in)	35 gatewells w/ 12" orifice; 1 gatewell w/ 14" orifice
Spillway Length (ft)	512'
Spillway Hydraulic Capacity (kcfs)	850 kcfs
Spillbays (#)	8
Spillway Weirs (#)	1 Adjustable Spillway Weir (ASW) in Bay 1 w/ high crest (el. 622 ft) or low crest (el. 618 ft).
Navigation Lock Length x Width (ft)	650' x 84' (Usable Space)
Navigation Lock Max. Lift (ft)	101'
FISH STRUCTURE/OPERATION START DATE	
Juvenile Bypass System (JBS)	1970 (1 st Generation) \ 1989 (2 nd Generation) \ 2010 Outfall Flume Relocation
Submersible Traveling Screens (STS)	1971 (Prototype Mesh) \ 1994 (Complete)
Extended-Length Submersible Bar Screens (ESBS)	1997
Transportation Research Program - NMFS	1971-1975
Juvenile Fish Transportation Program - Corps	1981 \ 1991 (3 rd Generation)
Adjustable Spillway Weir (ASW)	2009 \ 2018 (replaced with Adjustable Spillway Weir)
Adult Fish Counts – South Shore	1970-1981; 1991-present

*Project acronym designated by US Army Corps of Engineers, Northwestern Division, Columbia Basin Water Management Division. Due to the large number of projects managed by NWD, this acronym may differ from other acronyms used in the region. For example, a common acronym for Little Goose is **LGO**. However, that acronym is assigned to another NWD project, so the official Corps NWD acronym is **LGS**.

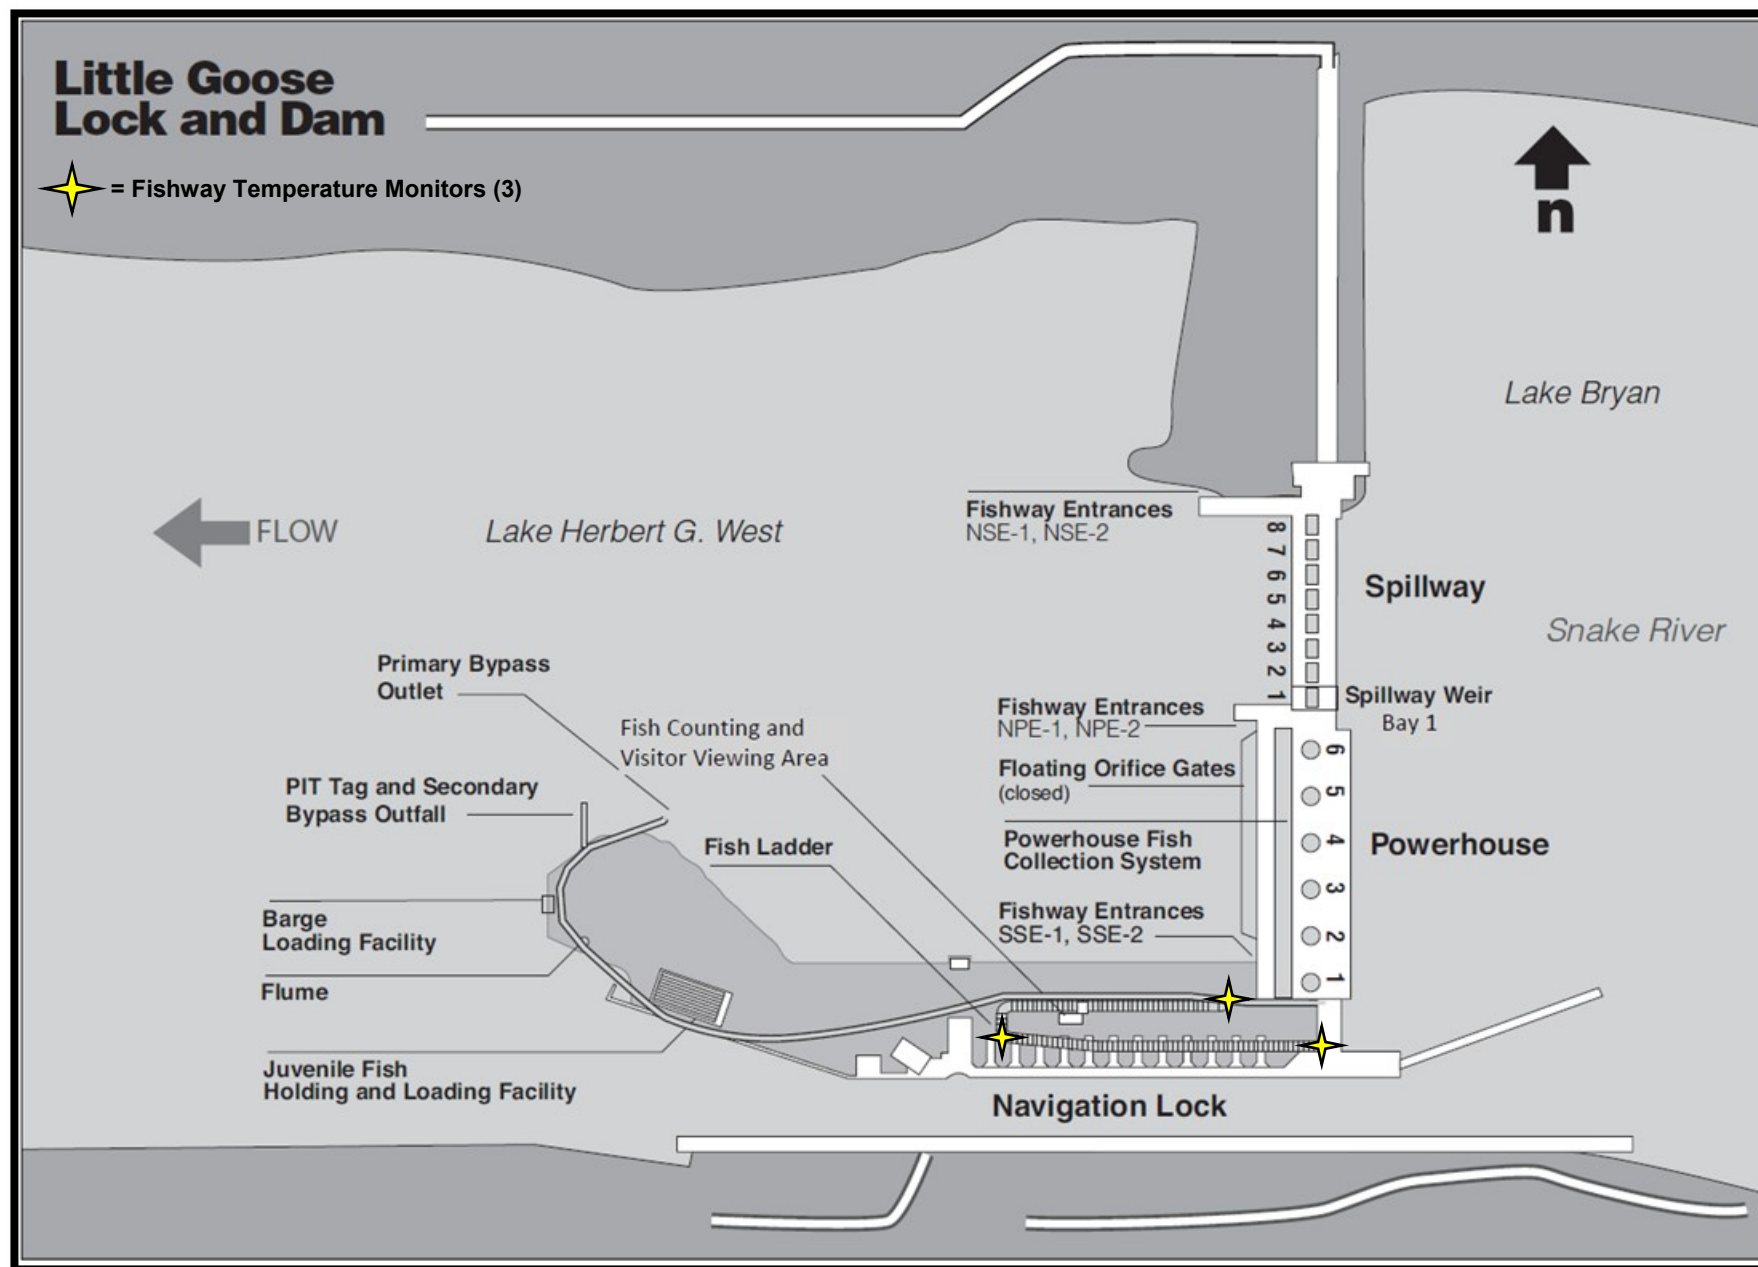


Figure LGS-1. Little Goose Lock & Dam General Site Plan.

Table LGS-1. Little Goose Dam Schedule of Operations and Actions Defined in the 2020 Fish Passage Plan.

Task Name	Start	End	FPP Section	2020												2021		
				Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec	Jan	Feb	Mar
FISH PASSAGE FACILITIES	Sun 3/1/20	Wed 3/31/21																
Adult Facilities - Fish Passage Season	Sun 3/1/20	Thu 12/31/20	2.4.2															
Adult Facilities - Winter Maintenance	Fri 1/1/21	Sun 2/28/21	2.4.1															
Juvenile Facilities - Fish Passage Season	Wed 4/1/20	Tue 12/15/20	2.3.2															
Juvenile Facilities - Winter Maintenance	Sun 3/1/20	Tue 3/31/20	2.3.1															
	Wed 12/16/20	Wed 3/31/21																
PROJECT OPERATIONS FOR FISH PASSAGE	Sun 3/1/20	Tue 12/15/20																
Turbine unit priority order	Sun 3/1/20	Mon 11/30/20	Table LGS-5															
Turbine unit 1% operating range	Wed 4/1/20	Sat 10/31/20	4.2															
Avian hazing	Mon 3/30/20	Sat 6/20/20	App L 8.2															
Spring Spill	Fri 4/3/20	Sat 6/20/20	App E (FOP)															
Spillway weir in service (end date approx)	Fri 4/3/20	Sat 8/1/20	2.3.2.7															
Summer Spill	Sun 6/21/20	Mon 8/31/20	App E (FOP)															
ESBS removal during cold weather	Thu 11/26/20	Sun 12/20/20	2.3.2.2															
SPECIAL OPS & STUDIES (Appendix A)	Sat 3/7/20	Mon 11/30/20																
Navigation Lock annual outage	Sat 3/7/20	Sun 4/5/20	App A 1.4															
XJO Breaker Replacement	Mon 3/16/20	Fri 3/27/20	App A 8.1															
Doble testing	Mon 7/27/20	Thu 8/6/20	App A 1.5															
OPTO 22 Upgrade (approx dates)	Tue 9/1/20	Mon 11/30/20	App A 1.5															
TDG MONITORING	Sun 3/1/20	Sun 2/28/21																
TDG Monitoring - Tailrace (LGSW)	Sun 3/1/20	Sun 2/28/21	2.2.5															
TDG Monitoring - Forebay (LGSA)	Wed 4/1/20	Mon 8/31/20	2.2.5															
ADULT FISH COUNTING	Wed 4/1/20	Sat 10/31/20																
Day Visual 0500-2100 PDT	Wed 4/1/20	Sat 10/31/20	Table LGS-3															
REPORTS	Sun 3/1/20	Mon 3/15/21																
Weekly Reports	Sun 3/1/20	Thu 12/31/20	2.5.2															
Annual Report due	Mon 3/15/21	Mon 3/15/21	2.5.3															

1. FISH PASSAGE INFORMATION

Little Goose Dam fish passage facilities and other structures are shown in **Figure LGS-1**. The schedule of Little Goose Dam operations that are described in the Fish Passage Plan (FPP) and Appendices is in **Table LGS-1**.

1.1. Juvenile Fish Facilities and Migration Timing.

1.1.1. Juvenile Fish Facilities. The juvenile fish facilities at Little Goose Dam consist of a bypass system and juvenile transportation facilities. Maintenance of fish facilities that may impact fish or facility operation should be conducted during the winter maintenance period.

i. The bypass system consists of extended-length submersible bar screens (ESBS) with flow vanes, vertical barrier screens (VBS), one 14" and thirty-five 12" gatewell orifices, a bypass channel running the length of the powerhouse, a metal flume mounted on the face of the dam and upper end of the fish ladder, a dewatering structure to drain excess water, two emergency bypass systems, and one corrugated metal flume to transport fish to either transportation facilities or the river.

ii. The transportation facilities include a separator structure, raceways for holding fish, a distribution system for distributing fish among raceways, a sampling and marking building, truck and barge loading facilities, and PIT-tag detection and diversion systems.

1.1.2. Juvenile Fish Migration Timing. Juvenile fish passage timing at Little Goose Dam is shown in **Table LGS-2**, based on collection data from the most recent 10-year period (does not reflect fish guidance efficiency or passage via the spillway weir or spillway). From 2006–2009, fish collection at Little Goose Dam began later in the season and may have skewed the passage dates in the table. Salmon, steelhead, bull trout, lamprey, and other species are counted when they are observed in the juvenile monitoring facility.

Table LGS-2. Juvenile Salmonid Passage Timing at Little Goose Dam for Most Recent 10 Years Based on Daily & Yearly Collection Data.

Year	10%	50%	90%	# Days	10%	50%	90%	# Days
	Yearling Chinook (wild & hatchery)				Subyearling Chinook (wild & hatchery)			
2010	2-May	15-May	29-May	27	6-Jun	12-Jun	8-Jul	32
2011	5-May	12-May	19-May	14	4-Jun	17-Jun	20-Jul	46
2012	30-Apr	7-May	21-May	21	4-Jun	16-Jun	12-Jul	38
2013	5-May	10-May	16-May	11	2-Jun	13-Jun	29-Jul	57
2014	2-May	9-May	20-May	18	31-May	14-Jun	15-Jul	45
2015	24-Apr	7-May	12-May	18	30-May	19-Jun	13-Jul	44
2016	16-Apr	30-Apr	10-May	24	4-Jun	13-Jun	4-Jul	30
2017	16-Apr	28-Apr	15-May	29	30-May	8-Jun	12-Jul	43
2018*	17-Apr	6-May	16-May	29	28-May	3-Jun	6-Jul	39
2019	18-Apr	30-Apr	18-May	30	22-May	7-Jun	13-Jul	52
10-Yr MEDIAN	27-Apr	7-May	17-May	23	1-Jun	13-Jun	12-Jul	44
10-Yr MIN	16-Apr	28-Apr	10-May	11	28-May	3-Jun	4-Jul	30
10-Yr MAX	5-May	15-May	29-May	29	6-Jun	19-Jun	29-Jul	57
	Unclipped Steelhead				Clipped Steelhead			
2010	3-May	22-May	8-Jun	36	2-May	20-May	7-Jun	36
2011	7-May	16-May	6-Jun	30	4-Apr	12-May	20-May	46
2012	30-Apr	17-May	2-Jun	33	25-Apr	9-May	26-May	31
2013	6-May	13-May	21-May	15	4-May	12-May	18-May	14
2014	2-May	11-May	27-May	25	22-Apr	7-May	26-May	34
2015	26-Apr	13-May	26-May	30	24-Apr	8-May	22-May	28
2016	16-Apr	2-May	19-May	33	18-Apr	28-Apr	13-May	25
2017	16-Apr	28-Apr	25-May	39	14-Apr	26-Apr	15-May	31
2018*	17-Apr	5-May	22-May	35	9-Apr	29-Apr	14-May	35
2019	14-Apr	26-Apr	17-May	33	12-Apr	24-Apr	10-May	28
10-Yr MEDIAN	28-Apr	13-May	25-May	33	20-Apr	7-May	19-May	31
10-Yr MIN	14-Apr	26-Apr	17-May	15	4-Apr	24-Apr	10-May	14
10-Yr MAX	7-May	28-Apr	8-Jun	39	4-May	20-May	7-Jun	46
	Coho (wild & hatchery)				Sockeye (wild & hatchery)			
2010	15-May	22-May	7-Jun	23	20-May	28-May	8-Jun	19
2011	7-May	16-May	22-May	15	14-Apr	13-May	15-Jun	62
2012	5-May	20-May	31-May	26	13-May	23-May	3-Jun	21
2013	10-May	15-May	22-May	12	17-May	19-May	22-May	5
2014	7-May	18-May	28-May	21	2-May	9-May	25-May	23
2015	7-May	17-May	26-May	19	14-May	18-May	21-May	7
2016	30-Apr	9-May	21-May	21	17-May	22-May	28-May	11
2017	5-May	19-May	31-May	26	22-Apr	20-May	30-May	38
2018*	4-May	13-May	28-May	24	21-Apr	20-May	25-May	34
2019	25-Apr	17-May	2-Jun	38	18-May	20-May	24-May	6
10-Yr MEDIAN	6-May	17-May	28-May	22	13-May	20-May	26-May	20
10-Yr MIN	25-Apr	9-May	21-May	12	14-Apr	9-May	21-May	5
10-Yr MAX	15-May	22-May	7-Jun	36	20-May	28-May	15-Jun	62

*2018 passage data include the early start of sampling on March 1st.

1.2. Adult Fish Facilities and Migration Timing.

1.2.1. Adult Fish Facilities. Adult fish passage facilities at Little Goose Dam are comprised of one fish ladder on the south shore, two south shore entrances, a powerhouse collection system, north shore entrances with a transportation channel underneath the spillway to the powerhouse collection system, and auxiliary water supply system. The powerhouse collection system is comprised of two downstream facing entrances into the spillway basin on the north end of the powerhouse, and a common transportation channel. The north shore entrances are comprised of two downstream facing entrances into the spillway basin. The auxiliary water is supplied by three turbine-driven pumps that pump water from the tailrace into the distribution system for the diffusers. Additional water is supplied to the auxiliary water supply system from the juvenile fish facilities primary dewatering structure. Maintenance is scheduled for January–February to minimize impacts on upstream migrants.

1.2.2. Adult Fish Migration Timing & Counting.

1.2.2.1. Upstream migrants are present throughout the year and adult facilities are operated year-round. Adult salmon, steelhead, shad, and lamprey are counted per the schedule in **Table LGS-3** and data are posted daily at: www.fpc.org/adultsalmon_home.html. Sturgeon and bull trout are relatively infrequent and are reported in *Miscellaneous Fish Counts* and in the *Annual Fish Passage Report*.

1.2.2.2. Yearly counts through the most recent passage year are used to determine the earliest and latest dates of peak adult fish passage defined in **Table LGS-4**.

1.2.2.3. . Time-of-day (diel) distributions of adult salmonids at Little Goose Dam fishway entrances and exits are shown in **Figure LGS-2**.

Table LGS-3. Little Goose Dam Adult Fish Counting Schedule March 2020 – Feb 2021.

Count Period	Counting Method and Hours *
April 1 – October 31	Day Visual 0500–2100 hours (PDT)

*PST = Pacific Standard Time; PDT = Pacific Daylight Time (in effect during daylight saving time 3/8/20-11/1/20).

Table LGS-4. Little Goose Dam Adult Fish Count Period and Peak Passage Timing (based on yearly counts from 1970 through the most recent count year).

Species	Count Period	Earliest Peak	Latest Peak
Spring Chinook	Apr 1 – Jun 15	Apr 20	Jun 1
Summer Chinook	Jun 16 – Aug 15	Jun 16	Jul 12
Fall Chinook	Aug 16 – Oct 31	Sep 3	Sep 30
Steelhead	Apr 1 – Oct 31	Sep 6	Oct 14
Sockeye	Jun 15 – Oct 31	Jun 24	Jul 25
Lamprey	Apr 1 – Oct 31	Jul 5	Aug 20

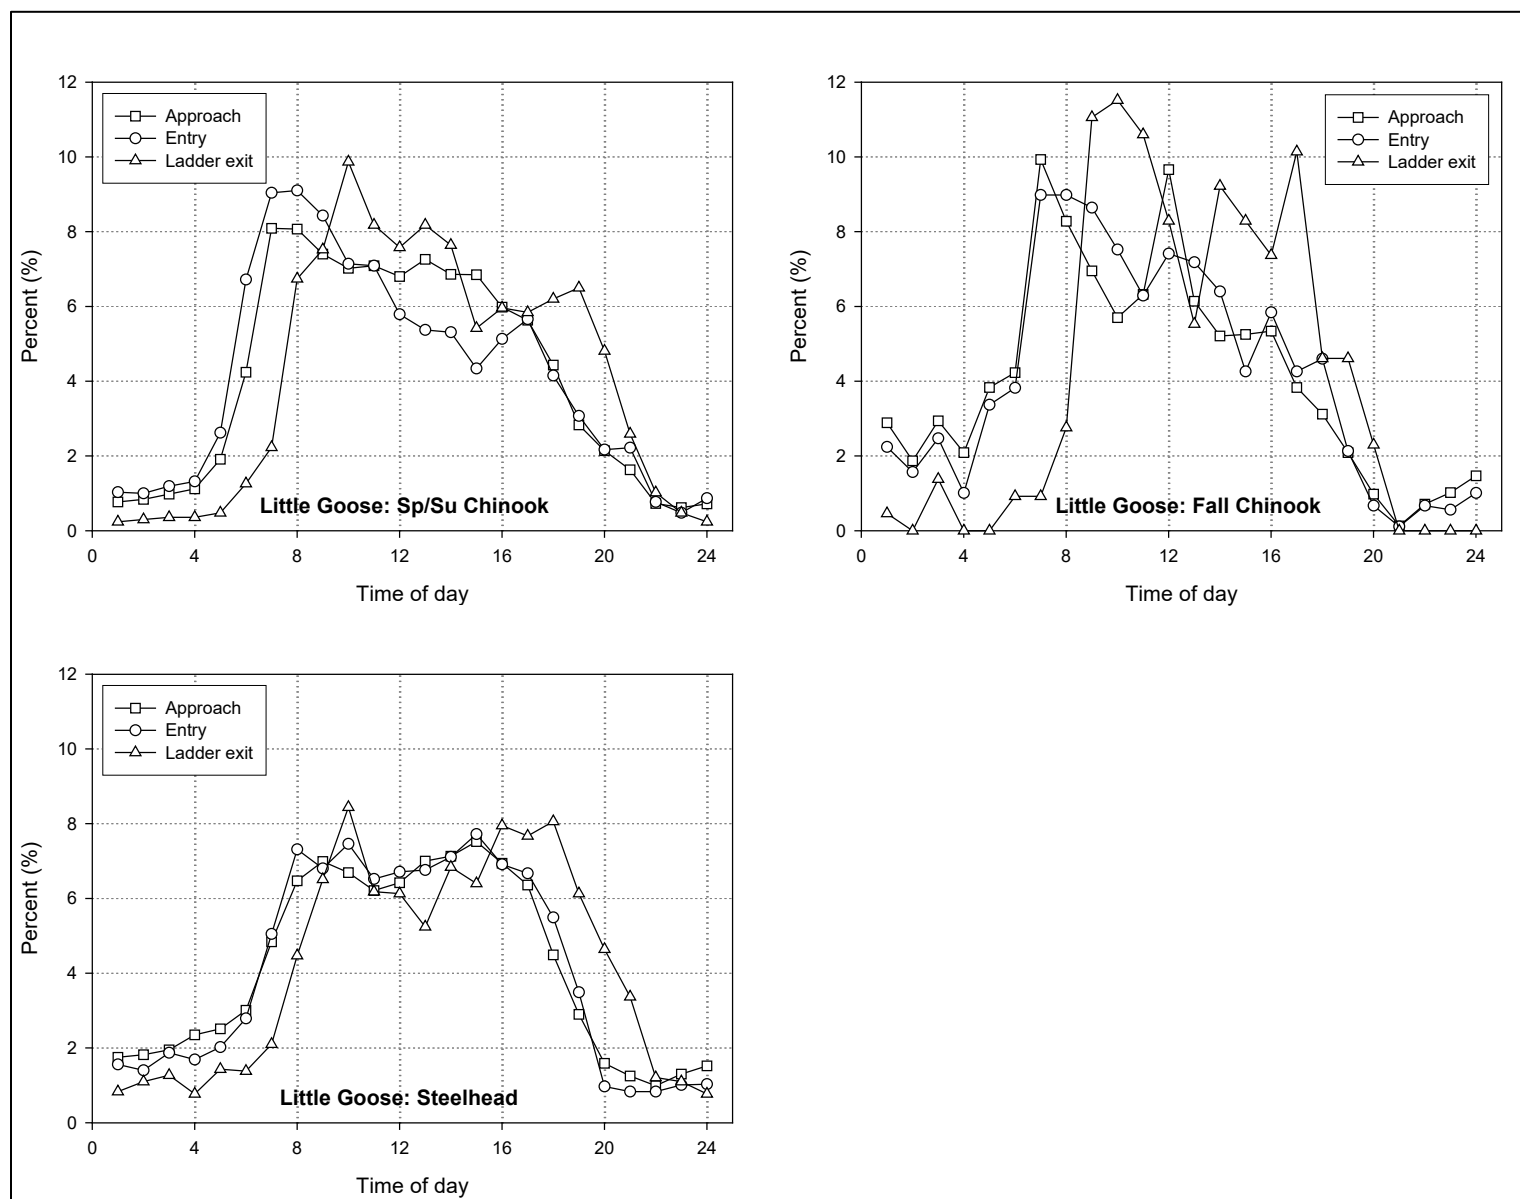


Figure LGS-2. Diel Distribution of Adult Salmonids at Little Goose Dam Fishway Entrances and Exits (Keefer & Caudill 2008 – report and summary letter available online at: pweb.crohms.org/tmt/documents/FPOM/2010/2013_FPOM_MEET/2013_JUN/)

2. FISH FACILITIES OPERATIONS

2.1. General.

2.1.1. Yearly special operations related to research are described as currently coordinated in **Appendix A - Special Project Operations & Studies**.

2.1.2. Research, non-routine maintenance activities, and construction will not be conducted within 100' of any fishway entrance or exit, within 50' of any other part of the adult fishway, or directly in, above, or adjacent to any fishway, unless coordinated with FPOM or FFDRWG by the Project, District Operations and/or Planning or Construction office. These distances are approximate and will be updated after data are collected and analyzed to determine the threshold for adverse impacts to adult fish behavior. Alternate actions will be considered by District and Project biologists in conjunction with the Regional fish agencies on a case-by-case basis.

2.1.3. Emergency situations should be dealt with immediately by the Project in coordination with the Project and/or District biologist. If unavailable, the biologists will be informed immediately following the incident of steps taken to correct the situation. On a monthly basis, as necessary, the project biologist will provide FPOM a summary of any emergency actions undertaken.

2.1.4. All activities within boat restricted zones (BRZ) will be coordinated with the Project at least two weeks in advance, unless it is deemed an emergency (see also **FPP Chapter 1 - Overview** for coordination guidance).

2.2. Spill Management.

2.2.1. Spring and summer spill operations for juvenile fish passage are defined in the *Fish Operations Plan* (FOP), included in the Fish Passage Plan as **Appendix E**. Spill at Little Goose will be distributed in spill patterns defined in **Tables LGS-7** through **LGS-10**.

2.2.2. Involuntary spill is the result of river flow above powerhouse capacity, insufficient load (lack of load), turbine unit outages (forced or scheduled), or failure of a key component of the juvenile fish passage facility which forces spill to provide juvenile fish passage.

2.2.3. Total dissolved gas (TDG) is monitored at Little Goose Dam during the periods defined in **Table LGS-1**, pursuant to the Corps' annual *TDG Monitoring Plan* and current *Dissolved Gas Monitoring Plan of Action*.¹

2.2.4. During years when fish passage spill is provided at Little Goose and Project Biologists or researchers observe an extraordinary congregation of juvenile fish delaying in the forebay, they will notify NOAA Fisheries and CENWW to request a fish flush spill (FFS) that evening. The FFS request will be for up to three hours from 2000–2300 hours, for up to 50% of river flow during those hours, using a uniform spill pattern to minimize TDG.

¹ TDG Monitoring Plan (Appendix 4 of the WMP): pweb.crohms.org/tmt/documents/wmp/

TDG Monitoring Plan of Action: www.nwd.usace.army.mil/Missions/Water/Columbia/Water-Quality

2.3. Operating Criteria – Juvenile Fish Facilities.

2.3.1. Juvenile Fish Facilities - Winter Maintenance Period (December 16–March 31).

2.3.1.1. Forebay Area and Intakes.

- i. Remove debris from forebay and gatewell slots.
- ii. Rake trashracks just prior to the operating season.
- iii. Measure drawdown in gatewell slots after cleaning trashracks with ESBSs installed.
- iv. Inspect and repair gatewell dip net as needed.

2.3.1.2. ESBS, Flow Vanes, and VBS.

- i. Within a week after ESBSs are removed for winter maintenance (or as soon as practical), inspect for juvenile salmonid mortalities and all other incidental fish mortalities. Count all mortalities (or make best estimate) for each ESBS and report to CENWW-OD-T.
- ii. Complete maintenance on all screens.
- iii. Inspect ESBSs prior to installation and operate debris cleaner (dogged off on deck) to ensure proper operation. Log results of trial run.
- iv. Inspect VBSs with underwater video camera at least once/year. Repair as needed.
- v. Inspect flow vanes to make sure they are in good condition and all surfaces smooth. Repair as needed.

2.3.1.3. Collection Channel.

- i. Maintain water-up valve capable of operating when needed.
- ii. Maintain orifice lights operational.
- iii. Maintain orifices clean and valves operating correctly.
- iv. Maintain orifice cycling and air backflush system operating correctly.

2.3.1.4. Transportation Facilities.

- i. Maintain flume switch gate in good operating condition.
- ii. Maintain flume interior smooth with no rough edges.

- iii. Maintain perforated plate smooth with no rough edges.
- iv. Maintain wet separator and fish distribution system ready for operation.
- v. Maintain brushes and screens on crowders in good condition with no holes in screens or rough edges.
- vi. Maintain and test crowders to ensure operating correctly.
- vii. Maintain all valves, slide gates, and switch gates in good operating condition.
- viii. Maintain retainer screens in place with no holes or sharp wires protruding.
- ix. Maintain barge and truck loading pipes free of debris, cracks, or blockages. Test and maintain barge loading boom.
- x. Maintain all sampling equipment in good operating condition prior to watering up the facilities.
- xi. Maintain juvenile PIT-tag system as required (see “*Columbia Basin PIT-tag Information System, General Gate Maintenance and Inspection, Walla Walla District*”, February 2003). Coordinate with PSMFC.
- xii. Maintain mini- and midi-tanks in good operating condition.

2.3.1.5. Dewatering Structure and Flume.

- i. Clean and maintain inclined screen in good condition with no gaps between screen panels or damaged panels.
- ii. Maintain cleaning brush and air burst systems operating correctly.
- iii. Maintain and test overflow weirs to ensure operating correctly.
- iv. Maintain all valves operating correctly.
- v. Maintain baffle boards under inclined screen in good condition.
- vi. Maintain flume interior smooth with no rough edges.

2.3.1.6. Record all maintenance and inspections.

2.3.1.7. Inspect bird wires, water cannon, and other deterrent devices and repair or replace as needed. Where possible, install additional bird wires or other deterrent devices to cover areas of known avian predation activity. Prepare avian abatement contract as needed. For information on avian management at Little Goose Dam, see the *Predation Monitoring and Deterrence Action Plans* in **Appendix L**, Table 1 and section 8.

2.3.2. Juvenile Facilities – Fish Passage Season (April 1–December 15).

Operate pursuant to criteria below from April 1 through October 31 for juvenile bypass, collection, and transport, and from November 1 through December 15 for adult fallbacks. Also operate according to criteria in the *Corps of Engineers Juvenile Fish Transportation Plan* in **Appendix B**. The transportation program may be revised in accordance with the ESA Section 10 permit and NOAA Fisheries Biological Opinion.

2.3.2.1. Inspect fish facilities at least once every 8 hours. Inspect all facilities according to the fish facilities monitoring program. Record all maintenance and inspections and include in reports as described in **section 2.5**.

2.3.2.2. Forebay Area and Intakes.

i. Remove debris from forebay. All floating debris will be removed whenever two acres of debris accumulates in spring and one acre in summer or fall.

ii. Inspect gatewell slots daily (preferably early in day shift) for debris, fish buildup, and contaminating substances (particularly oil). Clean gatewells before they become 50% covered with debris. If the volume of debris precludes the ability to keep the gatewell at least 50% clear, clean at least once daily. If orifice flow or fish conditions are observed that indicate an orifice may be obstructed with debris, close and backflush the orifice to remove the obstruction. If the obstruction cannot be removed, close the orifice and operate the alternate orifice for that gatewell slot. If both orifices become obstructed or plugged with debris, do not operate the turbine unit until the gatewell and orifices are cleared of debris.

iii. If a visible accumulation of contaminating substances (e.g., oil) is detected in a gatewell that cannot be removed within 24 hours, immediately close the gatewell orifices and shut down the turbine unit within one hour until the material has been removed and all problems corrected. A preferred method for removing oil from the water surface is to install absorbent (not adsorbent) socks, booms, or pads capable of encapsulating the material, and tie off with a rope for later disposal. Take action as soon as possible to remove oil from the gatewell so the orifice can be reopened to allow fish to exit the gatewell. Do not close orifices for longer than 48 hours.

iv. Log drawdown differentials in bulkhead slots at least once per week April 1–June 30 and once every two weeks (biweekly) for the remainder of the operating season.

v. Remove debris from forebay and trashracks as necessary to maintain less than 1' of additional drawdown in gate slots (relative to drawdown with a clean screen). Additional raking may be required when heavy debris loads are present in the river or when fish condition indicates an issue.

vi. Coordinate cleaning efforts with staff operating juvenile collection facilities.

vii. Dip bulkhead gateway slots to remove fish prior to installing bulkhead for dewatering a bulkhead slot.

2.3.2.3. ESBSs and VBSs.

i. Operate ESBSs with flow vanes attached to screen.

ii. Operate ESBSs with debris cleaners in automatic mode. Set cleaning frequency as required to maintain clean screens and good fish passage condition. Change cleaning frequency as needed.

iii. Monitor ESBS operating status regularly throughout work shifts via the ESBS operating computer display located in the control room. ESBS cleaning brushes are monitored real-time via PLC in the control room each time a brush cycles.

iv. Inspect ESBS cleaning brush control panels located in the orifice gallery for cleaning brush failures (trouble lights) at least once per day throughout the entire fish passage season. Little Goose staff check cleaning brush trouble lights during orifice inspections multiple times during a 24-hour shift.

v. If an ESBS is damaged or fails during juvenile fish passage season, follow procedures for unscheduled maintenance in **section 3.2.2**. In no case should a turbine unit be operated with a missing, damaged, or a known non-operational ESBS, except as noted.

vi. Inspect ESBS by underwater video during turbine unit annual maintenance (more frequently if required). Thoroughly inspect VBSs at the same time.

vii. Log VBS head differentials at least once per week April 1–June 30 (more frequently if required) and once every two weeks (biweekly) for the remainder of the operating season. When a head differential of 1.5' is reached, operate the respective turbine unit at a reduced loading (≤ 110 MW) to minimize loading on the VBS and potential fish impingement until the VBS can be cleaned. Clean VBSs as soon as possible after a 1.5' head differential is reached.

viii. Between spring and summer, use underwater video to inspect at least two VBSs in two different turbine units that were operated frequently in the spring. If debris accumulation is noted, inspect other VBSs and clean debris as necessary.

ix. After October 1, up to half of the ESBSs may be pulled for maintenance as long as unscreened turbine units are not operated.

x. Between Thanksgiving and December 15, if the National Weather Service forecast for Little Goose Dam² is below 20°F for 24 hours or longer, screens may

² NWS weather forecast for Little Goose Dam: forecast.weather.gov/MapClick.php?lat=46.5874&lon=-118.0261

be removed. Prior to removing screens, request special permission from CENWW-OD-T, who will then inform NOAA Fisheries and FPOM.

xi. At the end of the season, make a formal determination on the adequacy of ESBS bar screen panels and debris cleaner brushes. Replace components as necessary.

2.3.2.4. Collection Channel.

i. Ensure orifices are clean and operating. Operate at least one orifice per gatewell slot (preferably the north orifice). If the project is operating within the Minimum Operating Pool (MOP), additional orifices may be operated to maintain a full collection channel. If orifices must be closed to repair any part of the facility, do not close orifices in operating turbine units with ESBSs in place for longer than 5 hours. If possible, keep to less than 3 hours. Reduce turbine unit loading to the lower end of the 1% efficiency range if deemed necessary by the Project Biologist. Monitor fish conditions in gatewells hourly or more frequently during orifice closure periods.

ii. Ensure orifice lights are functioning and operating on open orifices 24 hrs/day. Replace all burned out orifice lights within 24 hours of notification. Orifice lights and area lights may be turned off the evening before dewatering the channel at the end of season (December 16 or later) to encourage fish to exit the channel voluntarily. Area lights can be turned on briefly for personnel access if necessary.

iii. Orifice jets hitting no closer than 3' from back wall, collection channel full.

iv. Orifice valves are either fully open or closed.

v. Backflush orifices at least once per day and more frequently if required. During periods of high fish and debris passage, April 1 through July 31, inspect and backflush orifices three times per 24 hours or more frequently as determined by the Project Biologist to keep orifices clean. If debris is causing continual orifice plugging problems in a particular turbine unit gatewell, restrict the respective turbine unit to the lower end of the 1% turbine efficiency range to minimize orifice plugging problems. Little Goose does not currently have an automatic backflush system in operation.

vi. Ensure the water-up valve is capable of operating when needed.

2.3.2.5. Transportation Facilities.

i. Operate wet separator and fish distribution system as designed.

ii. Maintain crowder screen brushes in good operating condition with no holes or sharp edges on crowder screens.

- iii. Inspect raceway and tank retainer screens to make sure they are clean with no holes or protruding wires.
- iv. Maintain barge and truck loading pipes and related equipment free of debris, cracks, or blockages, and in good condition. Maintain the barge loading boom in good operating condition.
- v. Inform PSMFC (in advance if possible) of situations that cause the PIT-tag system to become inoperable (e.g., power outages) or that could result in confounding the interpretation of PIT-tag data (e.g., bypassing fish from raceways to the river, operating in primary bypass mode without an operational full-flow detector, emergency dewaterings).

2.3.2.6. Dewatering Structure.

- i. Ensure the trash sweep and air burst systems are operating correctly. Set the frequency of screen cleaning as necessary to maintain a clean screen.
- ii. Hand clean trapezoidal section at least once per day or more as often as required to maintain in clean condition.
- iii. Check overflow weirs to make sure they are operating correctly. Perform maintenance as required.
- iv. Ensure there are no gaps between screen panels or damaged panels in the inclined screen and that the screen panels are in place and tightly secured.
- v. Turn off lights at the dewatering structure at night, unless needed for personnel access, to encourage fish to move downstream volitionally.

2.3.2.7. Adjustable Spillway Weir (ASW). Little Goose has one adjustable spillway weir (ASW) that provides a surface passage route via spillbay 1. The ASW is operated from the control room and can be adjusted between low crest and high crest to pass more or less water, respectively, according to the flow criteria below:

- i. High Crest (ASW-Hi):** The ASW high crest is at elevation 622 feet msl and spills approximately 7 kcfs. Unless flow conditions defined below are met, spill for fish passage will occur with the ASW at high crest according to patterns for “Spring Spill” in **Table LGS-7** or “ASW-Hi 30% Spill” in **Table LGS-8**.
- ii. Low Crest (ASW-Lo):** The ASW low crest is at elevation 618 feet msl and spills approximately 11 kcfs. Low crest spill patterns are defined for “Spring Spill” in **Table LGS-7** and “ASW-Lo 30%” in **Table LGS-9**. Change the ASW to low crest to pass more water during high flows (i.e., spring freshet) when the following flow criteria are met: day average total project outflow above 85 kcfs and NWRFC inflow forecast³ above 85 kcfs for at least the next 3 days. When

³ NWRFC inflow forecast for Little Goose Dam: www.nwrhc.noaa.gov/river/station/flowplot/flowplot.cgi?id=LGSW1

day average outflow drops below 85 kcfs and is forecasted to stay below 85 kcfs for at least the next three days, change the ASW back to high crest.

iii. No ASW (Bay 1 Closed): On or after August 1, when day average project outflow drops below 35 kcfs and is forecasted to stay below 35 kcfs for at least 3 days, close the ASW and spill according to patterns for “No ASW” in **Table LGS-10**. The ASW will be closed after RCC issues the teletype and coordinated through CENWW-OD-T. *To avoid impacts to subyearling migration, the ASW will not be closed before August 1 even if the low flow criteria are achieved unless an adult passage delay is observed or if necessary due to unit operational constraints at low flow. Closing the ASW prior to August 1 will be coordinated through FPOM by CENWW-OD-T.* Re-open the ASW in high crest if day average project outflow increases above 35 kcfs and is forecasted to stay above 35 kcfs for 3 or more days. Continue to open and close the ASW according to these criteria for the remainder of the summer spill season.

2.3.2.8. Avian Predation Management. Operate in accordance with the *Predation Monitoring and Deterrence Action Plans* for Little Goose Dam in **Appendix L**, Table 1 and section 8. Monitor bird wires and other avian deterrent devices to ensure good condition and replace any broken wires or devices as soon as possible. Implement harassment program to deter avian predation in areas actively used by birds and not covered by bird wires or other devices. Routinely monitor project areas to determine areas of active avian predation and, if possible, adjust the harassment program to cover these areas or install bird wires or other deterrents to discourage avian predation.

2.4. Operating Criteria - Adult Fish Facilities.

2.4.1. Adult Fish Facilities - Winter Maintenance Period (January 1 – end of February).

2.4.1.1. Inspect all staff gauges and water level indicators. Repair and/or clean as necessary. Calibrate all water level measuring devices as necessary for proper facility operations.

2.4.1.2. Dewater the ladder and inspect all dewatered sections of fish facilities for projections, debris, or plugged orifices which could injure fish or impede fish passage up the ladder. The ladder exit trashrack must have smooth surfaces where fish pass, and must have downstream edges that are adequately rounded or padded. A spare trashrack should be on hand for use as necessary. Annually inspect all diffuser gratings and chambers and the fallout fence by dewatering or by using divers or video inspection techniques. Dewater and physically inspect all diffuser gratings and chambers at least every 3 years. Repair deficiencies.

2.4.1.3. Inspect for and clean debris from the fish ladder exit. Ensure the trashrack and picketed leads are clean and installed correctly.

2.4.1.4. Inspect all spill gates and ensure they are operable.

2.4.1.5. Maintain fish pumps ready for operation.

2.4.1.6. Inspect ladder netting and repair prior to fish passage season.

2.4.2. Adult Fish Facilities – Adult Fish Passage Season (March 1 – December 31).

Note: The Lower Monumental forebay may be operated within the Minimum Operating Pool (MOP) as part of the Corps' efforts to improve migration conditions for juvenile salmonids. This may result in some of the Little Goose adult fishway entrances bottoming out on their sills prior to reaching criteria depths. Continuous operation at MOP may also result in increased pumping head on the auxiliary water supply pumps, decreasing the amount of water pumped.

2.4.2.1. Maintain all staff gauges in readable condition at all water levels encountered during the fish passage period. Repair or clean as necessary.

2.4.2.2. Maintain water depth over fishway ladder weirs in the range of 1.0'–1.3'.

2.4.2.3. Maintain head on all fishway entrances in the range of 1' to 2'.

2.4.2.4. Ensure trashracks and picketed leads are installed correctly. Maximum head on ladder exit is 0.5'. Maximum head on picketed leads is 0.3'.

2.4.2.5. North Shore Entrances (NSE-1&2).

- i. Operate both downstream gates.
- ii. Top of gate elevation on sill = 529'.
- iii. Weir depth $\geq$ 6' below tailwater.

2.4.2.6. North Powerhouse Entrances (NPE-1&2).

- i. Operate both downstream gates.
- ii. Top of gate elevation on sill = 532'.
- iii. Weir depth $\geq$ 7' below tailwater (tailwater permitting). At tailwater below elevation 539', entrance weirs should be on sill.

2.4.2.7. South Shore Entrances (SSE-1&2).

- i. Operate both gates.
- ii. Top of gate elevation on sill = 529'.
- iii. Weir depth $\geq$ 8' below tailwater.

2.4.2.8. No FOGs will be operated.

2.4.2.9. Channel Velocity.

- i. Maintain water velocities in the adult collection channel in the range of 1.5–4.0 feet per second (fps). This is the optimum velocity for returning adult salmon and steelhead to migrate upstream through the fishway.

ii. Measure surface water velocities in the open access area near the north powerhouse weir/fish entrance using a piece of woody debris (stick, bark) or water bubble timed over a marked fixed distance. Water velocity measurements at this location typifies the velocity conditions throughout the length of the channel.

iii. Measure subsurface water velocity and report once per month using an underwater flowmeter. Calculate the average velocity using several measurements taken at various depths across the width of the channel that best represents the average subsurface flow. Take measurements at a location in the channel that represents the overall flow characteristic.

iv. Include velocity readings in required fishway inspections and weekly and annual reports.

2.4.2.10. Ensure lights are functioning in the tunnel section under the spillway during fish passage season.

2.4.2.11. The Little Goose counting window slot is fixed at a width of no less than 18". Clean the counting window and backboard as needed to maintain good visibility. Maintain all equipment in good condition.

2.4.2.12. Facility Inspections.

i. Inspect fish fallout fence for debris buildup, holes, etc

ii. Powerhouse operators shall inspect facilities once per day shift and check computer monitor information at least once during each back shift.

iii. Project biologists shall inspect facilities three times per week. Inspect all facilities according to fish facilities monitoring program.

iv. Check picketed leads during all inspections to ensure they are clean and in the correct position (all the way down and vanes in line with flow).

v. Project personnel shall check calibration of fishway control system twice per month to ensure it is kept within calibration. This may be done as part of routine fishway inspections.

vi. Inspect fishways daily for foreign substances (particularly oil). If substances are found, corrective actions should be undertaken immediately.

vii. Record all inspections.

2.4.2.13. Fishway Temperature Monitoring. From June 1 through September 30, measure water temperature at adult fishway entrances and exits and submit data to the Fish Passage Center (FPC) weekly for posting online.⁴ Ensure the location of the monitors meets the following criteria:

- i. Within 10 meters of all shore-oriented entrances and exits.
- ii. Entrance monitor within 1 meter above the ladder floor and at least 10 meters downstream of ladder diffusers, if possible, to allow for sufficient mixing with surface water.
- iii. Exit monitor within 1 meter above the ladder floor and above all diffusers to allow for sufficient mixing with surface water.
- iv. If an existing temperature monitoring location is proposed to be used for either the exit or entrance, verify that the site accurately reflects water temperature within 10 meters of the entrance or exit.

2.4.2.14. Adult Ladder Exit Pool Cooling Pump. Operate the forebay exit pool cooling pump that sprays upstream of the fish ladder exit to enhance conditions for adult fish exiting the ladder and to supplement cooler water throughout the ladder. The water supply for the manifold at the exit pool originates from an added forebay pump with intake at elevation 543' in the forebay, which is 90' below minimum operating pool elevation 633'.

- i. Begin operation of exit pool cooling pump after June 1 and no later than the day after the Little Goose forebay temperature string⁵ at 0.5 meters exceeds 64°F (18°C) at any time.
- ii. Continue this operation until September 1 and until the Little Goose forebay temperature string at 0.5 m is below 68°F (20°C) for 3 consecutive days. Restart pumps if the temperature at 0.5 m reaches 68°F (20°C) at any time and follow above criteria on when to discontinue pump operation.
- iii. The pump may be turned on or off at the Project Biologist's discretion if adult passage delays are observed either in the forebay or within the ladder, and operation of the pump is believed to influence the adult passage issue.

2.5. Fish Facility Monitoring & Reporting.

2.5.1. Monitoring.

2.5.1.1. Project biologists shall inspect fish passage facilities at the frequencies described above in the juvenile and adult fish facilities operating criteria, **sections 2.3–2.4.**

2.5.1.2. Project biologists also inspect project facilities once per month and during dewaterings for the presence of zebra and Quagga mussels. Biologists shall provide a report to CENWW-OD-T on a monthly basis summarizing mussel inspections.

⁴ FPC ladder temperature data website: www.fpc.org/smolt/smolt_queries/Q_ladderwatertempgraphv2.php

⁵ Corps temperature string data website: http://pweb.crohms.org/ftppub/water_quality/tempstrings/

2.5.2. Reporting.

2.5.2.1. Weekly Reports. Project Biologists shall prepare weekly reports March 1–December 31 summarizing project and fish facility operations for each week (Friday through Thursday), along with an evaluation of resulting fish passage conditions. The reports will be e-mailed CENWW-OD-T by noon the following Monday. The weekly reports will include:

- i. Out-of-criteria situations and corrective actions taken;
- i. Equipment malfunctions, breakdowns or damage along with a summary of resulting repairs;
- ii. Adult fishway control calibrations;
- iii. ESBS and VBS inspections;
- iv. Unusual activities at the project that may have affected fish passage.

2.5.2.2. In-Season. Any adverse or negative impact to fish or fishways shall be reported in a *Memorandum for the Record* (MFR) prepared by Project biologists and sent to FPOM by the next working day, pursuant to the coordination process and template in **FPP Chapter 1 – Overview, section 2.3.2.**

2.5.2.3. Annual Reports. Project biologists shall prepare a draft annual report by February 10 and a final report by March 15 summarizing the operation of the project fish passage facilities for the previous year. The annual report shall also include a description of all actions taken to discourage avian predation at the project, with an overview of the effectiveness of the actions.

3. FISH FACILITIES MAINTENANCE

3.1. Dewatering & Fish Handling

3.1.1. Dewatering (also referred to as “unwatering”) shall be accomplished pursuant to approved *Dewatering Guidelines and Fish Salvage Plans* in **Appendix F**. Project *Dewatering Plans*⁶ were reviewed and revised in 2011 to ensure they comply with **Appendix F**.

3.1.2. Project biologists should be present to provide guidance at all project activities that may involve fish handling. When river temperatures are $\geq 70^{\circ}\text{F}$, all adult fish handling will be coordinated through CENWW-OD-T.

3.2. Maintenance - Juvenile Fish Facilities

3.2.1. Scheduled Maintenance. Scheduled maintenance of juvenile facilities is conducted throughout the year. Long-term maintenance or modifications of facilities that require them to be out of service for extended periods of time are conducted during the winter maintenance period

⁶ Project Dewatering Plans are available on the FPOM website at: pweb.crohms.org/tmt/documents/FPOM/2010/

(December 16–March 31). During fish passage season, parts of the facilities are maintained on a daily, weekly, or longer interval to keep them in proper operating condition.

3.2.2. Unscheduled Maintenance. Unscheduled maintenance is the correction of any situation that prevents facilities from operating according to criteria or that will impact fish passage or survival.

3.2.2.1. Notification/Reporting. Maintenance of facilities such as ESBSs, which sometimes break down during fish passage season, will be carried out as described below. In these cases, repairs will be made as prescribed and CENWW-OD-T will be notified as soon as possible after it becomes apparent that repairs are required. The Operations Manager has the authority to initiate work prior to notifying CENWW-OD-T if a delay of the work will result in an unsafe situation for people, property, or fish. Unscheduled maintenance that will have a significant impact on fish passage shall be coordinated with NOAA Fisheries and FPOM on a case-by-case basis by CENWW-OD-T. Information required by CENWW-OD-T includes:

- i. Description of the problem;
- ii. Type of outage required;
- iii. Impact on facility operation;
- iv. Length of time for repairs;
- v. Expected impacts on fish passage and proposed measures to mitigate them.

3.2.2.2. ESBS. The ESBSs are inspected periodically throughout the juvenile migration season with a video monitoring system. If a screen is found damaged or malfunctions at any time it will be removed and either replaced with a spare ESBS or repaired and returned to service. A turbine unit shall not be operated during the juvenile bypass season with a missing, known damaged or non-operating ESBS (except as detailed below). If an ESBS fails on a weekend or at night when maintenance crews are not available, the respective turbine unit will be shut down and generation switched to another fully screened unit. If all screened turbine units are in service, water may be spilled until the effected ESBS can be removed and repaired or replaced.

3.2.2.2.a. If an ESBS screen cleaner fails after 1400 hours on a regular workday or any time on a weekend, and taking the unit out of service would result in spilling above TDG state standards or unsafe operation of the power plant such as, but not limited to, unstable station service power, the unit may be operated with the failed screen cleaner up to a maximum of 110 MWs if there is evidence that the ESBS will not plug with debris (e.g., a lack of debris in the gatewell and along the face of the powerhouse). Project personnel will pull and replace the screen the next morning, weekday or weekend inclusive. If the screen cannot be pulled and repaired the next morning, the unit will be removed from service until the screen can be repaired. If there is evidence that fish are being injured under this operation, by either observing injured fish in the gatewells or injured fish appearing on the separator, the turbine unit will be removed from service immediately. This operation will not take place when daily average river flows are less than total powerhouse capacity and the turbine unit will not be operated during power peaking

operations where turbine units are being turned on and off. FPOM will be notified via MFR, per **FPP Chapter 1 – Overview section 2.3.4.**

3.2.2.3. Gatewell Orifices. Each gatewell has two 12" orifices (gatewell slot 1A has one 14" test orifice) with air operated valves to allow fish to exit the gatewell. Under normal operation, at least one orifice per gatewell is operated. To minimize blockage from debris, orifices should be backflushed every day. If an air valve fails, the valve should be closed and the alternate orifice and air valve for that gatewell operated until repairs can be made. If both orifices are blocked with debris, damaged, or must be kept closed, the turbine unit will be taken out of service until repairs can be made. If repairs are to take longer than 48 hours, juvenile fish will be dipped from the gatewell with a gatewell dip basket.

3.2.2.4. Dewatering Structure. The dewatering structure acts as a transition from the collection channel to the corrugated metal flume. An inclined screen allows excess water to be bled off, with all fish and remaining water transitioning into the corrugated metal flume. The excess water can be either discharged into the river or added to the adult passage facilities auxiliary water supply system, and is also used as the water supply for the transportation facilities. The dewatering structure contains a trash sweep for cleaning the inclined screen of impinged debris. If the trash sweep breaks and interferes with juvenile fish passage through the structure or if the inclined screen is damaged, an emergency bypass system at the upstream end of the dewatering structure can be used, if required, to bypass juveniles while repairs are made. Operation of the emergency bypass system requires the juvenile bypass system to be dewatered and stoplogs inserted at the upstream end of the inclined screen. During this setup process, turbine units may be operated at the lower end of the 1% efficiency range. The emergency bypass is then opened and the bypass system operated with six gatewell orifices open. Orifices will then need to be routinely rotated, at a minimum of every 2 hours, to allow juveniles to emigrate from all of the gatewells. During any orifice closure, gatewells shall be monitored hourly by project personnel for signs of fish problems or mortality. Orifices shall not be closed for longer than 5 hours in an operating turbine unit with ESBSs in place. During periods of high fish passage, orifice closure times may need to be less than 5 hours depending on fish numbers and condition. If orifices are closed, gatewells shall be monitored hourly. Spill may be used as an alternative avenue for fish passage during a collection channel outage.

3.2.2.5. Bypass Flume. The corrugated metal flume transports juveniles to either the transportation facilities or to the river below the project. If there is a problem with the flume that interferes with its operation, an emergency bypass system at the upper end of the flume can be opened and all of the fish in the bypass system diverted to the river below the project through a 30" pipe while repairs are made.

3.2.2.6. Transportation Facilities. Transportation facilities can be operated either to collect and hold juveniles for the transportation program or to bypass fish back to the river. If part of the facility malfunctions or is damaged, efforts will first be made to bypass fish around the damaged area. If this is not possible, fish will be bypassed around the transportation facility.

3.3. Maintenance - Adult Fish Facilities.

3.3.1. Scheduled Maintenance. Scheduled maintenance that requires a facility to be dewatered or maintenance that may have a significant effect on fish passage will be done during the winter maintenance period (January–February). Maintenance of facilities that will have no effect on fish passage may be conducted at any time. When facilities are not being maintained during the winter maintenance period, they will be operated according to normal criteria unless otherwise coordinated with NOAA Fisheries and other FPOM participants.

3.3.2. Unscheduled Maintenance.

3.3.2.1. Notification/Reporting. Unscheduled maintenance that will significantly affect the operation of a facility will be coordinated with NOAA Fisheries and other FPOM participants. Coordination procedures for unscheduled maintenance of adult facilities are the same as for juvenile facilities (**section 3.2.2**). If part of a facility malfunctions or is damaged during the fish passage season and the facility can still be operated within criteria without any detrimental effects on fish passage, repairs may not be conducted until the winter maintenance period or until fewer numbers of fish are passing the project. If part of a facility is damaged or malfunctions that may significantly impact fish passage, it will be repaired as soon as possible.

3.3.2.2. Fish Ladder and Counting Station. If any part of the ladder fails or is blocked with debris during the fish passage season, efforts will first be made to correct the problem without dewatering the ladder. Trashracks, picket leads, and counting stations can sometimes be repaired or maintained without dewatering the ladder. The decision to dewater the ladder and make repairs during the fish passage season or wait until the winter maintenance period will be made after coordination with the fish agencies and tribes.

3.3.2.2.a. Hazardous Materials Spill. In the event of a hazardous materials spill, the Project Biologist has the authority to make fishway adjustments outside of operating criteria as necessary to prevent contamination of the ladder until unified command is formed and consultation is established with FPOM. NOAA Fisheries will be notified within 24 hours of a ladder closure.

3.3.2.3. Auxiliary Water Supply (AWS). Three turbine-driven pumps on the south shore supply auxiliary water for the fish ladder and the powerhouse collection system. All three pumps are required for normal operation. Approximately 150–180 cfs of excess water from the juvenile fish passage facilities is also added to the auxiliary water supply system. If one, two, or all three pumps fail, the fishway will be adjusted in the following manner to get the best fish passage conditions possible until repairs can be made:

- i. First, increase the speed of the operable pump(s).
- ii. Then, as necessary, close NSE-2 and NPE-2 and operate NPE-1 to provide the required 1' to 2' head differential.
- iii. If the desired head differential cannot be maintained at a depth of 5' or greater, raise NSE-1 until a depth of 5' below tailwater is reached.

iv. If the head differential cannot be maintained at this point, raise SSE-1 and -2 at 1' increments until 6' below tailwater is reached.

v. If the head differential still cannot be maintained, bulkhead off the transportation channel to the north shore at the end of the powerhouse collection channel. Next, close NPE-1 and bulkhead off the powerhouse collection channel at the junction pool. Then, operate SSE-1 and -2 as deep as possible to maintain the head, but not shallower than 6' regardless of the head.

3.3.2.4. Fishway Entrances. The fishway entrances consist of main entrance weirs with hoists and automatic controls. If any of the automatic controls malfunction, the weirs can be operated manually by project personnel and kept within criteria. If there is a further failure which prevents an entrance from being operated manually, the weirs can usually be left in a lowered position while repairs are being conducted or the entrance closed and the water redistributed to other entrances while repairs are made.

3.3.2.5. Diffuser Gratings. Diffuser chambers for providing auxiliary water to fish ladders and collection channels are covered by gratings attached by several different methods. Diffuser gratings are normally checked during the winter maintenance period to ensure they are in place. These inspections are done either by dewatering and physically inspecting the diffuser gratings, or by using underwater video cameras, divers, or other methods. Diffuser gratings may come loose during the fish passage season due to a variety of reasons. Daily inspections of fish ladders and collection systems should include looking for any flow changes that may indicate problems with diffuser gratings. If a diffuser grating is known or suspected to have moved, creating an opening into a diffuser chamber, efforts must immediately be taken to correct the situation and minimize impacts on adult fish in the fishway. Coordination of the problems should begin immediately through the established unscheduled maintenance coordination procedure (**section 3.2.2**). If possible, a video inspection should be made as soon as possible to determine the extent of the problem. If diffuser gratings are found to be missing or displaced, creating openings into the diffuser chambers, a method of repair shall be developed and coordinated with the fish agencies and tribes through the established coordination procedure. Repairs shall be made as quickly as possible unless otherwise coordinated.

4. **TURBINE UNIT OPERATION & MAINTENANCE**

4.1. **Turbine Unit Priority Order.**

4.1.1. From March 1–November 30, turbine units will be operated in the order of priority defined in **Table LGS-5** in order to enhance adult and juvenile fish passage. If a turbine unit is out of service for maintenance or repair, the next unit in the priority order shall be operated. Unit priority order may be coordinated differently for fish research, construction, or project maintenance activities.

4.1.2. If more than one unit is operating, discharge will be maximized through the southernmost unit (i.e., operated in the upper 1% range) starting with Unit 1 to the extent possible. See **section 4.2.3** for more information.

Table LGS-5. Little Goose Dam Turbine Unit Priority Order.

Season	Unit Priority Order
March 1 – April 2 / June 21 – November 30 Fish Passage Season (except for Spring Spill as defined below)	1 ^a , 2, 3, 4, 5, 6 <i>Maximize discharge through highest priority unit</i>
April 3 – June 20 Spring Spill (Unit 6 second priority)	1 ^a , 6, 2, 3, 4, 5
December 1 – end of February Winter Maintenance Period	Any Order

a. Unit 1 special operation (section 4.2.3): When the ASW is open and total outflow is > 38 kcfs, Unit 1 will be operated in the upper 1% range (~16.0–17.5 kcfs) to smooth out the eddy that forms during ASW spill. Assume other units operate approximately uniformly within their full 1% ranges. When other units are discharging <16.0 kcfs, assume Unit 1 is at the lower end of the upper 1% (~16.0 kcfs). When average unit discharge is > 16.0 kcfs, assume all units are operating uniformly.

4.2. **Turbine Unit Operating Range.**

4.2.1. Turbine unit flow and power output at the lower and upper limits of the $\pm 1\%$ peak efficiency range are defined in **Table LGS-6**.

4.2.2. In-Season (April 1–October 31). As defined in the *BPA Load Shaping Guidelines (Appendix C)*, all units will be operated within $\pm 1\%$ of peak turbine efficiency (1% range) to maximize survival of juvenile fish that pass through the turbines. If operation outside the 1% range is necessary, Project personnel shall record the information to provide to BPA on a weekly basis according to the *Guidelines*. Operation outside the 1% range may be necessary to:

- i.** Meet BPA load requests made pursuant to BPA's policy, statutory requirements, and *Load Shaping Guidelines (Appendix C)*;
- ii.** If the draft tube is to be dewatered (**section 4.3.8**), the unit will be operated at full load > 1% (or at speed-no-load < 1% if not possible to load) for a minimum of 15 minutes prior to installing tail logs in order to flush fish from the unit;
- iii.** Operate a turbine unit solely to provide station service; or

iv. Comply with other coordinated fish measures.

4.2.3. Unit 1 Special Operation. During fish passage season when the ASW is open in Bay 1 and total project outflow is greater than 38 kcfs, Unit 1 will be operated in the upper 25% of the 1% range to smooth out the eddy that forms during ASW spill. Historically, the GDACS program tended to balance flow out of all units in operation. However, this special operation will at times result in unbalanced discharge where more flow is passing through Unit 1 than other operating units. Physical modeling indicated that a higher flow out of Unit 1 is critical to disrupting the eddy that forms along the south shore downstream of the powerhouse when the ASW is operating in order to optimize tailrace conditions for both adult passage and juvenile egress. When the ASW is removed from service during summer spill, the tailrace eddy is mostly non-existent and all turbine units may be operated within the full 1% range. When total project outflow is less than 38 kcfs, Unit 1 may be operated within the full 1% range as necessary to maintain MOP and spill operations pursuant to the FOP.

4.2.4. Minimum Generation. All of the lower Snake River projects may be required to keep one generating unit online at all times to maintain power system reliability. The minimum generation flow range for each unit is defined in the FOP Table 1 (**Appendix E**), as derived from the lower limits of the 1% range and actual unit operations. During low flow, there may not be enough river flow to meet this generation requirement and the FOP spill target. Under these circumstances, the project will operate the first available priority unit at minimum generation and spill the remainder of outflow. Actual attainable minimum generation may vary depending on real-time conditions.

4.2.5. Off-Season (November 1–March 31). While not required to do so in the off-season, turbines will normally run within the 1% range since it is the optimum point for maximizing energy output of a given unit of water over time. Operation outside the 1% range is allowed if needed for power generation or other needs.

4.3. Turbine Unit Maintenance.

4.3.1. Turbine unit maintenance schedules will be reviewed annually by Project and Operations Division biologists for fish impacts. If the maintenance requires operating outside of FPP criteria, the work will be coordinated with regional salmon managers via FPOM (see coordination process in **FPP Chapter 1 – Overview, section 2.3**).

4.3.2. Priority unit maintenance will be scheduled for winter maintenance period or when there are few fish passing the project, to the extent possible. Impacts to migrating adults should be minimized.

4.3.3. Each turbine unit requires annual maintenance that may take from several days to three weeks, and is normally scheduled during the mid-July to late November time frame. Maintenance of priority units for adult passage is normally conducted in November-December, but can be conducted in mid-August.

4.3.4. Turbine units may occasionally require overhauls to repair major problems with the turbine or generator that may take over a year to accomplish.

4.3.5. Turbine units, governors, exciters, and control systems require periodic maintenance, calibration, and testing which may take them outside of the 1% range. This work will be scheduled in compliance with the *BPA Load Shaping Guidelines (Appendix C)* to minimize impacts on juvenile fish.

4.3.6. Operational Testing. Operational testing of a unit under maintenance is in addition to a unit in run status required for power plant reliability. Operational testing may deviate from FPP priority order and may require water that would otherwise be used for spill if the unit running for reliability is at its lower 1% limit (i.e., minimum generation). Water for operational testing will be used from powerhouse allocation when possible, and diverted from spill only to the extent necessary to maintain generation system reliability.

i. Pre-Maintenance: Units may be operationally tested for up to 30 minutes by running at speed-no-load and various loads within the 1% range for measurements and testing and to allow all fish to move through the unit, per section **4.4.8. Dewatering Units.**

ii. Post-Maintenance: Units may be operationally tested while remaining in maintenance or forced outage status by running the unit for up to a cumulative time of 30 minutes (within 1% range) before returning to operational status.

4.3.7. Operating Gates.⁷ Operate turbine units with operating gates in the stored position, as originally designed, to ensure the safety of project personnel and facilities.

4.3.8. Dewatering Units. Dewater units (also referred to as “unwatering”) in accordance with project *Dewatering Plans*.⁶ If the draft tube is to be dewatered, operate the unit with full load for a minimum of 15 minutes prior to installing tail logs. If not possible to load, run unit at speed no load for a minimum of 15 minutes to reduce the number of fish in the scrollcase prior to installing stop logs. If a turbine unit is out of service for maintenance for an extended period of time without tailrace stoplogs in place, make best efforts to not open the wicket gates if the scrollcase must be dewatered at a later date without the unit being spun beforehand.

4.3.9. Turbine Unit Outages during High Flows. During high spring flows, unit outages for inspecting fish screens, repairing research equipment (e.g., hydroacoustic or radio-telemetry), and/or other fish items may cause increased spill in order to maintain reservoir levels within operating ranges. This may result in exceeding TDG standards. It is important that this work be conducted when scheduled to ensure that facilities are operating correctly and not injuring fish, and that important fish research data are collected. To facilitate this work, reservoir storage may be utilized to minimize impacts from taking turbine units out of service and increasing spill.

4.3.9.1. At Little Goose, this special operation shall take place when flow is above 120 kcfs or when increasing spill will result in TDG exceeding standards. The activities covered under these operations will be coordinated with TMT whenever possible.

4.3.9.2. For scheduled inspection or repair of research equipment, reservoirs shall be drafted to MOP and allowed to fill to 1' above the MOP range as work is accomplished. After the

⁷ Operating gates may also be referred to as “head” gates at some projects. The terms are interchangeable.

work, reservoirs will be drafted back to MOP. When inspection or repair work can be scheduled ahead of time, the following process will be followed:

- i. By 12:00 Tuesday of the week prior to the outage, Project personnel shall schedule unit outages through the approved outage scheduling procedure and notify CENWW-OD-T and RCC of the intended work.
- ii. RCC will coordinate the work activities through TMT, then issue a teletype with instructions to Project and BPA for the scheduled work.
- iii. Spill will be increased by one spillbay stop setting (about 1.7 kcfs) above passing inflow to slowly lower the Little Goose pool to MOP prior to the scheduled work taking place.
- iv. During the work, additional spill will not be provided and the reservoir will be allowed to refill until the reservoir is 1' above MOP (a 2' pondage from where the pool was when work started). At this point, screen inspections shall stop. (At Snake River projects, this should allow about one normal workday for the scheduled work.)
- v. After the work, the reservoir shall be drafted back down to MOP by increasing spill to one spillbay stop above passing inflow.
- vi. If work is not finished (e.g., screen inspections), Project personnel shall schedule another unit outage for a date when it can be implemented again.
- vii. If the work is of an emergency nature that does not normally require the unit to be taken out of service (e.g., failed hydroacoustic transducer versus failed fish screen) and cannot wait for the above process to be implemented, project personnel shall immediately notify CENWW-OD-T and RCC to get approval to do the work. If approval is not given, the unit shall be taken out of service and the reservoir allowed to increase until it reaches 1' above MOP. At this point, the turbine unit must be returned to service and the reservoir will be drafted back to MOP using one spillbay stop setting above passing inflow.

4.3.10. Doble Testing. The yearly outage schedule is defined in **Appendix A**. Transformer Doble testing is required every three years, or more frequently if there is a known problem with a transformer, and requires the associated turbine units to be out of service for 2–3 workdays. Doble testing is normally scheduled for August or early September in conjunction with other scheduled unit maintenance to minimize impacts on fish passage. To conduct testing, the distribution lines must be disconnected from the transformers and normal generation stopped. One turbine unit will operate at speed-no-load (approximately 5 kcfs) to provide project power and operation of fish passage facilities (station service). Spill may be provided to meet minimum required project discharge during testing. If Doble testing will impact priority units for fish passage, adult passage timing should be considered to minimize impacts to migrating adults. Available units will be operated in accordance with FPP priority order and within the 1% range.

Table LGS-6. Little Goose Dam Turbine Unit Power (MW) and Flow (cfs) at $\pm 1\%$ of Peak Turbine Efficiency (Lower and Upper Limits of 1% Range) and Operating Limits. ^a

Project Head (feet)	LGS Units 1, 2, 3 – with ESBS						LGS Units 1, 2, 3 – No ESBS					
	1% Lower Limit		1% Upper Limit		Operating Limit		1% Lower Limit		1% Upper Limit		Operating Limit	
	MW	cfs	MW	cfs	MW	cfs	MW	cfs	MW	cfs	MW	cfs
85	69.6	11,396	111.5	18,269	140.9	24,614	70.5	11,320	124.5	20,006	140.9	23,431
86	70.3	11,381	113.7	18,402	142.9	24,614	71.3	11,305	127.0	20,152	142.9	23,442
87	71.1	11,366	115.9	18,531	144.8	24,613	72.0	11,290	129.5	20,293	144.8	23,451
88	71.9	11,351	118.1	18,657	146.7	24,610	72.8	11,276	131.9	20,431	146.7	23,458
89	72.6	11,336	120.3	18,779	148.7	24,605	73.6	11,262	134.4	20,566	148.7	23,464
90	73.4	11,322	122.5	18,898	150.6	24,598	74.4	11,247	136.9	20,696	150.6	23,467
91	74.3	11,313	122.9	18,717	151.8	24,460	75.3	11,239	137.3	20,499	151.8	23,327
92	75.1	11,304	123.2	18,540	153.0	24,319	76.1	11,230	137.7	20,306	153.0	23,185
93	76.0	11,295	123.6	18,367	154.1	24,176	77.0	11,221	138.0	20,116	154.1	23,041
94	76.9	11,285	123.9	18,197	155.2	23,961	77.9	11,212	138.4	19,931	155.2	22,934
95	77.7	11,276	124.3	18,031	155.2	23,547	78.7	11,203	138.8	19,750	155.2	22,563
96	78.8	11,294	124.4	17,841	155.2	23,210	79.8	11,222	139.0	19,541	155.2	22,267
97	79.8	11,312	124.6	17,654	155.2	22,881	80.9	11,240	139.1	19,338	155.2	21,977
98	80.9	11,329	124.7	17,472	155.2	22,559	81.9	11,257	139.3	19,138	155.2	21,693
99	81.9	11,346	124.8	17,293	155.2	22,245	83.0	11,274	139.4	18,942	155.2	21,416
100	82.9	11,361	125.0	17,117	155.2	21,937	84.0	11,290	139.6	18,751	155.2	21,144
101	83.8	11,363	126.6	17,163	155.2	21,634	84.9	11,291	141.4	18,801	155.2	20,883
102	84.7	11,364	128.3	17,207	155.2	21,337	85.8	11,293	143.3	18,850	155.2	20,627
103	85.6	11,365	129.9	17,250	155.2	21,047	86.7	11,294	145.1	18,897	155.2	20,376
104	86.5	11,367	131.6	17,293	155.2	20,762	87.6	11,295	147.0	18,944	155.2	20,131
105	87.4	11,367	133.2	17,334	155.2	20,484	88.5	11,296	148.8	18,989	155.2	19,890
LGS Units 4, 5, 6 – with ESBS						LGS Units 4, 5, 6 – No ESBS						
	MW	cfs	MW	cfs	MW	cfs	MW	cfs	MW	cfs	MW	cfs
85	87.1	13,880	119.6	19,076	141.3	24,621	86.4	13,479	122.2	19,052	141.3	24,411
86	88.2	13,890	121.3	19,102	143.3	24,702	87.6	13,488	123.9	19,078	143.3	24,527
87	89.3	13,899	122.9	19,127	145.4	24,781	88.7	13,497	125.6	19,104	145.4	24,642
88	90.5	13,908	124.6	19,151	147.4	24,859	89.8	13,506	127.2	19,128	147.4	24,756
89	91.6	13,916	126.3	19,174	149.4	24,936	91.0	13,514	128.9	19,151	149.4	24,868
90	92.8	13,924	127.9	19,196	151.4	25,010	92.1	13,522	130.6	19,174	151.4	24,979
91	93.9	13,925	129.4	19,193	153.5	24,931	93.2	13,523	132.1	19,171	153.5	24,840
92	95.0	13,925	130.9	19,190	155.2	24,786	94.3	13,524	133.7	19,168	155.2	24,636
93	96.1	13,926	132.4	19,186	155.2	24,377	95.4	13,524	135.2	19,165	155.2	24,172
94	97.2	13,926	133.9	19,183	155.2	23,904	96.5	13,525	136.7	19,162	155.2	23,631
95	98.3	13,926	135.3	19,179	155.2	23,421	97.6	13,525	138.2	19,158	155.2	22,957
96	99.2	13,898	135.8	19,038	155.2	23,046	98.4	13,498	138.7	19,018	155.2	21,828
97	100.0	13,871	136.3	18,900	155.2	22,679	99.3	13,472	139.2	18,880	155.2	21,378
98	100.9	13,844	136.8	18,765	155.2	22,322	100.2	13,446	139.7	18,745	155.2	20,941
99	101.8	13,818	137.3	18,633	155.2	21,973	101.1	13,420	140.2	18,613	155.2	20,518
100	102.7	13,791	137.8	18,503	155.2	21,633	101.9	13,395	140.7	18,484	155.2	20,677
101	103.9	13,821	139.1	18,503	155.2	21,335	103.2	13,423	142.1	18,484	155.2	20,436
102	105.2	13,849	140.5	18,503	155.2	21,043	104.4	13,451	143.5	18,484	155.2	20,200
103	106.4	13,878	141.9	18,503	155.2	20,758	105.7	13,478	144.9	18,484	155.2	19,969
104	107.7	13,905	143.3	18,503	155.2	20,479	106.9	13,505	146.3	18,484	155.2	19,742
105	108.9	13,932	144.6	18,503	155.2	20,206	108.1	13,532	147.7	18,484	155.2	19,520

a. Values provided by HDC (Jan 2004). Flow (cfs) was calculated based on turbine efficiency, project head, and power output (MW). "Operating Limit" is the maximum safe operating point based on cavitation or generator limit (added Feb 2018).

5. FOREBAY DEBRIS REMOVAL

5.1.1. Debris at projects can impact fish passage conditions by plugging or blocking trashracks, VBSs, gatewell orifices, dewatering screens, separators, or facility piping resulting in fish impingement, injuries and/or descaling. Removing forebay debris is sometimes necessary to maintain safe and efficient fish passage conditions, navigation and other project activities. Debris can be removed from the forebay by physical removal (e.g., using boats to encircle debris with log booms and tow it to shore where it can be removed with a crane; or using a crane and scoop from the top of the dam), or by passing debris through the spillway with special spill and/or powerhouse operations. The preferred option is to physically remove debris when possible to avoid passing debris to the next downstream project. However, this is not always possible as some projects do not have forebay debris removal capability. In this case, the only viable alternative is to pass the debris via the spillway.

5.1.2. Debris Spill Coordination. All special spills (other than normal spill patterns for ongoing spill operations) and project operations for passing debris will be coordinated prior to the operations taking place. Each project shall contact CENWW-OD-T at least two workdays prior to the day they want the special project operations for spilling to pass debris. Project personnel shall provide CENWW-OD-T the reason for the debris spill request including an explanation of project facilities impacted by debris, the date and time of the requested spill, and any special powerhouse or other operations required to move the debris to the spillway. Using information provided by the project, CENWW-OD-T shall coordinate the special operations with RCC, NOAA Fisheries and FPOM. When a debris spill is coordinated and approved, RCC shall issue a teletype detailing the specifics of the special operations.

5.1.3. Emergency Debris Spill. Emergency spills may be implemented if necessary to pass woody debris that are accumulating in front of the spillbay weir(s), compromising the safe, unobstructed passage of fish. The operating project will immediately spill the woody debris to remove the obstructions to fish passage. The operating project will notify CENWW-OD-T of the emergency spill as soon as possible to provide notification to RCC, NOAA Fisheries, and other FPOM participants.

Table LGS-7. Little Goose Dam SPRING (April 3-June 20) Spill Patterns with ASW in High Crest (ASW-Hi), Low Crest (ASW-Lo), and No ASW (Bay 1 Closed).

Bay 1 ^a	SPRING SPILL - # GATE STOPS PER SPILLBAY							TOTAL STOPS	TOTAL SPILL (kcfs) ^a		
	Bay 2	Bay 3	Bay 4	Bay 5	Bay 6	Bay 7	Bay 8		w/ ASW-Hi	w/ ASW-Lo	w/ No ASW
ASW								0	7.2	11.2	0.0
ASW							1	1	8.9	13.0	1.8
ASW	1						1	2	10.7	14.7	3.5
ASW	1						2	3	12.6	16.6	5.4
ASW	1		1				2	4	14.3	18.4	7.2
ASW	1		1		1		2	5	16.1	20.1	8.9
ASW	1		1		1	1	2	6	17.9	21.9	10.7
ASW	1	1	1		1	1	2	7	19.6	23.7	12.5
ASW	1	1	1	1	1	1	2	8	21.4	25.4	14.2
ASW	2	1	1	1	1	1	2	9	23.3	27.3	16.1
ASW	2	1	1	1	1	2	2	10	25.2	29.2	18.0
ASW	2	2	1	1	1	2	2	11	27.1	31.1	19.9
ASW	2	2	1	2	1	2	2	12	29.0	33.0	21.8
ASW	2	2	1	2	2	2	2	13	30.9	34.9	23.7
ASW	2	2	2	2	2	2	2	14	32.8	36.8	25.6
ASW	2	2	2	2	2	2	3	15	34.8	38.8	27.6
ASW	3	2	2	2	2	2	3	16	36.8	40.8	29.6
ASW	3	2	2	2	2	3	3	17	38.8	42.8	31.6
ASW	3	3	2	2	2	3	3	18	40.8	44.8	33.6
ASW	3	3	2	3	2	3	3	19	42.7	46.8	35.6
ASW	3	3	2	3	3	3	3	20	44.7	48.8	37.6
ASW	3	3	3	3	3	3	3	21	46.7	50.8	39.6
ASW	4	3	3	3	3	3	3	22	48.7	52.8	41.6
ASW	4	4	3	3	3	3	3	23	50.7	54.7	43.5
ASW	4	4	4	3	3	3	3	24	52.6	56.7	45.5
ASW	4	4	4	4	3	3	3	25	54.6	58.7	47.5
ASW	4	4	4	4	4	3	3	26	56.6	60.6	49.4
ASW	4	4	4	4	4	4	3	27	58.6	62.6	51.4
ASW	4	4	4	4	4	4	4	28	60.5	64.6	53.4
ASW	5	4	4	4	4	4	4	29	62.5	66.5	55.3
ASW	5	5	4	4	4	4	4	30	64.5	68.5	57.3
ASW	5	5	5	4	4	4	4	31	66.4	70.5	59.3
ASW	5	5	5	5	4	4	4	32	68.4	72.4	61.2
ASW	5	5	5	5	5	4	4	33	70.4	74.4	63.2
ASW	5	5	5	5	5	5	4	34	72.3	76.4	65.2
ASW	5	5	5	5	5	5	5	35	74.3	78.3	67.1
ASW	6	5	5	5	5	5	5	36	76.2	80.3	69.1
ASW	6	6	5	5	5	5	5	37	78.2	82.3	71.1
ASW	6	6	6	5	5	5	5	38	80.2	84.2	73.0

^a Total Spill (kcfs) is calculated as a function of total # of gate stops in Bays 2-8 + ASW spill in Bay 1 at forebay elevation 633.5' (in MOP range). ASW spill in Bay 1 is a fixed rate dependent on crest position: High = 7.2 kcfs; Low = 11.2 kcfs; NO ASW = 0 kcfs (see section 2.3.2.7 for ASW operating criteria).

Bay 1 ^a	SPRING SPILL - # GATE STOPS PER SPILLBAY							TOTAL STOPS	TOTAL SPILL (kcfs) ^a		
	Bay 2	Bay 3	Bay 4	Bay 5	Bay 6	Bay 7	Bay 8		w/ ASW-Hi	w/ ASW-Lo	w/ No ASW
ASW	6	6	6	6	5	5	5	39	82.1	86.2	75.0
ASW	6	6	6	6	6	5	5	40	84.1	88.1	76.9
ASW	6	6	6	6	6	6	5	41	86.0	90.1	78.9
ASW	6	6	6	6	6	6	6	42	88.0	92.1	80.9
ASW	7	6	6	6	6	6	6	43	89.9	94.0	82.8
ASW	7	7	6	6	6	6	6	44	91.9	95.9	84.7
ASW	7	7	7	6	6	6	6	45	93.8	97.9	86.7
ASW	7	7	7	7	6	6	6	46	95.8	99.8	88.6
ASW	7	7	7	7	7	6	6	47	97.7	101.8	90.6
ASW	7	7	7	7	7	7	6	48	99.7	103.7	92.5
ASW	7	7	7	7	7	7	7	49	101.6	105.7	94.5
ASW	8	7	7	7	7	7	7	50	103.6	107.6	96.4
ASW	8	8	7	7	7	7	7	51	105.5	109.6	98.4
ASW	8	8	8	7	7	7	7	52	107.5	111.6	100.4
ASW	8	8	8	8	7	7	7	53	109.5	113.5	102.3
ASW	8	8	8	8	8	7	7	54	111.4	115.5	104.3
ASW	8	8	8	8	8	8	7	55	113.4	117.5	106.3
ASW	8	8	8	8	8	8	8	56	115.4	119.4	108.2
ASW	9	8	8	8	8	8	8	57	117.3	121.4	110.2
ASW	9	9	8	8	8	8	8	58	119.2	123.3	112.1
ASW	9	9	9	8	8	8	8	59	121.2	125.2	114.0
ASW	9	9	9	9	8	8	8	60	123.1	127.1	115.9
ASW	9	9	9	9	9	8	8	61	125.0	129.1	117.9
ASW	9	9	9	9	9	9	8	62	127.0	131.0	119.8
ASW	9	9	9	9	9	9	9	63	128.9	132.9	121.7
ASW	10	9	9	9	9	9	9	64	130.9	134.9	123.7
ASW	10	10	9	9	9	9	9	65	132.9	137.0	125.8
ASW	10	10	10	9	9	9	9	66	134.9	139.0	127.8
ASW	10	10	10	10	9	9	9	67	136.9	141.0	129.8
ASW	10	10	10	10	10	9	9	68	138.9	143.0	131.8
ASW	10	10	10	10	10	10	9	69	140.9	145.0	133.8
ASW	10	10	10	10	10	10	10	70	143.0	147.0	135.8

Table LGS-8. [pg 1 of 3] Little Goose Dam Spill Patterns for 30% Spill with ASW in High Crest (ASW-Hi).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							ASW-Hi 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)	
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL		
23.9	7.2	30.1%	16.7						16.7	ASW-Hi								0	Min. Q w/ SW-Hi	
26.4	8.9	33.7%	17.5						17.5	ASW-Hi	1							1	1 unit + 1 stop = ~34% Spill	
31.5	8.9	28.3%	11.3	11.3					22.6	ASW-Hi	1							1	2 units at min. 1% + 1 stop = ~28% Spill	
35.0	10.7	30.6%	13.0	11.3					24.3	ASW-Hi	1						1	2	Min. Q w/ SW-Hi per FPP	
35.6	10.7	30.1%	13.6	11.3					24.9	ASW-Hi	1						1	2		
38.0	10.7	28.2%	16.0	11.3					27.3	ASW-Hi	1						1	2	Min. Q w/ U1 in upper 1%	
41.9	12.6	30.1%	16.0	13.3					29.3	ASW-Hi	1						2	3		
47.7	14.3	30.0%	17.5	15.9					33.4	ASW-Hi	1	1						2	4	
51.1	16.1	31.5%	17.5	17.5					35.0	ASW-Hi	1	1		1		2		5	2 units + 5 stops = ~31% Spill	
54.7	16.1	29.4%	16.0	11.3	11.3				38.6	ASW-Hi	1	1		1		2		5	3 units + 5 stops = ~29% Spill	
59.6	17.9	30.0%	16.0	12.9	12.8				41.7	ASW-Hi	1	1	1	1		2		6		
65.4	19.6	30.0%	16.0	14.9	14.9				45.8	ASW-Hi	1	1	1	1		1	2	7		
71.3	21.4	30.0%	16.6	16.7	16.6				49.9	ASW-Hi	1	1	1	1	1	1	2	8		
73.9	21.4	29.0%	17.5	17.5	17.5				52.5	ASW-Hi	1	1	1	1	1	1	2	8	Max. Q w/ 3 units = ~29% Spill	
73.9	21.4	29.0%	16.0	11.3	11.3	13.9			52.5	ASW-Hi	1	1	1	1	1	1	2	8	Min. Q w/ 4 units = ~29% Spill	
77.6	23.3	30.0%	16.0	12.2	12.2	13.9			54.3	ASW-Hi	2	1	1	1	1	1	2	9		
83.9	25.2	30.0%	16.0	14.3	14.2	14.2			58.7	ASW-Hi	2	1	2	1	1	1	2	10		
85.0	25.2	29.6%	16.0	14.6	14.6	14.6			59.8	ASW-Hi	2	1	2	1	1	1	2	10	Spring flow trigger for SW crest change	
90.3	27.1	30.0%	16.0	15.8	15.7	15.7			63.2	ASW-Hi	2	1	2	1	2	1	2	11		
96.6	29.0	30.0%	16.9	16.9	16.9	16.9			67.6	ASW-Hi	2	2	2	1	2	1	2	12		
100.4	29.0	28.9%	17.5	17.5	17.5	18.9			71.4	ASW-Hi	2	2	2	1	2	1	2	12	Max. Q w/ 4 units+12 stops = ~29% Spill	
100.4	29.0	28.9%	16.0	13.9	13.8	13.8	13.9			71.4	ASW-Hi	2	2	2	1	2	1	2	12	5 units + 12 stops = ~29% Spill
102.9	30.9	30.0%	16.0	14.0	14.0	14.0	14.0			72.0	ASW-Hi	2	2	2	2	2	1	2	13	
109.3	32.8	30.0%	16.0	15.2	15.1	15.1	15.1			76.5	ASW-Hi	2	2	2	2	2	2	2	14	
115.9	34.8	30.0%	16.3	16.2	16.2	16.2	16.2			81.1	ASW-Hi	3	2	2	2	2	2	2	15	
122.6	36.8	30.0%	17.2	17.2	17.2	17.1	17.1			85.8	ASW-Hi	3	3	2	2	2	2	2	16	

^a Total Spill (kcfs) is calculated as a function of total # of gate stops in Bays 2-8 + ASW spill in Bay 1 at forebay elevation 633.5' (in MOP range). ASW spill in Bay 1 is a fixed rate dependent on crest position: High = 7.2 kcfs; Low = 11.2 kcfs; NO ASW = 0 kcfs (see **section 2.3.2.7** for ASW operating criteria).

^b Turbine flow is shown as an estimate of how the special Unit 1 operation will look (see **section 4.2.1**), not a precise requirement.

^c Spill is > 30% when Total Outflow is > 156 kcfs (assuming all turbines available and max powerhouse capacity is approx. 109 kcfs).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							ASW-Hi 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
129.2	38.8	30.0%	16.0	14.9	14.9	14.9	14.9	14.8	90.4	ASW-Hi	3	3	3	2	2	2	2	17	Max. PH capacity for 30% Spill.
135.9	40.8	30.0%	16.0	15.9	15.8	15.8	15.8	15.8	95.1	ASW-Hi	3	3	3	3	2	2	2	18	
142.4	42.7	30.0%	16.7	16.6	16.6	16.6	16.6	16.6	99.7	ASW-Hi	3	3	3	3	3	2	2	19	
149.1	44.7	30.0%	17.4	17.4	17.4	17.4	17.4	17.4	104.4	ASW-Hi	3	3	3	3	3	3	2	20	
155.9	46.7	30.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	3	3	3	3	3	3	3	21	
157.9	48.7	30.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	3	3	3	3	3	3	22	
159.9	50.7	31.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	4	3	3	3	3	3	23	
161.8	52.6	32.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	4	4	3	3	3	3	24	
163.8	54.6	33.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	4	4	4	3	3	3	25	
165.8	56.6	34.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	4	4	4	4	3	3	26	
167.8	58.6	34.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	4	4	4	4	4	3	27	
169.7	60.5	35.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	4	4	4	4	4	4	4	28	
171.7	62.5	36.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	4	4	4	4	4	4	29	
173.7	64.5	37.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	5	4	4	4	4	4	30	
175.6	66.4	37.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	5	5	4	4	4	4	31	
177.6	68.4	38.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	5	5	5	4	4	4	32	
179.6	70.4	39.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	5	5	5	5	4	4	33	
181.5	72.3	39.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	5	5	5	5	5	4	34	
183.5	74.3	40.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	5	5	5	5	5	5	5	35	
185.4	76.2	41.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	5	5	5	5	5	5	36	
187.4	78.2	41.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	6	5	5	5	5	5	37	
189.4	80.2	42.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	6	6	5	5	5	5	38	
191.3	82.1	42.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	6	6	6	5	5	5	39	
193.3	84.1	43.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	6	6	6	6	5	5	40	
195.2	86.0	44.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	6	6	6	6	6	5	41	
197.2	88.0	44.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	6	6	6	6	6	6	6	42	
199.1	89.9	45.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	6	6	6	6	6	6	43	
201.1	91.9	45.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	7	6	6	6	6	6	44	
203.0	93.8	46.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	7	7	6	6	6	6	45	
205.0	95.8	46.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	7	7	7	6	6	6	46	
206.9	97.7	47.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	7	7	7	7	6	6	47	

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							ASW-Hi 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
208.9	99.7	47.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	7	7	7	7	7	6	48	
210.8	101.6	48.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	7	7	7	7	7	7	7	49	
212.8	103.6	48.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	7	7	7	7	7	7	50	
214.7	105.5	49.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	8	7	7	7	7	7	51	
216.7	107.5	49.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	8	8	7	7	7	7	52	
218.7	109.5	50.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	8	8	8	7	7	7	53	
220.6	111.4	50.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	8	8	8	8	7	7	54	
222.6	113.4	50.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	8	8	8	8	8	7	55	
224.6	115.4	51.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	8	8	8	8	8	8	8	56	
226.5	117.3	51.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	8	8	8	8	8	8	57	
228.4	119.2	52.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	9	8	8	8	8	8	58	
230.4	121.2	52.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	9	9	8	8	8	8	59	
232.3	123.1	53.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	9	9	9	8	8	8	60	
234.2	125.0	53.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	9	9	9	9	8	8	61	
236.2	127.0	53.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	9	9	9	9	9	8	62	
238.1	128.9	54.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	9	9	9	9	9	9	9	63	
240.1	130.9	54.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	9	9	9	9	9	9	64	
242.1	132.9	54.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	10	9	9	9	9	9	65	
244.1	134.9	55.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	10	10	9	9	9	9	66	
246.1	136.9	55.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	10	10	10	9	9	9	67	
248.1	138.9	56.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	10	10	10	10	9	9	68	
250.1	140.9	56.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	10	10	10	10	10	9	69	
252.2	143.0	56.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Hi	10	10	10	10	10	10	10	70	

Table LGS-9. [pg 1 of 3] Little Goose Dam Spill Patterns for 30% Spill with ASW in Low Crest (ASW-Lo).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							ASW-Lo 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
37.3	11.2	30.0%	14.8	11.3					26.1	ASW-Lo								0	Min. Q at SW-Lo
38.5	11.2	29.1%	16.0	11.3					27.3	ASW-Lo								0	Min. Q w/ U1 in upper 1%
43.2	13.0	30.1%	16.0	14.2					30.2	ASW-Lo							1	1	
49.0	14.7	30.0%	17.2	17.1					34.3	ASW-Lo	1						1	2	
49.7	14.7	29.6%	17.5	17.5					35.0	ASW-Lo	1						1	2	Max. Q w/ 2 units + 2 stops = ~30% Spill
53.3	14.7	27.6%	16.0	11.3	11.3				38.6	ASW-Lo	1						1	2	Min. Q w/ 3 units + 2 stops = ~28% Spill
55.4	16.6	30.0%	16.0	11.4	11.4				38.8	ASW-Lo	1						2	3	
61.3	18.4	30.0%	16.0	13.5	13.4				42.9	ASW-Lo	1		1				2	4	
67.1	20.1	30.0%	16.0	15.5	15.5				47.0	ASW-Lo	1		1		1		2	5	
73.0	21.9	30.0%	17.1	17.0	17.0				51.1	ASW-Lo	1	1	1		1		2	6	
74.4	21.9	29.4%	17.5	17.5	17.5				52.5	ASW-Lo	1	1	1		1		2	6	Max. Q w/ 3 units + 6 stops = ~29% Spill
74.4	21.9	29.4%	16.0	11.3	11.3	13.9			52.5	ASW-Lo	1	1	1		1		2	6	Min. Q w/ 4 units + 6 stops = ~29% Spill
78.9	23.7	30.0%	16.0	12.7	12.6	13.9			55.2	ASW-Lo	1	1	1		1	1	2	7	
84.7	25.4	30.0%	16.0	14.5	14.4	14.4			59.3	ASW-Lo	1	1	1	1	1	1	2	8	Spring flow trigger for SW crest change
91.0	27.3	30.0%	16.0	15.9	15.9	15.9			63.7	ASW-Lo	2	1	1	1	1	1	2	9	
97.4	29.2	30.0%	17.1	17.1	17.0	17.0			68.2	ASW-Lo	2	1	2	1	1	1	2	10	
100.6	29.2	29.0%	17.5	17.5	17.5	18.9			71.4	ASW-Lo	2	1	2	1	1	1	2	10	Max. Q w/ 4 units+10 stops = ~29% Spill
100.6	29.2	29.0%	16.0	13.9	13.8	13.8	13.9		71.4	ASW-Lo	2	1	2	1	1	1	2	10	5 units + 10 stops = ~29% Spill
103.7	31.1	30.0%	16.0	14.2	14.2	14.1	14.1		72.6	ASW-Lo	2	1	2	1	2	1	2	11	
110.0	33.0	30.0%	16.0	15.3	15.3	15.2	15.2		77.0	ASW-Lo	2	2	2	1	2	1	2	12	
116.4	34.9	30.0%	16.3	16.3	16.3	16.3	16.3		81.5	ASW-Lo	2	2	2	2	2	1	2	13	
122.7	36.8	30.0%	17.2	17.2	17.2	17.2	17.1		85.9	ASW-Lo	2	2	2	2	2	2	2	14	
129.4	38.8	30.0%	16.0	15.0	14.9	14.9	14.9	14.9	90.6	ASW-Lo	3	2	2	2	2	2	2	15	
136.0	40.8	30.0%	16.0	15.9	15.9	15.8	15.8	15.8	95.2	ASW-Lo	3	3	2	2	2	2	2	16	
142.7	42.8	30.0%	16.7	16.7	16.7	16.6	16.6	16.6	99.9	ASW-Lo	3	3	3	2	2	2	2	17	
149.3	44.8	30.0%	17.5	17.4	17.4	17.4	17.4	17.4	104.5	ASW-Lo	3	3	3	3	2	2	2	18	

^a Total Spill (kcfs) is calculated as a function of total # of gate stops in Bays 2-8 + ASW spill in Bay 1 at forebay elevation 633.5' (in MOP range). ASW spill in Bay 1 is a fixed rate dependent on crest position: High = 7.2 kcfs; Low = 11.2 kcfs; NO ASW = 0 kcfs (see **section 2.3.2.7** for ASW operating criteria).

^b Turbine flow is shown as an estimate of how the special Unit 1 operation will look (see **section 4.2.1**), not a precise requirement.

^c Spill is > 30% when Total Outflow is > 156 kcfs (assuming all turbines available and max powerhouse capacity is approx. 109 kcfs).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							ASW-Lo 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
156.0	46.8	30.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	3	3	3	3	3	2	2	19	Max. PH capacity for 30% Spill
158.0	48.8	30.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	3	3	3	3	3	3	2	20	
160.0	50.8	31.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	3	3	3	3	3	3	3	21	
162.0	52.8	32.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	3	3	3	3	3	3	22	
163.9	54.7	33.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	4	3	3	3	3	3	23	
165.9	56.7	34.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	4	4	3	3	3	3	24	
167.9	58.7	35.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	4	4	4	3	3	3	25	
169.8	60.6	35.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	4	4	4	4	3	3	26	
171.8	62.6	36.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	4	4	4	4	4	3	27	
173.8	64.6	37.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	4	4	4	4	4	4	4	28	
175.7	66.5	37.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	4	4	4	4	4	4	29	
177.7	68.5	38.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	5	4	4	4	4	4	30	
179.7	70.5	39.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	5	5	4	4	4	4	31	
181.6	72.4	39.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	5	5	5	4	4	4	32	
183.6	74.4	40.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	5	5	5	5	4	4	33	
185.6	76.4	41.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	5	5	5	5	5	4	34	
187.5	78.3	41.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	5	5	5	5	5	5	5	35	
189.5	80.3	42.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	5	5	5	5	5	5	36	
191.5	82.3	43.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	6	5	5	5	5	5	37	
193.4	84.2	43.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	6	6	5	5	5	5	38	
195.4	86.2	44.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	6	6	6	5	5	5	39	
197.3	88.1	44.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	6	6	6	6	5	5	40	
199.3	90.1	45.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	6	6	6	6	6	5	41	
201.3	92.1	45.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	6	6	6	6	6	6	6	42	
203.2	94.0	46.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	6	6	6	6	6	6	43	
205.1	95.9	46.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	7	6	6	6	6	6	44	
207.1	97.9	47.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	7	7	6	6	6	6	45	
209.0	99.8	47.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	7	7	7	6	6	6	46	
211.0	101.8	48.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	7	7	7	7	6	6	47	
212.9	103.7	48.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	7	7	7	7	7	6	48	
214.9	105.7	49.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	7	7	7	7	7	7	7	49	

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							ASW-Lo 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
216.8	107.6	49.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	7	7	7	7	7	7	50	
218.8	109.6	50.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	8	7	7	7	7	7	51	
220.8	111.6	50.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	8	8	7	7	7	7	52	
222.7	113.5	51.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	8	8	8	7	7	7	53	
224.7	115.5	51.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	8	8	8	8	7	7	54	
226.7	117.5	51.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	8	8	8	8	8	7	55	
228.6	119.4	52.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	8	8	8	8	8	8	8	56	
230.6	121.4	52.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	8	8	8	8	8	8	57	
232.5	123.3	53.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	9	8	8	8	8	8	58	
234.4	125.2	53.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	9	9	8	8	8	8	59	
236.3	127.1	53.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	9	9	9	8	8	8	60	
238.3	129.1	54.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	9	9	9	9	8	8	61	
240.2	131.0	54.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	9	9	9	9	9	8	62	
242.1	132.9	54.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	9	9	9	9	9	9	9	63	
244.1	134.9	55.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	9	9	9	9	9	9	64	
246.2	137.0	55.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	10	9	9	9	9	9	65	
248.2	139.0	56.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	10	10	9	9	9	9	66	
250.2	141.0	56.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	10	10	10	9	9	9	67	
252.2	143.0	56.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	10	10	10	10	9	9	68	
254.2	145.0	57.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	10	10	10	10	10	9	69	
256.2	147.0	57.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	ASW-Lo	10	10	10	10	10	10	10	70	

Table LGS-10. [pg 1 of 3] Little Goose Dam Uniform Spill Patterns for 30% Spill with No ASW (Bay 1 Closed).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							No ASW 30% Spill Patterns - # Gate Stops per Bay								Comments (see footnotes)			
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8		TOTAL		
11.3	0	0.0%	11.3							11.3	Closed								0	Min. Q w/ Closed and no spill	
13.1	1.8	13.5%	11.3							11.3	Closed	1							1		
14.8	3.5	23.8%	11.3							11.3	Closed	1							1		2
18	5.4	30.0%	12.6							12.6	Closed	1							2	3	Min. Q w/ no SW and 30% spill
24	7.2	29.9%	16.8							16.8	Closed	1	1						2	4	
26.4	8.9	33.8%	17.5							17.5	Closed	1	1		1		2		5	1 unit + 5 stops = ~34% spill 2 units + 5 stops = ~28% spill	
31.5	8.9	28.3%	11.3	11.3						22.6	Closed	1	1		1		2		5		
35.7	10.7	30.0%	13.7	11.3						25.0	Closed	1	1	1	1		2		6	Min. Q w/ U1 in upper 1%	
38	10.7	28.2%	16.0	11.3						27.3	Closed	1	1	1	1		2		6		
41.6	12.5	30.0%	16.0	13.1						29.1	Closed	1	1	1	1		1	2	7		
47.4	14.2	30.0%	16.6	16.6						33.2	Closed	1	1	1	1	1	1	2	8	2 units + 9 stops = ~31% spill 3 units + 9 stops = ~29% spill	
51.1	16.1	31.5%	17.5	17.5						35.0	Closed	2	1	1	1	1	1	2	9		
54.7	16.1	29.5%	16.0	11.3	11.3					38.6	Closed	2	1	1	1	1	1	2	9		
60	18	30.0%	16.0	13.0	13.0					42.0	Closed	2	1	2	1	1	1	2	10	Max. Q w/ 3 units = ~29% spill Min. Q w/ 4 units = ~31% spill	
66.4	19.9	30.0%	16.0	15.3	15.2					46.5	Closed	2	1	2	1	2	1	2	11		
72.7	21.8	30.0%	17.0	17.0	16.9					50.9	Closed	2	2	2	1	2	1	2	12		
74.3	21.8	29.4%	17.5	17.5	17.5					52.5	Closed	2	2	2	1	2	1	2	12	Min. Q w/ 4 units = ~31% spill	
76.2	23.7	31.1%	16.0	11.3	11.3	13.9				52.5	Closed	2	2	2	2	2	1	2	13		
79	23.7	30.0%	16.0	12.7	12.7	13.9				55.3	Closed	2	2	2	2	2	1	2	13		
85.4	25.6	30.0%	16.0	14.6	14.6	14.6				59.8	Closed	2	2	2	2	2	2	2	14		
92	27.6	30.0%	16.1	16.1	16.1	16.1				64.4	Closed	3	2	2	2	2	2	2	15		
98.7	29.6	30.0%	17.3	17.3	17.3	17.2				69.1	Closed	3	3	2	2	2	2	2	16		
105.3	31.6	30.0%	16.0	14.5	14.4	14.4	14.4				73.7	Closed	3	3	3	2	2	2	2	17	
112	33.6	30.0%	16.0	15.6	15.6	15.6	15.6				78.4	Closed	3	3	3	3	2	2	2	18	
118.7	35.6	30.0%	16.7	16.6	16.6	16.6	16.6				83.1	Closed	3	3	3	3	3	2	2	19	
125.1	37.6	30.1%	17.5	17.5	17.5	17.5	17.5				87.5	Closed	3	3	3	3	3	3	2	20	

^a Total Spill (kcfs) is calculated as a function of total # of gate stops in Bays 2-8 + ASW spill in Bay 1 at forebay elevation 633.5' (in MOP range). ASW spill in Bay 1 is a fixed rate dependent on crest position: High = 7.2 kcfs; Low = 11.2 kcfs; NO ASW = 0 kcfs (see **section 2.3.2.7** for ASW operating criteria).

^b Turbine flow is shown as an estimate of how the special Unit 1 operation will look (see **section 4.2.1**), not a precise requirement.

^c Spill is > 30% when Total Outflow is > 156 kcfs (assuming all turbines available and max powerhouse capacity is approx. 109 kcfs).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							No ASW 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
132	39.6	30.0%	16.0	15.3	15.3	15.3	15.3	15.2	92.4	Closed	3	3	3	3	3	3	3	21	
138.6	41.6	30.0%	16.2	16.2	16.2	16.2	16.1	16.1	97.0	Closed	4	3	3	3	3	3	3	22	
145.1	43.5	30.0%	17.0	17.0	16.9	16.9	16.9	16.9	101.6	Closed	4	4	3	3	3	3	3	23	
151.7	45.5	30.0%	17.5	17.5	17.5	17.9	17.9	17.9	106.2	Closed	4	4	4	3	3	3	3	24	
156.7	47.5	30.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	4	4	4	4	3	3	3	25	Max. PH capacity for 30% Spill
158.6	49.4	31.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	4	4	4	4	4	3	3	26	
160.6	51.4	32.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	4	4	4	4	4	4	3	27	
162.6	53.4	32.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	4	4	4	4	4	4	4	28	
164.5	55.3	33.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	4	4	4	4	4	4	29	
166.5	57.3	34.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	5	4	4	4	4	4	30	
168.5	59.3	35.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	5	5	4	4	4	4	31	
170.4	61.2	35.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	5	5	5	4	4	4	32	
172.4	63.2	36.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	5	5	5	5	4	4	33	
174.4	65.2	37.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	5	5	5	5	5	4	34	
176.3	67.1	38.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	5	5	5	5	5	5	5	35	
178.3	69.1	38.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	5	5	5	5	5	5	36	
180.3	71.1	39.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	6	5	5	5	5	5	37	
182.2	73	40.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	6	6	5	5	5	5	38	
184.2	75	40.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	6	6	6	5	5	5	39	
186.1	76.9	41.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	6	6	6	6	5	5	40	
188.1	78.9	41.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	6	6	6	6	6	5	41	
190.1	80.9	42.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	6	6	6	6	6	6	6	42	
192	82.8	43.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	6	6	6	6	6	6	43	
193.9	84.7	43.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	7	6	6	6	6	6	44	
195.9	86.7	44.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	7	7	6	6	6	6	45	
197.8	88.6	44.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	7	7	7	6	6	6	46	
199.8	90.6	45.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	7	7	7	7	6	6	47	
201.7	92.5	45.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	7	7	7	7	7	6	48	
203.7	94.5	46.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	7	7	7	7	7	7	7	49	
205.6	96.4	46.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	7	7	7	7	7	7	50	
207.6	98.4	47.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	8	7	7	7	7	7	51	

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							No ASW 30% Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1 ^a	2	3	4	5	6	7	8	TOTAL	
209.6	100.4	47.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	8	8	7	7	7	7	52	
211.5	102.3	48.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	8	8	8	7	7	7	53	
213.5	104.3	48.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	8	8	8	8	7	7	54	
215.5	106.3	49.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	8	8	8	8	8	7	55	
217.4	108.2	49.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	8	8	8	8	8	8	8	56	
219.4	110.2	50.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	8	8	8	8	8	8	57	
221.3	112.1	50.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	9	8	8	8	8	8	58	
223.2	114	51.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	9	9	8	8	8	8	59	
225.1	115.9	51.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	9	9	9	8	8	8	60	
227.1	117.9	51.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	9	9	9	9	8	8	61	
229	119.8	52.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	9	9	9	9	9	8	62	
230.9	121.7	52.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	9	9	9	9	9	9	9	63	
232.9	123.7	53.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	9	9	9	9	9	9	64	
235	125.8	53.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	10	9	9	9	9	9	65	
237	127.8	53.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	10	10	9	9	9	9	66	
239	129.8	54.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	10	10	10	9	9	9	67	
241	131.8	54.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	10	10	10	10	9	9	68	
243	133.8	55.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	10	10	10	10	10	9	69	
245	135.8	55.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	10	10	10	10	10	10	10	70	

Table LGS-11. [pg 1 of 3] Little Goose Dam ALTERNATE UNIFORM Spill Patterns for use if necessary for Worker Safety in Bay 1 or 2.

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							Worker Safety Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1	2	3	4	5	6	7	8	TOTAL	
11.3	0	0.0%	11.3						11.3	Closed	Closed							0	Min. Q w/ no SW and no spill.
13.1	1.8	13.5%	11.3						11.3	Closed	Closed						1	1	
14.8	3.5	23.8%	11.3						11.3	Closed	Closed	1					1	2	
18	5.4	30.0%	12.6						12.6	Closed	Closed	1					2	3	Min. Q w/ no SW and 30% spill.
24	7.2	29.9%	16.8						16.8	Closed	Closed	1		1			2	4	
26.4	8.9	33.8%	17.5						17.5	Closed	Closed	1		1		1	2	5	1 unit + 5 stops = ~34% spill
31.5	8.9	28.3%	11.3	11.3					22.6	Closed	Closed	1		1		1	2	5	2 units + 5 stops = ~28% spill
35.7	10.7	30.0%	13.7	11.3					25.0	Closed	Closed	1	1	1		1	2	6	
38	10.7	28.2%	16.0	11.3					27.3	Closed	Closed	1	1	1		1	2	6	Min. Q w/ U1 in upper 1% ^c
41.6	12.5	30.0%	16.0	13.1					29.1	Closed	Closed	1	1	1	1	1	2	7	
47.6	14.4	30.2%	16.6	16.6					33.2	Closed	Closed	2	1	1	1	1	2	8	
51.3	16.3	31.7%	17.5	17.5					35.0	Closed	Closed	2	1	2	1	1	2	9	2 units + 9 stops = ~31% spill
54.9	16.3	29.6%	16.0	11.3	11.3				38.6	Closed	Closed	2	1	2	1	1	2	9	3 units + 9 stops = ~29% spill
60.2	18.2	30.2%	16.0	13.0	13.0				42.0	Closed	Closed	2	1	2	1	2	2	10	
66.6	20.1	30.1%	16.0	15.3	15.2				46.5	Closed	Closed	2	2	2	1	2	2	11	
72.9	22	30.1%	17.0	17.0	16.9				50.9	Closed	Closed	2	2	2	2	2	2	12	
74.5	22	29.5%	17.5	17.5	17.5				52.5	Closed	Closed	2	2	2	2	2	2	12	Max. Q w/ 3 units = ~29% spill
76.5	24	31.3%	16.0	11.3	11.3	13.9			52.5	Closed	Closed	3	2	2	2	2	2	13	Min. Q w/ 4 units = ~31% spill
79.3	24	30.2%	16.0	12.7	12.7	13.9			55.3	Closed	Closed	3	2	2	2	2	2	13	
85.8	26	30.3%	16.0	14.6	14.6	14.6			59.8	Closed	Closed	3	3	2	2	2	2	14	
92.3	27.9	30.3%	16.1	16.1	16.1	16.1			64.4	Closed	Closed	3	3	3	2	2	2	15	
99	29.9	30.2%	17.3	17.3	17.3	17.2			69.1	Closed	Closed	3	3	3	3	2	2	16	
105.6	31.9	30.2%	16.0	14.5	14.4	14.4	14.4		73.7	Closed	Closed	3	3	3	3	3	2	17	
112.3	33.9	30.2%	16.0	15.6	15.6	15.6	15.6		78.4	Closed	Closed	3	3	3	3	3	3	18	
119	35.9	30.2%	16.7	16.6	16.6	16.6	16.6		83.1	Closed	Closed	4	3	3	3	3	3	19	
125.4	37.9	30.2%	17.5	17.5	17.5	17.5	17.5		87.5	Closed	Closed	4	4	3	3	3	3	20	
132.2	39.8	30.1%	16.0	15.3	15.3	15.3	15.3	15.2	92.4	Closed	Closed	4	4	4	3	3	3	21	

^a Total Spill (kcfs) is calculated as a function of total # of gate stops in Bays 2-8 + ASW spill in Bay 1 at forebay elevation 633.5' (in MOP range).

^b Turbine flow is shown as an estimate of how the special Unit 1 operation will look (see **section 4.2.1**), not a precise requirement.

^c Spill is > 30% when Total Outflow is > 156 kcfs (assuming all turbines available and max powerhouse capacity is approx. 109 kcfs).

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							Worker Safety Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1	2	3	4	5	6	7	8	TOTAL	
138.8	41.8	30.1%	16.2	16.2	16.2	16.2	16.1	16.1	97.0	Closed	Closed	4	4	4	4	3	3	22	
145.4	43.8	30.1%	17.0	17.0	16.9	16.9	16.9	16.9	101.6	Closed	Closed	4	4	4	4	4	3	23	
152	45.8	30.1%	17.5	17.5	17.5	17.9	17.9	17.9	106.2	Closed	Closed	4	4	4	4	4	4	24	
156.9	47.7	30.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	5	4	4	4	4	4	25	Max. PH capacity for 30% Spill. ^c
158.9	49.7	31.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	5	5	4	4	4	4	26	
160.8	51.6	32.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	5	5	5	4	4	4	27	
162.8	53.6	32.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	5	5	5	5	4	4	28	
164.8	55.6	33.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	5	5	5	5	5	4	29	
166.7	57.5	34.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	5	5	5	5	5	5	30	
168.7	59.5	35.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	6	5	5	5	5	5	31	
170.7	61.5	36.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	6	6	5	5	5	5	32	
172.6	63.4	36.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	6	6	6	5	5	5	33	
174.6	65.4	37.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	6	6	6	6	5	5	34	
176.5	67.3	38.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	6	6	6	6	6	5	35	
178.5	69.3	38.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	6	6	6	6	6	6	36	
180.4	71.2	39.5%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	7	6	6	6	6	6	37	
182.4	73.2	40.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	7	7	6	6	6	6	38	
184.3	75.1	40.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	7	7	7	6	6	6	39	
186.3	77.1	41.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	7	7	7	7	6	6	40	
188.2	79	42.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	7	7	7	7	7	6	41	
190.2	81	42.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	7	7	7	7	7	7	42	
192.1	82.9	43.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	8	7	7	7	7	7	43	
194.1	84.9	43.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	8	8	7	7	7	7	44	
196.1	86.9	44.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	8	8	8	7	7	7	45	
198	88.8	44.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	8	8	8	8	7	7	46	
200	90.8	45.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	8	8	8	8	8	7	47	
202	92.8	45.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	8	8	8	8	8	8	48	
203.9	94.7	46.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	9	8	8	8	8	8	49	
205.8	96.6	46.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	9	9	8	8	8	8	50	
207.8	98.6	47.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	9	9	9	8	8	8	51	
209.7	100.5	47.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	9	9	9	9	8	8	52	

Outflow (kcfs)	Spill ^a		Turbine Unit Outflow (kcfs) ^b							Worker Safety Spill Patterns - # Gate Stops per Bay									Comments (see footnotes)
	(kcfs)	(%) ^c	1	2	3	4	5	6	TOTAL	1	2	3	4	5	6	7	8	TOTAL	
211.6	102.4	48.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	9	9	9	9	9	8	53	
213.5	104.3	48.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	9	9	9	9	9	9	54	
215.6	106.4	49.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	10	9	9	9	9	9	55	
217.6	108.4	49.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	10	10	9	9	9	9	56	
219.6	110.4	50.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	10	10	10	9	9	9	57	
221.6	112.4	50.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	10	10	10	10	9	9	58	
223.6	114.4	51.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	10	10	10	10	10	9	59	
225.6	116.4	51.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	10	10	10	10	10	10	60	
227.6	118.4	52.0%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	11	10	10	10	10	10	61	
229.6	120.4	52.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	11	11	10	10	10	10	62	
231.7	122.5	52.9%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	11	11	11	10	10	10	63	
233.7	124.5	53.3%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	11	11	11	11	10	10	64	
235.7	126.5	53.7%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	11	11	11	11	11	10	65	
237.7	128.5	54.1%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	11	11	11	11	11	11	66	
239.7	130.5	54.4%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	12	11	11	11	11	11	67	
241.8	132.6	54.8%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	12	12	11	11	11	11	68	
243.8	134.6	55.2%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	12	12	12	11	11	11	69	
245.8	136.6	55.6%	17.5	17.5	17.5	18.9	18.9	18.9	109.2	Closed	Closed	12	12	12	12	11	11	70	